






Safety Light Curtain F3SG-□SR□ Series

User's Manual

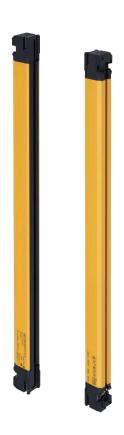

Man. No. Z405-E1-01

Original instructions

Introduction

Thank you for purchasing the F3SG-SR Series Safety Light Curtain (hereafter called the "F3SG-SR", "F3SG-SRA", "F3SG-SRB", or "sensor").

This is the instruction Manual describing the use of F3SG-SR.

Always heed the following points when using the F3SG-SR:

- Be sure to have F3SG-SR be handled by a "Responsible Person" who is well aware of and familiar with the machine to be installed.
- The term "Responsible Person" used in this document means the person qualified, authorized and responsible to secure safety" in each process of the design, installation, operation, maintenance services and disposition of the machine.
- It is assumed that the F3SG-SR will be used properly according to the installation environment, performance and function of the machine. Responsible Person should conduct risk assessment on the machine and determine the suitability of this product before installation.
- Read this document thoroughly to understand and make good use of the descriptions before installing and operating the product.
- Keep this document at the place where the operator can refer to whenever necessary.

Trademarks

- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- Windows, Windows 7, Windows 8, Windows 10, Microsoft .NET Framework, and Surface are either registered trademarks or trademarks of Microsoft Corporation in the USA and other countries.
- Official name of Windows 7 is Microsoft Windows 7 Operating System.
- Official name of Windows 8 is Microsoft Windows 8 Operating System.
- Official name of Windows 10 is Microsoft Windows 10 Operating System.
- USB Type-C™ is a trademark of USB Implementers Forum.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.
- Google and Android are trademarks of Google LLC.
- Xperia is either a registered trademark or a trademark of Sony Mobile Communications Inc.
- SHARP and AQUOS are registered trademarks of Sharp Corporation.
- ASUS is a trademark of ASUSTeK Computer Inc.
- GALAXY S is a registered trademark of Samsung Electronics Co., Ltd.
- · HUAWEI is either a registered trademark or a trademark of HUAWEI TECHNOLOGIES Co., Ltd.
- Mi and XIAOMI are either registered trademarks or trademarks of BEIJING XIAOMI TECHNOLOGY CO., LTD.
- Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

Legislation and Standards

- 1. The F3SG-SR does not receive type approval provided by Article 44-2 of the Industrial Safety and Health Act of Japan. When using the F3SG-SR in Japan as a "safety system for pressing or shearing machines" prescribed in Article 42 of that law, the machine control system must receive type approval.
- 2. The F3SG-SR is electro-sensitive protective equipment (ESPE) in accordance with European Union (EU) Machinery Directive Index Annex V, Item 2.
- 3. EU Declaration of Conformity

OMRON declares that the F3SG-SR is in conformity with the requirements of the following EU Directives: Machinery Directive 2006/42/EC

EMC Directive 2014/30/EU

- 4. Conforming Standards
 - (1) European standards

EN61496-1 (Type 4 and Type 2 ESPE), EN 61496-2 (Type 4 and Type 2 AOPD), EN61508-1 through -4 (SIL 3 for Type 4 and SIL 1 for Type 2),

EN ISO 13849-1:2015 (PL e, Category 4 for Type 4 and PL c, Category 2 for Type 2)

(2) International standards

IEC61496-1 (Type 4 and Type 2 ESPE), IEC61496-2 (Type 4 and Type 2 AOPD), IEC61508-1 through -4 (SIL 3 for Type 4 and SIL 1 for Type 2),

ISO 13849-1:2015 (PL e, Category 4 for Type 4 and PL c, Category 2 for Type 2)

(3) JIS standards

JIS B 9704-1 (Type 4 and Type 2 ESPE), JIS B 9704-2 (Type 4 and Type 2 AOPD)

(4) North American standards

UL61496-1 (Type 4 and Type 2 ESPE), UL61496-2 (Type 4 and Type 2 AOPD), UL508, UL1998, CAN/CSA C22.2 No.14, CAN/CSA C22.2 No.0.8

(5) Chinese standards

GB/T 4584 (Specification of active opto-electronic protective devices for presses)

(Models: F3SG-4SR□□□□□-14/-25 in the case of the ON to OFF response time not exceeding 20 ms max.) The following configurations of the F3SG-SR are compliant with GB/T 4584.

Configurations using the F3SG-SR with detection capability of 14-mm or 25-mm dia. and 20 ms max. of the ON to OFF response time

Detection capability	Protective height	Number of beams	Configuration	Synchronization method	Response Time Adjustment	ON to OFF response time
14-mm dia.	160 to 2000 mm	-	Single	Optical	Normal	18 ms max.
14-mm dia.	160 to 1400 mm	-	Single	Wired	Normal	17 ms max.
25-mm dia.	160 to 2480 mm	-	Single	Optical/Wired	Normal	17 ms max.
Combination of 14-mm and 25-mm dia. in cascade connection	-	255 max.	Cascaded	Optical	Normal	18 ms max.*
Combination of 14-mm and 25-mm dia. in cascade connection	-	140 max.	Cascaded	Wired	Normal	15 ms max.*

^{*} Refer to 1-6-3. Calculation of Response Time of Cascaded Segments for more information on the response time for the F3SG-SR in cascade connection.



The F3SG-SR's with detection capability of 45-mm and 85-mm dia. are not compliant with GB/T 4584.



/[] Refer to 1-5. Ratings and Specifications for more information on the ratings and specifications by model.

5. Third-Party Certifications

- (1) TÜV SÜD
 - EC Type-Examination certificate:

EU Machinery Directive, Type 4 and Type 2 ESPE (EN61496-1), Type 4 and Type 2 AOPD (EN 61496-2)

Certificate:

Type 4 and Type 2 ESPE (EN61496-1), Type 4 and Type 2 AOPD (EN61496-2), EN 61508-1 through - 4 (SIL 3 for Type 4 and SIL 1 for Type 2), EN ISO 13849-1:2015 (PL e, Category 4 for Type 4, and PL c, Category 2 for Type 2)

(2) UL

• UL Listing:

Type 4 and Type 2 ESPE (UL61496-1), Type 4 and Type 2 AOPD (UL61496-2), UL508, UL1998, CAN/CSA C22.2 No.14, CAN/CSA C22.2 No.0.8

- (3) China National Casting and Forging Machines Quality Supervision and Inspection Center
 - · Certificate:

GB/T 4584 (Specification of active opto-electronic protective devices for presses) (Models: F3SG-4SR□□□□□-14/-25 in the case of the ON to OFF response time not exceeding 20 ms max.)

6. Other Standards

The F3SG-SR is designed according to the standards listed below. To make sure that the final system complies with the following standards and regulations, you are asked to design and use it in accordance with all other related standards, laws, and regulations. If you have any questions, consult with specialized organizations such as the body responsible for prescribing and/or enforcing machinery safety regulations in the location where the equipment is to be used.

- European Standards: EN415-4, EN691-1, EN692, EN693, IEC 62046
- U.S. Occupational Safety and Health Standards: OSHA 29 CFR 1910.212
- U.S. Occupational Safety and Health Standards: OSHA 29 CFR 1910.217
- American National Standards: ANSI B11.1 to B11.19
- American National Standards: ANSI/RIA R15.06
- Canadian Standards Association CSA Z142, Z432, Z434
- SEMI Standards SEMI S2
- Japan Ministry of Health, Labour and Welfare "Guidelines for Comprehensive Safety Standards of Machinery", Standard Bureau's Notification No. 0731001 dated July 31, 2007.rms and Conditions Agreement
- Chinese National Standards: GB17120, GB27607
- 7. Meaning of mark according to EU WEEE Directive



Dispose in accordance with applicable regulations.

8. Regions where F39-SGBT can be used

For the regions where the F39-SGBT can be used, refer to the following instruction manuals of the F39-SGBT.

Document Title	No.
F39-SGBT Instruction Sheet	4615743-0
F39-SGBT Regulations and Standards	4615744-8

Terms and Conditions Agreement

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.
 - Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right.
- (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Terms and Conditions Agreement (Software)

1.WARRANTY

- (1) The warranty period for the Software is one year from the date of purchase, unless otherwise specifically agreed.
- (2) If the User discovers defect of the Software (substantial non-conformity with the manual), and return it to OMRON within the above warranty period, OMRON will replace the Software without charge by offering media or download from OMRON's website. And if the User discovers defect of media which is attributable to OMRON and return it to OMRON within the above warranty period, OMRON will replace defective media without charge. If OMRON is unable to replace defective media or correct the Software, the liability of OMRON and the User's remedy shall be limited to the refund of the license fee paid to OMRON for the Software.

2.LIMITATION OF LIABILITY

- (1) THE ABOVE WARRANTY SHALL CONSTITUTE THE USER'S SOLE AND EXCLUSIVE REMEDIES AGAINST OMRON AND THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE. IN NO EVENT, OMRON WILL BE LIABLE FOR ANY LOST PROFITS OR OTHER INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF USE OF THE SOFTWARE.
- (2) OMRON SHALL HAVE NO LIABILITY FOR DEFECT OF THE SOFTWARE BASED ON MODIFICATION OR ALTERNATION TO THE SOFTWARE BY THE USER OR ANY THIRD PARTY. OMRON SHALL NOT BE RESPONSIBLE AND/OR LIABLE FOR ANY LOSS, DAMAGE, OR EXPENSES DIRECTLY OR INDIRECTLY RESULTING FROM THE INFECTION OF OMRON PRODUCTS, ANY SOFTWARE INSTALLED THEREON OR ANY COMPUTER EQUIPMENT, COMPUTER PROGRAMS, NETWORKS, DATABASES OR OTHER PROPRIETARY MATERIAL CONNECTED THERETO BY DISTRIBUTED DENIAL OF SERVICE ATTACK, COMPUTER VIRUSES, OTHER TECHNOLOGICALLY HARMFUL MATERIAL AND/OR UNAUTHORIZED ACCESS.
- (3) OMRON SHALL HAVE NO LIABILITY FOR SOFTWARE DEVELOPED BY THE USER OR ANY THIRD PARTY BASED ON THE SOFTWARE OR ANY CONSEQUENCE THEREOF.

3. APPLICABLE CONDITIONS

USER SHALL NOT USE THE SOFTWARE FOR THE PURPOSE THAT IS NOT PROVIDED IN THE ATTACHED USER MANUAL.

4. CHANGE IN SPECIFICATION

The software specifications and accessories may be changed at any time based on improvements and other reasons.

5. ERRORS AND OMISSIONS

The information in this manual has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

Safety Precautions

■Indications and meanings for safe use

The precautions listed in this document indicated by alert symbols and statements must be followed for the safe use of the F3SG-SR. Failure to follow all precautions and alerts may result in an unsafe use or operation. The following word and symbols are used in this document.

<Meaning of signal words>



Indicates an imminently hazardous situation which, if not avoided, is likely to result in serious injury or may result in death. Additionally there may be severe property damage.

Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

<Meaning of alert symbols>



Indicates prohibited actions.



Indicates mandatory actions.



Indicates the risk of electric shock.

■Alert statements

Users

⚠ WARNING

The F3SG-SR must be installed, configured, and incorporated into a machine control system by a sufficiently trained and qualified person. An unqualified person may not be able to perform these operations properly, which may cause a person to go undetected, resulting in serious injury.



Machines

! WARNING

Do not use this sensor for machines that cannot be stopped quickly by electrical control. For example, do not use it for a pressing machine that uses full-rotation clutch. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



To use the F3SG-SR in PSDI mode (initiation of cyclic operation by a presence sensing device), you must configure an appropriate circuit between the F3SG-SR and the machine. For details about PSDI, refer to OSHA 1910.217, IEC 61496-1, and other relevant standards and regulations.



Installation

⚠ WARNING

Make sure Responsible Person tests the operation of the F3SG-SR and F39-SGIT-IL3 after installation to verify that the F3SG-SR and F39-SGIT-IL3 operate as intended. Make sure to stop the machine until the test is complete. Unintended installation, wiring or function settings may cause a person to go undetected, resulting in serious injury.



Make sure to install the F3SG-SR at the safety distance from the hazardous part of the machine. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



Install a protective structure so that the hazardous part of a machine can only be reached by passing through the sensor's detection zone. If access to the hazardous part by reaching over the detection zone of a vertically mounted F3SG-SR cannot be excluded, the height of the detection zone and the safety distance shall be determined in consideration of such a risk. Install the sensors so that part of the person is always present in the detection zone when working in a machine's hazardous zones. If a person is able to step into the hazardous zone of a machine and remain behind the F3SG-SR's detection zone, configure the system with Restart Interlock function. Failure to do so may result in serious injury due to unexpected startup.



Install the reset switch in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone.



Install the pre-reset switch always in the hazardous zone and where it cannot be activated from outside the hazardous zone.



The F3SG-SR cannot protect a person from an object flying from the hazardous zone. Install protective cover(s) or fence(s).



Install a protective structure to cover the whole blanked zone in order to prevent personnel approach to hazardous part of the machine through the blanked zone.



Detection capability gets larger when Fixed Blanking, Floating Blanking or Reduced Resolution function is used. When these functions are used, the safety distance calculation must be based on the increased detection capability for these functions. Otherwise, the machine may not stop before a person reaches to the hazardous part, resulting in serious injury.



If detection capability may get larger and a human body may pass a detection zone to reach a hazardous source, additional safety protection equipment must be installed such as a safety fence.



A warning zone must not be used for safety applications. Always install your system so that a detection zone should be passed before reaching a hazardous part of the machine. If access to the hazardous part by reaching over the detection zone of a vertically mounted F3SG-SR cannot be excluded, the height of the detection zone and the safety distance shall be determined in consideration of such a risk.



When a warning zone is configured, you must attach labels that indicate a border between normal detection zone and warning zone. Otherwise, the machine may not stop before a person reaches to the hazardous part, resulting in serious injury.



A warning zone must be configured based on a safety distance.



The Muting and Override functions disable the safety functions of the device. Especially setting the Muting Time Limit parameter to infinite may cause the safety functions to be disabled for a long time. Install the F3SG-SR, muting sensor and physical barrier and configure time settings for Muting and Override so that an operator should not enter hazardous zone when the Muting and Override are active.



Install muting sensors so that they can distinguish between the object that is being allowed to pass through the detection zone and a person. If the Muting function is activated by the detection of a person, the machine may not stop operating, resulting in serious injury.



Muting lamps that indicate the state of the Muting and Override functions must be installed where they are clearly visible to workers from all the operating positions.



Use two independent input devices for muting inputs. Failure to do so may cause the MUTING state due to a single muting sensor's failure.



Install the switch that activates the Override and that uses hold-to-run device, such as spring return key switch, in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone. Make sure that nobody is in the hazardous zone before activating the Override function.



Make sure to connect an override cancel switch to the RESET line when using the Override function. Otherwise, the OVERRIDE state may not be released by the override cancel switch, resulting in serious injury.



Install the F3SG-SR so that it is not affected by reflective surfaces. Failure to do so may hinder detection, resulting in serious injury. For an installation distance from reflective surfaces, see 5-1-3. Distance from Reflective Surfaces.



When using more than one set of F3SG-SR's in adjacent areas, the emitter of one F3SG-SR may interfere with the receiver of the other, causing the safety functions to stop working properly. Install, configure and maintain them so that mutual interference does not occur.





To change the response time, calculate the safety distance based on the setting. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



Do not use the F3SG-SR with mirrors in a retro-reflective configuration. Doing so may hinder detection. It is possible to use mirrors to alter the detection zone to a 90-degree angle.



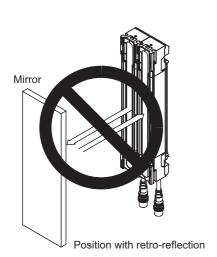

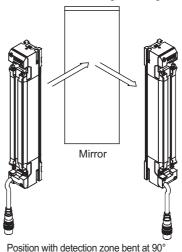

Wiring

⚠ WARNING

When using the PNP output, connect the load between the output and 0 V line. When using the NPN output, connect the load between the output and +24 VDC line. Connecting the load between the output and a different power supply line from the above line will result in a dangerous condition because the operation mode of safety outputs are reversed to "Dark-ON".



When using the PNP output, do not ground +24 VDC line. When using the NPN output, do not ground 0 V line. Otherwise, a ground fault may turn the safety outputs ON, resulting in a failure of stopping the machine.



Configure the system by using the optimal number of safety outputs that satisfy the requirements of the necessary safety category.



Do not connect each line of the F3SG-SR to a DC power supply of higher than 24 VDC+20%. Also, do not connect it to an AC power supply. Failure to do so may result in electric shock.



Make sure to perform wiring while the power supply is OFF.



Do not use the output signal of the auxiliary output or IO-Link output for safety applications. Failure to do so may result in serious injury when the F3SG-SR fails.



For the F3SG-SR to comply with IEC 61496-1 and UL 508, the DC power supply unit must satisfy



all of the following conditions:

- The DC power supply operates within the rated power voltage (24 VDC ± 20%).
- The DC power supply has tolerance against the total rated current of devices if it is connected to multiple devices.
- The DC power supply complies with EMC directives (industrial environment).
- Double or reinforced insulation is applied between the primary and secondary circuits.
- The DC power supply has an automatic recovery type of overcurrent protection characteristics.
- Output holding time is 20 ms or longer.
- The DC power supply satisfies output characteristic requirements for class 2 circuit or limited voltage current circuit defined by UL 508. Refer to 5-4-2. Power Supply Unit.
- The DC power supply complies with laws and regulations, regarding EMC and electrical equipment safety, of the country or region where the F3SG-SR is used. (For example, in EU, the power supply must comply with the EMC Directive and the Low Voltage Directive.)

Double or reinforced insulation from hazardous voltage must be applied to all input and output lines. Failure to do so may result in electric shock.



Extension of the cable must be within a specified length. If it isn't, safety functions may not work properly, resulting in danger.



Settings

. ∴ WARNING

Make sure the Responsible Person tests the operation of the F3SG-SR after setting with the DIP Switch on the F39-SGIT-IL3, Teach-in, SD Manager 3 or End Cap to verify that the F3SG-SR operates as intended. Make sure to stop the machine until the test is complete. Unintended settings may cause a person to go undetected, resulting in serious injury.



When performing the Backup, make sure to set the DIP Switch Position 1 at OFF (Unlock) before turning on the power. If the DIP Switch Position 1 is at ON (Lock), the Restoration is performed, which may case the settings of the F3SG-SR to be overwritten and a person to go undetected, resulting in serious injury.



When performing the Restoration, make sure to set the DIP Switch Position 1 at ON (Lock) before turning on the power. If the DIP Switch Position 1 at OFF (Unlock), the Backup is performed, which may cause the settings of the Intelligent Tap to be overwritten and a person to go undetected, resulting in serious injury.



When the Restoration is performed, if the DIP Switch Position 2 is at ON (DIP Switch Enabled) and settings of the DIP Switch Positions 3 to 8 are different from the backup data in the F39-SGIT-IL3, the settings in the DIP Switch takes priority and are saved in the F3SG-SR. To prevent such an accident, it is recommended that you set the DIP Switch Position 2 at OFF before performing the Restoration when you use the settings backed up from the F3SG-SR or make settings with the SD Manager 3.



When pairing your device with the F39-SGBT Bluetooth® Communication Unit, make sure that the model name and serial number of the sensor to be configured match the information on your device.



Do not use the F39-SGBT Bluetooth® Communication Unit in close proximity to medical equipment such as a pacemaker. Radio wave may affect the operation of such equipment.



Other

MARNING

Perform daily and 6-month inspections for all F3SG-SR as described in *Chapter 7 Checklists*. When using the F3SG-SR in cascade connection, perform inspections for every connected F3SG-SR. Otherwise, the system may fail to work properly, resulting in serious injury.



Do not try to disassemble, repair, or modify the product. Doing so may cause the safety functions to stop working properly.



Do not use the product in environments where flammable or explosive gases are present. Doing so may result in explosion.



Do not use the F3SG-SR in environments where strong electromagnetic field may be produced. Doing so may cause the safety functions to stop working properly.



Precautions for Safe Use

Make sure to observe the following precautions that are necessary for ensuring safe use of the product.

- Do not install, use, or store the product in the following types of environments:
 - Areas exposed to intense interference light, such as direct sunlight
 - Areas with high humidity where condensation is likely to occur
 - Areas where corrosive gases are present
 - Areas exposed to vibration or shock levels higher than in the specification provisions
 - Areas where the pollution degree is harsher than 3, such as outdoor environment
 - Areas where the product may get wet with liquid that can solve adhesive
- Do not drop the product.
- The rated life of the LEDs used for this product is 6 years.
- Loads must satisfy both of the following conditions:
 - Not short-circuited
 - Not used with a current that is higher than the rating
- Make sure that the mounting brackets, fixing screws and connectors are properly secured with the torque recommended in this document.
- Bending radii of cables must be equal to or higher than specified minimum values.
- When replacing the cables with those other than the dedicated cables, use cable connectors that provide a protection grade of IP54 or higher, for the cables..
- To extend a cable length with a cable other than the dedicated cable, use a cable with the same or superior specifications.
 - Refer to 5-4-3-10. Extending Cable Length with Commercially Available Cable
- Be sure to route the input/output lines for the F3SG-SR separate from high-potential power lines or through an exclusive conduit.
- Make sure that foreign material such as water, oil, or dust does not enter the F3SG-SR, F39-SGIT-IL3 or the connector while the end cap and root cables of the F3SG-SR or the cover of the DIP Switch on the F39-SGIT-IL3 is removed.
- Make sure that foreign material such as water, oil, or dust does not enter the F39-SGBT or the connector while the F39-SGBT is not connected to the F39-SGIT-IL3.
- The F39-SGIT-IL3 is dedicated to the F3SG-SR series. Do not use it for equipment other than F3SG-SR series.
- In environments where foreign material such as spatter adheres to the F3SG-SR, attach a cover to protect the F3SG-SR from the spatter.
- Some cutting oils may affect the product. Before using cutting oils, make sure that the oils should not cause deterioration or degradation of the product.
- Do not use the product with degraded protective structure such as swelling and crack in housing and/or sealing components. Otherwise cutting oil or other substance may enter the product, resulting in a risk of corruption or burning.
- Use the F39-JG□C-□ Root-Straight Cables, F39-JGR3K-□ Root-Plug Cables for Extended or F39-JGR3K-□□-□ Conversion Cables and/or F39-JGR3W Cascading Cables for Extended or F39-JGR12L Side-by-side Cascading Cables in environment where the product may be exposed to oil. Using the other cables in such an environment may cause cutting oils or other substances to enter the cables, resulting in a risk of damaging or burning the product.
- Do not connect the Conversion Cable for the following purposes. Failure to do so may result in failure.
 - 1. Connecting with the F39-SGIT-IL3, F39-GCNY2 or F39-GCNY3
 - 2. Connecting between the F3SG-SR's
- Dispose of the product in accordance with the relevant rules and regulations of the country or area where the product is used.

Precautions for Correct Use

Observe the precautions described below to prevent operation failure, malfunctions, or undesirable effects on product performance.

■ Storage conditions and installation environment

- Do not install, use, or store the product in the following types of environments:
- Areas with a temperature or humidity out of the specified range
- Areas submerged in water or subject to rain water
- This is a class A product (for industrial environments). In residential areas it may cause radio interference, in which case the Responsible Person may be required to take adequate measures to reduce interference.

■ Wiring and installation

- Properly perform the wiring after confirming the signal names of all the terminals.
- Do not operate the control system until 3 s or more after turning ON the power of the F3SG-SR.
- When using a commercially available switching regulator power supply, make sure to ground the PE terminal (protective earth terminal).
- Install the emitter and receiver to the same vertical direction.
- Use brackets of specified quantities and locations according to the dimensions. If the brackets described above are not used, ratings and performance cannot be met.
- Do not install the F3SG-SR close to a device that generates high-frequency noise. Otherwise, take sufficient blocking measures.
- Sharing the power supply with other devices may cause the F3SG-SR to be affected by noise or voltage drop. It is recommended that the F3SG-SR use a power supply dedicated for safety components, not shared with other devices.
- Do not change the scan code during normal operation. The F3SG-SR transitions to lockout.
- Do not apply load to the connectors.
- The operating range of the safety light curtain attached with the spatter protection cover is 10% shorter than the rating. Install the product in consideration with the decrease of the operating range.

Cleaning

- Do not use thinner, benzene, or acetone for cleaning. They affect the product's resin parts and paint on the housing.
- Use a soft cloth which is dry or wetted with clean water for cleaning. Do not use solvents.

Object detection

• The F3SG-SR cannot detect transparent and/or translucent objects.

■ Settings

- Do not operate the DIP Switch on the F39-SGIT-IL3 during normal operation of the F3SG-SR. Otherwise, the F3SG-SR enters the LOCKOUT state.
- Do not operate the DIP Switch and Push Switch on the F39-SGIT-IL3 with tools that may damage the product.
- Be sure that the F3SG-SR is in the SETTING state when making a change to the setting.
- For more information on the SETTING state, refer to SETTING State under 2-2-1. Operating States of F3SG-SR and Intelligent Tap.

■ Bluetooth® wireless technology

• The F39-SGBT Bluetooth® Communication Unit uses radio band of 2.4 GHz. The use of the product in close proximity to the following examples of radio interference sources may cause radio interference with the product, resulting in loss of or slow connection. Check the radio wave environment in your site before installing the F39-SGBT.

Examples:

- Medical equipment such as a pacemaker
- RFID premises radio stations (license required) used in factory manufacturing lines
- Specified low power radio station
- Wireless LAN device
- When you use a PC, smartphone or tablet for Bluetooth® communication with the F39-SGBT, the transmission distance may be shorter depending on structures of premises or obstructions. The transmission may be interrupted especially by reinforced concrete.
- Use the product within the line of sight of 10 m.
- Use the product in conjunction with a Bluetooth device. It is not guaranteed that the product can communicate with all Bluetooth devices.

Visual Aids

The following symbols appear in this document to help you locate different types of information.



Indicates important information or advice on a function or operation of the product.



Indicates page numbers or chapter title of related information.

Table of Contents

	Legislation and Standards	i
	Terms and Conditions Agreement	iii
Legislation and Standards Terms and Conditions Agreement Terms and Conditions Agreement (Software) Safety Precautions Precautions for Safe Use Precautions for Correct Use Visual Aids Chapter1 Overview and Specifications 1-1. What is Included 1-2. System Components 1-3. List of Key Features 1-3-1. Model Overview 1-3-2. List of Key Features 1-4. LED Indicators on F3SG-SR 1-5. Ratings and Specifications 1-5-1. F3SG-SR Series 1-5-2. Intelligent Tap 1-5-3. Bluetooth® Communication Unit 1-6. List of Models 1-6-1. List of Models, Current Consumption and Weight 1-6-2. List of Models, Current Consumption and Weight 1-6-2. List of Models, Current Consumption and Weight 1-6-2. Combination of Response Time of Cascaded Segments Chapter2 System Operation and Functions 2-1. Combination of Functions 2-2. Operating States 2-2-1. Operating States of F3SG-SR and Intelligent Tap 2-2-2. Operating States of Intelligent Tap 2-3. Mutual Interference Prevention 2-3-1. Mutual Interference Prevention 2-3-1-2. Wired Synchronization 2-3-1-2. Wired Synchronization 2-4-1. Overview 2-4-2. Setting with Intelligent Tap 2-4-3. Setting with Intelligent Tap	V	
	vi	
	xii	
	Precautions for Correct Use	xiii
	Visual Aids	XV
Cha	apter1 Overview and Specifications	1
	1-1. What is Included	2
	1-2. System Components	3
		5
	1-3-1. Model Overview	5
	1-3-2. List of Key Features	7
	1-4. LED Indicators on F3SG-SR	8
	1-5. Ratings and Specifications	12
	1-5-1. F3SG-SR Series	12
	1-5-2. Intelligent Tap	19
	1-5-3. Bluetooth® Communication Unit	20
	Terms and Conditions Agreement (Software) Safety Precautions Precautions for Safe Use Precautions for Correct Use Visual Aids 1-1. What is Included 1-2. System Components 1-3. List of Key Features 1-3-1. Model Overview 1-3-2. List of Key Features 1-4. LED Indicators on F3SG-SR 1-5. Ratings and Specifications 1-5-1. F3SG-SR Series 1-5-2. Intelligent Tap 1-5-3. Bluetooth® Communication Unit 1-6. List of Models 1-6-1-1. F3SG-SR 1-6-2. List of Models, Current Consumption and Weight 1-6-2-1. F3SG-SR 1-6-3. Calculation of Response Time of Cascaded Segments 1-5-3. Mutual Interference Prevention 2-3-1. Mutual Interference Prevention of F3SG-SR 2-3-1-1. Optical Synchronization 2-3-1-2. Wired Synchronization 2-4-1. Overview 2-4-2. Setting with Intelligent Tap	21
	1-6-1. List of Models and Response Times	21
	1-6-1-1. F3SG-SR	21
	1-6-2. List of Models, Current Consumption and Weight	24
	1-6-2-1. F3SG-SR	24
	1-6-3. Calculation of Response Time of Cascaded Segments	28
Cha	apter2 System Operation and Functions	29
	2-1. Combination of Functions	31
	2-2. Operating States	33
	2-2-1. Operating States of F3SG-SR and Intelligent Tap	33
	2-2-2. Operating States of Intelligent Tap	34
	2-3. Mutual Interference Prevention	35
	2-3-1. Mutual Interference Prevention of F3SG-SR	35
	2-3-1-1. Optical Synchronization	35
	2-3-1-2. Wired Synchronization	38
	2-4. PNP/NPN Selection	39
	2-4-1. Overview	39
	2-4-2. Setting with Intelligent Tap	39
	2-4-3. Setting with SD Manager 3	39

2-5. Self-Test	40
2-5-1. Overview	40
2-5-1-1. Self-Test details	40
2-5-1-2. Waveform of safety outputs	41
2-6. External Test	42
2-6-1. Overview	42
2-6-2. Factory Default Setting	43
2-6-3. Setting with Intelligent Tap	43
2-6-4. Setting with SD Manager 3	43
2-7. Lockout Reset	44
2-8. Interlock	45
2-8-1. Over view	45
2-8-2. Factory Default Setting	47
2-8-3. Setting with Intelligent Tap	47
2-8-4. Setting with SD Manager 3	47
2-9. Pre-Reset	48
2-9-1. Overview	48
2-9-2. Factory Default Setting	49
2-9-3. Setting with Intelligent Tap	50
2-9-4. Setting with SD Manager 3	50
2-10. PSDI	51
2-10-1.Overview	51
2-10-2.Factory Default Setting	53
2-10-3.Setting Change using Intelligent Tap	53
2-10-4.Setting Change using SD Manager 3	53
2-11. External Device Monitoring (EDM)	54
2-11-1.Overview	54
2-11-2.Factory Default Setting	55
2-11-3.Setting with Intelligent Tap	55
2-11-4.Setting with SD Manager 3	56
2-12. Auxiliary Output	57
2-12-1.Overview	57
2-12-2.Factory Default Setting	58
2-12-3.Setting with Intelligent Tap	58
2-12-4.Setting with SD Manager 3	59
2-13. Muting	61
2-13-1.Overview	61
2-13-2.Standard Muting Mode	63
2-13-2-1. Overview	63
2-13-2-2. Installation Example 1 of Standard Muting Mode (Using Two Muting Sensors)	66
2-13-3.Exit-Only Muting Mode	73
2-13-3-1. Overview	73

2-13-3-2. Installation Example of Exit-Only Muting Mode	75
2-13-4.Position Detection Muting Mode	78
2-13-4-1. Overview	78
2-13-4-2. Installation Example of Position Detection Muting Mode	80
2-13-5.Dynamic Muting	82
2-13-6.Factory Default Setting	83
2-13-7.Setting with Intelligent Tap	83
2-13-8.Setting with SD Manager 3	83
2-14. Override	85
2-14-1.Overview	85
2-14-2.Override at Normal Operation	86
2-14-3.Override upon Startup	88
2-14-4.Setting with Intelligent Tap	88
2-14-5.Setting with SD Manager 3	89
2-15. Fixed Blanking	90
2-15-1.Overview	90
2-15-2.Factory Default Setting	94
2-15-3.Setting with Intelligent Tap	95
2-15-4.Setting with SD Manager 3	95
2-16. Floating Blanking	96
2-16-1.Overview	96
2-16-2.Factory Default Setting	100
2-16-3.Setting with Intelligent Tap	100
2-16-4.Setting with SD Manager 3	100
2-17. Reduced Resolution	101
2-17-1.Overview	101
2-17-2.Factory Default Setting	102
2-17-3.Setting with Intelligent Tap	102
2-17-4.Setting with SD Manager 3	103
2-18. Warning Zone	104
2-18-1.Overview	104
2-18-2.Factory Default Setting	107
2-18-3.Setting with Intelligent Tap	107
2-18-4.Setting with SD Manager 3	107
2-19. Setting Zone Adjacency Conditions	108
2-19-1.Zone Adjacency Condition	108
2-19-2.Zone Overlap Condition	108
2-20. Operating Range Selection	110
2-20-1.Overview	110
2-20-2.Factory Default Setting	111
2-20-3.Setting with Intelligent Tap	111
2-20-4.Setting with SD Manager 3	111

2-21. Response Time Adjustment	112
2-21-1.Overview	112
2-21-2.Factory Default Setting	112
2-21-3.Setting with Intelligent Tap	112
2-21-4.Setting with SD Manager 3	112
2-22. Area Beam Indicator (ABI)	113
2-22-1.Overview	113
2-22-2.Factory Default Setting	114
2-22-3.Setting Change using Intelligent Tap	114
2-22-4.Setting Change using SD Manager 3	114
2-23. Designated Beam Output	116
2-23-1.Overview	116
2-23-2.Factory Default Setting	116
2-23-3.Setting with Intelligent Tap	116
2-23-4.Setting with SD Manager 3	117
2-24. Stable Light Threshold Adjustment	118
2-24-1.Overview	118
2-24-2.Factory Default Setting	118
2-24-3.Setting Change using Intelligent Tap	118
2-24-4.Setting Change using SD Manager 3	118
2-25. Incident Light/Ambient Light	119
2-25-1.Incident Light Level Information	119
2-25-1-1. Overview	119
2-25-1-2. Setting with SD Manager 3	119
2-25-2.Ambient Light Level Information	119
2-25-2-1. Overview	119
2-25-2-2. Setting with SD Manager 3	119
2-26. Maintenance Information	120
2-26-1.Overview	120
2-26-2.Error Log	120
2-26-3.Warning Log	120
2-26-4.Power-ON Time	121
2-26-5.Load Switching Frequency	121
2-26-6.Muting Statistics Information	122
2-26-7.Intelligent Tap Log	122
2-27. Operating Status Monitoring	123
2-27-1.Overview	123
2-27-2.Readout Information	123
2-28. Instantaneous Block Detection	124
2-28-1.Overview	124
2-28-2.Factory Default Setting	124
2-28-3.Setting Change using Intelligent Tap	124

2-28-4.Setting Change using SD Manager 3	
2-29. Setting Recovery	
2-30. Backup/Restoration	
2-30-1.Overview	
2-31. IO-Link	
er3 Setting with Intelligent Tap	
3-1. List of Functions Configurable by Intelligent Tap and Initial Setup Method	
3-1-1. Functions Configurable by Intelligent Tap	
3-1-2. Initial Setup Method after Purchase	
3-2. Connection	
3-3. Wiring	
3-4. LED Indicators on Intelligent Tap	
3-5. DIP Switch on Intelligent Tap	
3-6. Backup/Restoration	
3-6-1. Description of Functions	
3-6-2. Performing Backup	
3-6-3. Performing Restoration	
3-6-4. Various Usage of Backup and Restoration	
3-6-4-1. Plug and Work	
3-6-4-2. Copy and Paste of Sensor Settings	
3-6-4-3. Changing F3SG-SR Configuration to Connect to Intelligent Tap	
3-6-4-4. Changing F3SG-SR's Settings with Intelligent Tap DIP Switch	
3-7. Teach-in (Fix Blanking / Floating Blanking)	
3-7-1. Setting Fixed Blanking by Teach-in	
3-7-2. Setting Floating Blanking by Teach-in	
3-8. Connection to SD Manager 3	
3-9. IO-Link	
3-9-1. Functional Description	
3-9-2. Communication Specifications	
3-9-3. Process Data	
3-9-4. Service Data	
er4 Setting with SD Manager 3	
4-1. Overview and Specifications	
4-1-1. Overview of Configuration Tool	
4-1-2. System Environment	
4-1-2-1. PC Environment	
4-1-2-2. Smartphone/Tablet Environment	
4-1-3. Connection Method to Use Configuration Tools	

4-1-3-1. Connection Patterns of F3SG-SR, Intelligent Tap, and Each Device	162
4-1-3-2. Connection Procedure When Using USB Connector	164
4-1-3-3. Connection Procedure When Using Bluetooth® Communication Unit (F39-SGBT)	165
4-1-4. SETTING State of F3SG-SR with SD Manager 3 Connected	169
4-2. Basic Operation of SD Manager 3	170
4-2-1. How to Install/Uninstall SD Manager 3	170
4-2-1-1. Downloading SD Manager 3	170
4-2-1-2. Installing SD Manager 3	170
4-2-1-3. How to Uninstall SD Manager 3	172
4-2-1-4. Installing Driver of Intelligent Tap	173
4-2-2. How to Update SD Manager 3	173
4-2-3. Getting Started, Description on Top Page and Each Button, and Shutting Down	174
4-2-3-1. Getting Started	174
4-2-3-2. Description on Top Page and Each Button	175
4-2-3-3. Displaying/Hiding Docked Windows	177
4-2-3-4. Shutting Down	177
4-2-4. Starting SD Manager 3 Offline	178
4-2-4-1. Creating New Configuration File	178
4-2-4-2. Reading Configuration from PC	179
4-2-4-3. Saving New Configuration File to PC	179
4-2-4-4. Switching Offline to Online	179
4-2-5. Logging In/Logging Out	180
4-2-5-1. Logging In	180
4-2-5-2. Logging Out	182
4-2-6. Password Protection	183
4-2-6-1. Access Restriction	183
4-2-6-2. Changing Password	183
4-2-6-3. Forgot the Password?	183
4-2-6-4. Confirming Lot No. of Intelligent Tap	183
4-2-6-5. Resetting the Initial Password to "0000"	184
4-2-7. Reading/Saving/Writing Configuration of Intelligent Tap	185
4-2-7-1. Reading Configuration from Intelligent Tap	185
4-2-7-2. Saving Configuration of Intelligent Tap in PC	185
4-2-7-3. Writing Configuration into Intelligent Tap	186
4-2-8. Viewing Current Configuration	188
4-2-9. Safety Distance Calculation	189
4-3. Changing Settings with SD Manager 3	190
4-3-1. Preparing to Change Settings	190
4-3-2. I/O Settings	191
4-3-2-1. Interlock/External Device Monitoring (EDM)/PSDI	191
4-3-2-2. Reset Input Time	192
4-3-2-3. Teach-in Input	193

4-3-2-4. External Test Input	194
4-3-3. Auxiliary Output/Lamp Setting	195
4-3-3-1. Auxiliary Output	195
4-3-3-2. Designated Beam Output	197
4-3-3-3. Area Beam Indicator (ABI)	200
4-3-4. Safety Function Setting	202
4-3-4-1. Fixed Blanking	202
4-3-4-2. Floating Blanking	205
4-3-4-3. Muting/Override	207
4-3-4-4. Pre-Reset	212
4-3-4-5. Reduced Resolution	213
4-3-4-6. Warning Zone	214
4-3-4-7. PSDI	216
4-3-5. Operating State Setting	217
4-3-5-1. Response Time Change	217
4-3-5-2. Stable Light Threshold Adjustment	218
4-3-5-3. Operating Range Selection	219
4-3-6. Setting Initialization	220
4-4. Monitoring with SD Manager 3	221
4-4-1. Monitoring	221
4-4-1-1. Incident Light/Ambient Light	221
4-4-1-2. Operating Status Monitoring	222
4-4-2. Muting Statistics Information	224
4-4-3. Maintenance Information	228
4-4-3-1. Error Log Information	228
4-4-3-2. Warning Log	230
4-4-3-3. Intelligent Tap Log	231
4-4-3-4. Power-On Time/Load Switching Frequency	232
4-4-3-5. Instantaneous Block Detection Information	234
4-5. Basic Operation of SD Manager 3 Mobile APP	235
4-5-1. How to Install/Uninstall SD Manager 3 Mobile APP	235
4-5-1-1. Installing SD Manager 3 Mobile APP	235
4-5-1-2. Uninstalling SD Manager 3 Mobile APP	235
4-5-2. How to Update SD Manager 3 Mobile APP	235
4-5-3. Pairing (Connection Verification)	235
4-5-4. Getting Started, Main Screen, Version Confirmation, and Shutting Down	237
4-5-4-1. Getting Started	237
4-5-4-2. Main Screen	239
4-5-4-3. Version Information	240
4-5-4-4. Shutting Down	241
4-5-5. Monitoring with SD Manager 3	242
4-5-5-1. Incident/Ambient Light Level Monitoring	242

	4-5-5-2. Status Monitoring Information	243
	4-5-5-3. Maintenance Information	245
Chapter5	Wiring and Installation	247
5-1	. Installation Considerations	250
	5-1-1. Detection Zone and Approach	250
- 5	5-1-2. Safety Distance	252
_	5-1-2-1. Safety Distance Formulas according to ISO 13855/EN ISO 13855	252
	5-1-2-2. Safety Distance Formulas according to ANSI B11.19	256
5	5-1-3. Distance from Reflective Surfaces	257
_	5-1-3-1. F3SG-SR (Type 2 ESPE)	257
5	5-1-4. Mutual Interference Prevention	258
5-2	. Dimensions	259
5	5-2-1. F3SG-SR Series	259
	5-2-1-1. Mounted with Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)	259
	5-2-1-2. Mounted with Adjustable Side-Mount Brackets (Intermediate Brackets) (F39	9-LSGA) 261
	5-2-1-3. Mounted with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-and Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)	LSGTB-SJ) 263
	5-2-1-4. Mounted with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-and Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)	LSGTB-SJ) 265
5	5-2-2. Bracket	267
_	5-2-2-1. Side-Mount Bracket (Intermediate Bracket) (F39-LSGF)	267
	5-2-2. Adjustable Side-Mount Bracket (Intermediate Bracket) (F39-LSGA, sold sep	parately) 267
	5-2-2-3. Adjustable Top/Bottom Bracket (F3SJ, F3SN Adapter) (F39-LSGTB-SJ, solo	d separately) 267
	5-2-2-4. Adjustable Top/Bottom Bracket (F3SG-RA/RE Adapter) (F39-LSGTB-RE, sly)	old separate- 268
	5-2-2-5. Adjustable Top/Bottom Bracket (MS4800, F3SR Adapter) (F39-LSGTB-MS, rately)	sold sepa- 268
5	5-2-3. Intelligent Tap	269
5	5-2-4. Intelligent Tap Bracket	269
5	5-2-5. Bluetooth® Communication Unit	271
- 5	5-2-6. Spatter Protection Cover	272
5-3	. Mounting	273
- 5	5-3-1. Mounting Method	273
- 5	5-3-2. Number of Brackets Required	273
5	5-3-3. Proper Mounting	274
_	5-3-3-1. Proper Mounting Orientation	274
5	5-3-4. Mounting Procedure	276
_	5-3-4-1. Mounting with Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)	276
	5-3-4-2. Mounting with Adjustable Side-Mount Brackets (Intermediate Brackets) (F39)	9-LSGA) 277

and Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)	LSG1B-SJ) 280
5-3-4-4. Mounting with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-and Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)	LSGTB-SJ) 284
5-3-5. Beam Alignment Procedure	289
5-4. Wiring	290
5-4-1. Wiring Precautions	290
5-4-2. Power Supply Unit	291
5-4-3. Cable Connections	292
5-4-3-1. Root-Straight Cable	292
5-4-3-2. Root-Plug Cable for Extended	293
5-4-3-3. Extended Socket-Straight Cable	294
5-4-3-4. Extended Plug-Socket Cable	295
5-4-3-5. Cascading Cable for Extended	297
5-4-3-6. Side-by-side Cascading Cable	298
5-4-3-7. F3SJ-B/A Conversion Cable	299
5-4-3-8. F3SG-RE Conversion Cable	301
5-4-3-9. MS48 Conversion Cable	302
5-4-3-10. Extending Cable Length with Commercially Available Cable	303
5-4-3-11. Reduced Wiring Connector System with Y-Joint Plug/Socket Connector	304
5-4-3-12. Easy Wiring Connector System with Reset Switch Connector	305
5-4-4. Functional Earth Connection	307
5-5. Cascade Connection	308
5-5-1. Overview	308
5-5-2. Connection Procedure	310
Chapter6 Input/Output Circuit and Applications	313
6-1. Input/Output Circuit	314
6-1-1. Entire Circuit Diagram	314
6-1-2. Input Circuit Diagram by Function	315
6-2. Wiring Examples (for F3SG-SR)	316
6-2-1. Non-Muting System Wiring Examples	316
6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused	316
6-2-1-2. Auto Reset Mode with Wired Synchronization and EDM Unused	317
6-2-1-3. Auto Reset Mode with Optical Synchronization and EDM Used	318
6-2-1-4. Manual Reset Mode with EDM	319
6-2-1-5. Manual Reset Mode with EDM and Y-Joint Plug/Socket Connector	320
6-2-1-6. Manual Reset Mode with Intelligent Tap	321
6-2-1-7. Manual Reset Mode with Reset Switch Connector	322
6-2-1-8. Pre-Reset Mode with EDM Unused	323
6-2-1-9. Pre-Reset Mode with Reset Switch Connector	324
6-2-1-10. Single Break with EDM and Intelligent Tap	325

	6-2-1-11. Double Break with EDM	326
	6-2-2. Muting System Wiring Examples	327
	6-2-2-1. Standard Muting Mode/Exit-Only Muting Mode	327
	6-2-2-2. Standard Muting Mode/Exit-Only Muting Mode with Y-Joint Plug	328
6-2-2-1. Standard Muting Mode/Exit-Only Muting Mode 6-2-2-2. Standard Muting Mode/Exit-Only Muting Mode with Y-Joint Plug 6-2-2-3. Standard Muting Mode/Exit-Only Muting Mode with Intelligent Tap 6-2-2-4. Standard Muting Mode/Exit-Only Muting Mode with Reset Switch Connector 6-3. Connectable Safety Control Units T-1. Pre-Operation Checklists 7-1-1. Pre-Operation Checklists 7-1-1. Checklists 7-1-1. Operation Check Before Power Is Turned ON 7-1-1-3. Operation Check While the Machine Is Stopped 7-1-1-4. Checkligt that Hazardous Parts Stop While the Machine Operates 7-2. Maintenance Checklists 7-2-1. Checklists 7-2-1. Inspection at Startup and When Changing Operators 7-2-1-2. Checking that Hazardous Parts Stop While the Machine Operates 7-2-1-3. Items to Inspect Every 6 Months or When Machine Settings Are Changed Chapter8 Appendix 8-1. Troubleshooting 8-1-1. LED Indicators (F3SG-SR) 8-1-2-1. Description 8-1-2-2. Troubleshooting 8-1-3. Muring 8-1-3. Numing 8-1-3. Numing 8-1-3. Numing 8-1-3. Numing 8-1-3. Sequence Error Indication 8-1-3-5. PSDI Sequence Error Indication 8-1-3-5. PSDI Sequence Error Indication 8-1-4. Troubleshooting for Intelligent Tap 8-1-5. Troubleshooting for Intelligent Tap 8-1-5. Troubleshooting for Bluetooth® Communication Unit 8-2. Optional Accessories (Sold Separately) 8-3. Glossary	329	
	6-2-2. Muting System Wiring Examples 6-2-2. Standard Muting Mode/Exit-Only Muting Mode with Y-Joint Plug 6-2-2-3. Standard Muting Mode/Exit-Only Muting Mode with Y-Joint Plug 6-2-2-3. Standard Muting Mode/Exit-Only Muting Mode with Intelligent Tap 6-2-2-4. Standard Muting Mode/Exit-Only Muting Mode with Reset Switch Connector 6-3. Connectable Safety Control Units Chapter7 Checklists 7-1-1. Checklists 7-1-1. Checklists 7-1-1. Installation Condition Check 7-1-1. Operation Check While the Machine Is Stopped 7-1-1-3. Operation Check While the Machine Is Stopped 7-1-1-4. Checking that Hazardous Parts Stop While the Machine Operates 7-2-1. Checklists 7-2-1. Checklists 7-2-1. Inspection at Startup and When Changing Operators 7-2-1-2. Checking that Hazardous Parts Stop While the Machine Operates 7-2-1-3. Items to Inspect Every 6 Months or When Machine Settings Are Changed Chapter8 Appendix 8-1. Troubleshooting 8-1-1. LED Indicators (F3SG-SR) 8-1-2. LOCKOUT State 8-1-2-1. Description 8-1-2-2. Troubleshooting 8-1-3. Warning 8-1-3. Warning 8-1-3. Wurning 8-1-3-3. Muting Sequence Error Indication 8-1-3-4. Interlock Sequence Error Indication 8-1-3-5. PSDI Sequence Error Indication 8-1-3-5. PSDI Sequence Error Indication 8-1-4. Troubleshooting for Intelligent Tap 8-1-5. Troubleshooting for Bluetooth® Communication Unit 8-2. Optional Accessories (Sold Separately)	330
	6-3. Connectable Safety Control Units	331
Chap	oter7 Checklists	333
	7-1. Pre-Operation Checklists	334
	7-1-1. Checklists	334
	7-1-1. Installation Condition Check	334
	7-1-1-2. Wiring Check Before Power Is Turned ON	334
	7-1-1-3. Operation Check While the Machine Is Stopped	335
	7-1-1-4. Checking that Hazardous Parts Stop While the Machine Operates	336
6-2-2. Muting Sy 6-2-2-1. Stand 6-2-2-3. Stand 6-2-2-4. Stand 6-2-2-4. Stand 6-2-2-4. Stand 6-2-1. Checklists 7-1. Pre-Operation 7-1-1. Checklists 7-1-1-1. Instal 7-1-1-2. Wiring 7-1-1-3. Opera 7-1-1-4. Chec 7-2. Maintenance C 7-2-1. Checklists 7-2-1-1. Insperation 7-2-1-2. Checklists 7-2-1-3. Items Chapter8 Appendix 8-1. Troubleshooting 8-1-2-1. Description 8-1-3. Warning 8-1-3-1. Description 8-1-3-2. Troubleshooting 8-1-3-3. Muting 8-1-3-4. Interference and services are services servic	7-2. Maintenance Checklists	337
	7-2-1. Checklists	337
	7-2-1-1. Inspection at Startup and When Changing Operators	337
	7-2-1-2. Checking that Hazardous Parts Stop While the Machine Operates	338
	7-2-1-3. Items to Inspect Every 6 Months or When Machine Settings Are Changed	338
Chap	oter8 Appendix	341
	8-1. Troubleshooting	342
	8-1-1. LED Indicators (F3SG-SR)	342
	8-1-2. LOCKOUT State	343
	8-1-2-1. Description	343
	8-1-2-2. Troubleshooting	344
	8-1-3. Warning	349
	8-1-3-1. Description	349
	8-1-3-2. Troubleshooting	349
	8-1-3-3. Muting Sequence Error Indication	350
	8-1-3-4. Interlock Sequence Error Indication	351
	8-1-3-5. PSDI Sequence Error Indication	352
	8-1-4. Troubleshooting for Intelligent Tap	353
	8-1-5. Troubleshooting for Bluetooth® Communication Unit	356
	8-2. Optional Accessories (Sold Separately)	357
	8-3. Glossary	365
	8-4. Revision History	369

Chapter 1 Overview and Specifications

1-1. What is Included					
1-2	2. System Components	3			
1-3. List of Key Features					
	1-3-1. Model Overview	5			
	1-3-2. List of Key Features	7			
1-4	4. LED Indicators on F3SG-SR	8			
1-5. Ratings and Specifications					
	1-5-1. F3SG-SR Series	12			
	1-5-2. Intelligent Tap	19			
	1-5-3. Bluetooth® Communication Unit	20			
1-6. List of Models					
	1-6-1. List of Models and Response Times	21			
	1-6-2. List of Models, Current Consumption and Weight	24			
	1-6-3. Calculation of Response Time of Cascaded Segments	28			

1-1. What is Included

Before use, confirm that the items below are included with the product.

If you find that an item is missing, please contact your Omron representative.


■F3SG-SR series


- Emitter × 1
- Receiver × 1
- Side-Mount Bracket (Intermediate Bracket) (F39-LSGF)*
- End Cap (for switching Scan Code Selection function) x 2 (End cap for Scan Code B is included.)
- Instruction Sheet x 7
- Quick Installation Manual x 1
- Troubleshooting Guide Sticker x 2
- Warning Zone Label x 1
- * The quantity varies depending on the protective height.

Protective height of 0160 to 1440: 2 sets (total 4 pcs), 1520 to 2480: 3 sets (total 6 pcs)


This section describes the system components and part names of the F3SG-SR system.

■ F3SG-SR series

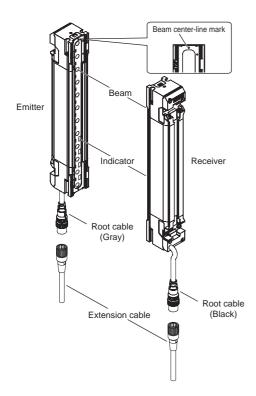

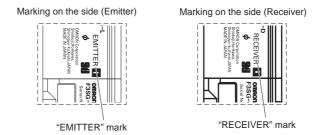



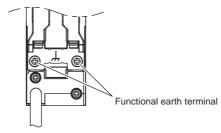



- The marking "EMITTER" is on the side of emitter. And the marking "RECEIVER" is on the side of receiver.
- The color of functional earth terminal screws is silver for the emitter and black for the receiver.

Appearance	Model name	Description
Emitter and receiver	F3SG-4SR□□□□□-□-□	Select a model name based on the required protective height and ESPE type. The model name can be understood as follows: F3SG-□SR□□□□□-□-□-□ 1 2 3 4 5 6 1. ESPE type (4: Type 4 or 2: Type 2) 2. Function (A: Advanced or B: Standard) 3. Protective height (mm) 4. Detection capability (14: 14 mm, 25: 25 mm, 45: 45 mm or 85: 85 mm) 5. L: emitter, D: receiver or blank: emitter and receiver 6. F: Flexible height model or blank

CHECK

To distinguish between the emitter and receiver, find the word "EMITTER" or "Receiver" on the side of the F3SG-SR.

1-3. List of Key Features

1-3-1. Model Overview

The F3SG-SR series is a safety light curtain intended to be used for humans protection.

■ F3SG-SR Series


The F3SG-SR series has two sub-series, F3SG-SRA and F3SG-SRB. Both are safety light curtains comprising an emitter and a receiver.


The F3SG-SRA is a full-featured model having advanced functionality. The F3SG-SRB is a standard model, yet it supports wide variety of functionality. The F3SG-SR series is suitable for finger, arm, leg and body detection.


■ Intelligent Tap (F39-SGIT-IL3, sold separately)

The following setting functions are available by connecting the Intelligent Tap to the F3SG-SR.

- (1) Setting with DIP Switch *1
- (2) Setting with SD Manager 3 by connecting the Intelligent Tap to a PC *1
- (3) Wireless communication with PC, smartphone or tablet by connecting the Intelligent Tap and Bluetooth® Communication Unit (F39-SGBT, sold separately)
- (4) IO-Link communication by connecting the Intelligent Tap and IO-Link Master
- (5) Backup and Restoration of settings *2
- *1. Refer to / 1=3-2. List of Key Features for more information on configurable functions.
- *2. Refer to /[] Chapter 3 Setting with Intelligent Tap for more information on the Backup and Restoration.

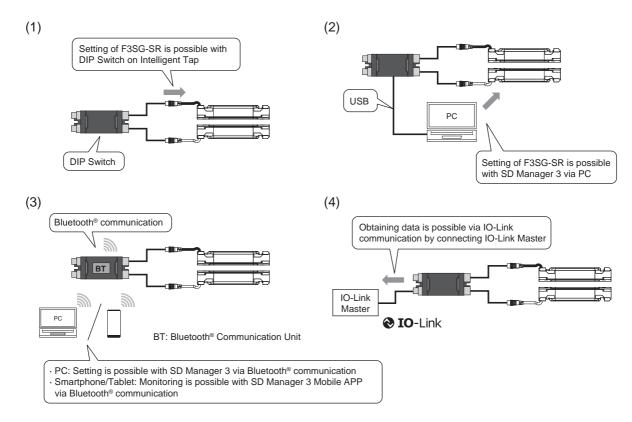

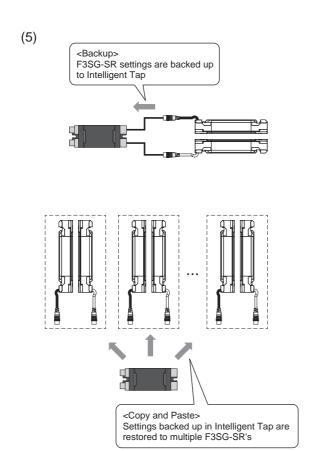

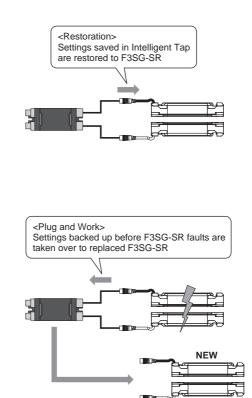

1-3-2. List of Key Features

The F3SG-SR has the following features. Some of the features are available or configurable by the Intelligent Tap (F39-SGIT-IL3) or the SD Manager 3 (PC configuration tool). Sensor status monitoring is available by the SD Manager 3 Mobile APP, which is the configuration tool for smartphones or tablets.

	Availability		Setting/Monitoring by					
Feature			Sensor		Intelligent Tap	PC / Smartphone / Tablet	Factory default setting	Page
	F3SG- SRA	F3SG- SRB	Wiring	End Cap	DIP Switch (*1)	SD Manager 3 SD Manager 3 Mobile APP (*2)		
Mutual Interference Prevention	Х	Х	X *3	X *4	-	-	Code A *4	p.35
PNP/NPN Selection	Х	Х	Х	-	-	-	-	p.39
External Test	Х	Х	Х	-	-	-	-	p.42
Interlock	Х	Х	-	=	Х	Х	Auto Reset	p.45
Pre-Reset	Х	Х	-	-	Х	Х	Disabled	p.48
PSDI	Х	Х	-	=	-	Х	Disabled	p.51
External Device Monitoring (EDM)	х	х	-	-	Х	x	Disabled	p.54
Auxiliary Output	х	х	-	-	-	Х	Safety output information (Inverted signal output: Enabled)	p.57
Muting	х	х	-	-	-	x	Enabled (Standard Muting)	p.61
Override	Х	Х	-	-	-	Х	Enabled	p.85
Fixed Blanking	Х	Х	-	-	Х	Х	Disabled	p.90
Floating Blanking	Х	Х	-	-	Х	Х	Disabled	p.96
Reduced Resolution	Х	Х	-	-	-	Х	Disabled	p.101
Warning Zone	Х	Х	-	=	-	Х	Disabled	p.104
Operating Range Selection	Х	Х	Х	-	Х	Х	Long *5	p.110
Response Time Adjustment	Х	Х	-	-	-	Х	Normal	p.112
Area Beam Indicator (ABI)	х	-	-	-	-	x	Block/Unblock information	p.113
Designated Beam Output	Х	Х	-	-	-	Х	Disabled	p.116
Stable Light Threshold Adjustment	х	х	-	-	-	×	170%	p.118
Light Level Monitoring	Х	Х	-	-	-	Х	-	p.119
Maintenance Information	Х	Х	-	-	-	Х	-	p.120
Operating Status Monitoring	Х	Х	-	-	-	Х	-	p.123
Instantaneous Block Detection Information	Х	-	-	-	-	Х	Enabled	p.124

^{*1.} DIP Switch is on the F39-SGIT-IL3 Intelligent Tap.

^{*2.} The F39-SGIT-IL3 Intelligent Tap is necessary to use the SD Manager 3 or SD Manager 3 Mobile APP.

^{*3.} Mutual interference can be prevented by Optical Synchronization or Wired Synchronization.


^{*4.} Mutual interference can be prevented by Scan Code Selection.

^{*5.} In the case of setting by DIP Switch or SD Manager 3. For the setting by wiring, it is selectable from the Long and Short modes.


1-4. LED Indicators on F3SG-SR

■ F3SG-SR Series

<Emitter> F3SG-□SR□□□□□-14

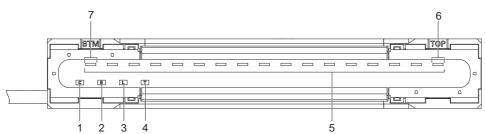


F3SG-USRUUUUU-25/-45/-85

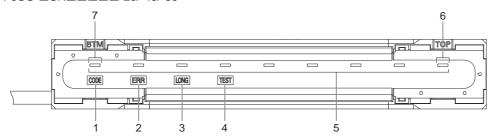


<Receiver>

F3SG-□SR□□□□□-14

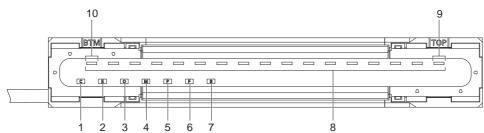

F3SG-USRUUUUU-25/-45/-85

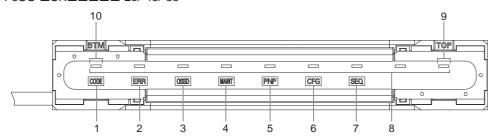

Shown below are indication statuses of the LED indicators on the F3SG-SR when you purchased.

■ Emitter (F3SG-SR)

Location	Indicator	Name	Color	Illuminated	Blinking	F3SG- SRA	F3SG- SRB	
1	C or CODE	Scan code	Green Orange OFF	Code A is selected Code B is selected Automatic interference prevention by wired synchronization being performed	-	x	Х	
2	E or ERR	Lockout	Red	LOCKOUT state. The indicator is illuminated in the emitter of another sensor segment than that having a lockout error (when in cascade connection or between the emitter and receiver in the Wired Synchronization)	icator is illuminated in emitter of another emitter of another segment than that ring a lockout error segment in cascade enection or between the ed Synchronization) illuminated in the emitter of a sensor segment having a lockout error segment havin		Х	
3	or LONG	Operating range	Green	Long Mode is selected Short Mode is selected	LOCKOUT state due to Operating range selection setting error	Х	х	
4	T or TEST	Test	Yellow	-	External Test is being performed	X	Х	
				Green	The target beams of the ABI are unblocked and the safety outputs are turned ON	MUTING or OVERRIDE state. In the MUTING state, only the ABI indicators in the muting zone are blinking. Or the target beams of the ABI are blocked instantaneously		
5	Area Beam Indicator (ABI) (*1)		Orange	Incident light level of the target beams of the ABI is 170% (factory default setting (*2)) or less of ON-threshold (for 5 to 10 s)	Incident light level of the target beams of the ABI is 170% (factory default setting (*2)) or less of ON threshold 5 to 10 s after illuminated when incident light level of the target beams of the ABI is 170% (factory default setting (*2)) or less of ON threshold. Or one muting input becomes the ON state and the MUTING state has not been started yet, or one muting input becomes the OFF state and the other is not in the OFF state yet. (*3)	x	-	
			Red	The target beams of the ABI are blocked	LOCKOUT state due to Cap error or Other sensor error (*4), or LOCKOUT state due to DIP Switch setting error (*5 *6)			
			OFF	The target beams of the ABI are unblocked (The ABI then will be illuminated in green when the safety outputs are turned ON.)	-			
6	ТОР	Top-beam- state (*1)	Blue	The top beam is unblocked	MUTING/OVERRIDE state, or LOCKOUT state due to Cap error or Other sensor error	-	Х	
7	втм	Bottom- beam- state (*1)	Blue	The bottom beam is unblocked	MUTING/OVERRIDE, or LOCKOUT state due to DIP Switch setting error (*6)	-	Х	

^{*1.} The indicator of the emitter is illuminated only in the case the Wired Synchronization is enabled and is off in the case the Optical Synchronization is enabled.

^{*2.} Configurable by SD Manager 3.

^{*3.} This is the case for the Standard Muting mode. For other muting modes, refer to "2-13. Muting".

^{*4.} The Area Beam Indicator closer to the "TOP" mark on the F3SG-SR blinks.

^{*5.} The Area Beam Indicator closer to the "BTM" mark on the F3SG-SR blinks.

^{*6.} DIP switches is on the Intelligent Tap.

■ Receiver (F3SG-SR)

Location	Indicator	Name	Color	Illuminated	Blinking	F3SG- SRA	F3SG- SRB
			Green	Code A is selected			
	C		Orange	Code B is selected			
1	or	Scan code		Automatic interference	_	×	Х
		Cour occo	OFF	prevention by wired			
	CODE		011	synchronization being			
				performed			
				LOCKOUT state. The	LOCKOUT state. The indicator is		
				indicator is illuminated in	illuminated in the receiver of a sensor		
				the receiver of another sensor segment than that	segment having a lockout error		
	E			having a lockout error			
2	or	Lockout	Red	(when in cascade		X	X
	ERR			connection or between			
				the emitter and receiver			
				in the Wired			
				Synchronization)			
			Green	Safety outputs are in ON	_	×	Х
	0	ONIOFE		state			
3	or	ON/OFF	D. d	Safety outputs are in	LOCKOUT state due to Safety output	\ \ \	V
	OSSD		Red	OFF state	error, or error due to abnormal power supply or noise	X	Х
				LOCKOUT state due to a	LOCKOUT state due to a		
			recoverable error (When	replacement-recommended error			
				in cascade connection,	(When in cascade connection, the		.,
			Red	the indicator of only the	indicator of only the sensor segment	X	Х
				sensor segment having	having the error blinks)		
	M			the error is illuminated)			
4	or	Maintenance		Safety outputs are	Intelligent Tap is in the LOCKOUT		
	MAINT	MAINT		instantaneously turned	state		
			Orange	OFF due to ambient light, vibration or noise.		X	Х
				Or sequence error in			
				Muting, Pre-Reset or			
				PSDI			
			Cross	PNP is configured	Polarity of PNP is changed to NPN, or		
	Р	PNP/NPN	Green		vice versa, during operation, and		.,
5	or	mode		NPN is configured	internal circuit is defective	X	X
	PNP		OFF				
				Fixed or Floating	TEACH-IN mode, zone measurement		
				Blanking, Reduced	being performed by Dynamic Muting,		
				Resolution, Warning Zone	or LOCKOUT state due to Blanking		
	F			or Slow mode of	monitoring error, Configuration error		
6	6 or CFG	Configuration	Green	Response Time	or Parameter error	X	X
		CFG		Adjustment is enabled.			
				Or after the Muting zone is determined by the			
				Dynamic Muting function.			
				INTERLOCK state	Sequence or sequence error in		
	s				Muting, Pre-Reset or PSDI (*1) or		
7	or	Sequence	Yellow		Teach-in error	X	Х
	SEQ						

Location	Indicator	Name	Color	Illuminated	Blinking	F3SG- SRA	F3SG- SRB
			Green	The target beams of the ABI are unblocked and the safety outputs are turned ON	MUTING or OVERRIDE state. In the MUTING state, only the ABI indicators in the muting zone are blinking. Or the target beams of the ABI are blocked instantaneously		
8	-	Area Beam Indicator (ABI)	Orange	Incident light level of the target beams of the ABI is 170% (factory default setting (*2)) or less of ON-threshold (for 5 to 10 s)	Incident light level of the target beams of the ABI is 170% (factory default setting (*2)) or less of ON threshold 5 to 10 s after illuminated when incident light level of the target beams of the ABI is 170% (factory default setting (*2)) or less of ON threshold. Or one muting input becomes the ON state and the MUTING state has not been started yet, or one muting input becomes the OFF state and the other is not in the OFF state yet. (*3)	x	-
			Red	The target beams of the ABI are blocked	LOCKOUT state due to Cap error or Other sensor error (*4), or LOCKOUT state due to DIP Switch setting error (*5 *6)		
		OFF	The target beams of the ABI are unblocked (The ABI then will be illuminated in green when the safety outputs are turned ON.)	-			
9	ТОР	Top-beam- state	Blue	The top beam is unblocked	MUTING/OVERRIDE state, or LOCKOUT state due to Cap error or Other sensor error	-	X
10	ВТМ	Bottom- beam- state	Blue	The bottom beam is unblocked	MUTING/OVERRIDE state, or LOCKOUT state due to DIP Switch setting error (*6)	-	х

^{*1.} Refer to 8-1. Troubleshooting for more information on blinking patterns.

In the SETTING state to make settings with the SD Manager 3, the TEST, LONG and CODE indicators on the emitter and the CFG, PNP and CODE indicators on the receiver blink.

(TEST: Yellow, LONG/CODE: Green, CFG/PNP/CODE: Green)

CHECK! For more information on the statuses of the LED indicators in the SETTING state, refer to

of E3SC-SP with SD Manager 3 Connected.

of F3SG-SR with SD Manager 3 Connected.

^{*2.} Configurable by SD Manager 3.

^{*3.} This is the case for the Standard Muting mode. For other muting modes, refer to 2-13. Muting.

^{*4.} The Area Beam Indicator closer to the "TOP" mark on the F3SG-SR blinks.

^{*5.} The Area Beam Indicator closer to the "BTM" mark on the F3SG-SR blinks.

^{*6.} DIP switches is on the Intelligent Tap.

1-5. Ratings and Specifications

⚠ WARNING

Extension of the cable must be within a specified length. If it isn't, safety functions may not work properly, resulting in danger.



1-5-1. F3SG-SR Series

The $\Box\Box\Box\Box$ in the model names indicate the protective heights in millimeters.

	Model			F3SG-□SRA□□□□-14 F3SG-□SRB□□□□-14	F3SG-□SRA□□□□-25 F3SG-□SRB□□□□-25	F3SG-□SRA□□□□-45 F3SG-□SRB□□□□-45	F3SG-DSRADDDD-85 F3SG-DSRBDDDD-85
Performance	Object resolutio	n		Opaque objects			
	(Detection capa	bility)		14-mm dia.	25-mm dia.	45-mm dia.	85-mm dia.
	Beam gap			10 mm	20 mm	40 mm	80 mm
	Number of bear	ns		15 to 199	8 to 124	6 to 38	4 to 12
	Lens size			4.4 × 3.4 mm (W × H)	6.7 × 4.5 mm (W × H)		
	Protective heigh	nt		160 to 2,000 mm	160 to 2,480 mm	240 to 1,520 mm	280 to 920 mm
	Operating	Long		0.3 to 10.0 m *	0.3 to 20.0 m		
	range	Short		0.3 to 3.0 m *	0.3 to 7.0 m		
				g at an ambient tempe in Long Mode and 0.3			h the operating range
	Response time *1	Normal mode	ON to OFF	Optical synchronization: 8 to 18 ms Wired synchronization: 10 to 21 ms	Optical synchronization: 8 to 13 ms Wired synchronization: 10 to 17 ms	Optical synchronization: 8 ms Wired synchronization: 10 ms	
			OFF to ON	Optical synchronization: 40 to 90 ms Wired synchronization: 50 to 105 ms	Optical synchronization: 40 to 65 ms Wired synchronization: 50 to 85 ms	Optical synchronization: 40 ms Wired synchronization: 50 ms	
		x2 Slow mode *2	ON to OFF	Optical synchronization: 16 to 36 ms Wired synchronization: 20 to 42 ms	Optical synchronization: 16 to 26 ms Wired synchronization: 20 to 34 ms	Optical synchronization	
			OFF to ON	Optical synchronization: 80 to 180 ms Wired synchronization: 100 to 210 ms	Optical synchronization: 80 to 130 ms Wired synchronization: 100 to 170 ms	Optical synchronization: 80 ms Wired synchronization: 100 ms	
		x4 Slow mode *2	ON to OFF	Optical synchronization: 32 to 72 ms Wired synchronization: 40 to 84 ms	Optical synchronization: 32 to 52 ms Wired synchronization: 40 to 68 ms	Optical synchronization: 32 ms Wired synchronization: 40 ms	
			OFF to ON	Optical synchronization: 160 to 360 ms Wired synchronization: 200 to 420 ms	Optical synchronization: 160 to 260 ms Wired synchronization: 200 to 340 ms	Optical synchronization	

	Model			F3SG-□SRA□□□□-14 F3SG-□SRB□□□□-14	F3SG-DSRADDD-25 F3SG-DSRBDDD-25	F3SG-□SRA□□□□-45 F3SG-□SRB□□□□-45	F3SG-□SRA□□□□-85 F3SG-□SRB□□□□-85	
		x8 Slow mode *2	ON to OFF	Optical synchronization: 64 to 144 ms Wired synchronization: 80 to 168 ms	Optical synchronization: 64 to 104 ms Wired synchronization: 80 to 136 ms	Optical synchronization		
				OFF to ON	Optical synchronization: 320 to 720 ms Wired synchronization: 400 to 840 ms	Optical synchronization: 320 to 520 ms Wired synchronization: 400 to 680 ms	Optical synchronization Wired synchronization	
		*1. Res	ponse tii	me when used in one	segment system.			
				 List of Models and I by SD Manager 3. 	Response Times for m	ore information.		
	Effective Type 4			±2.5° max. *				
	aperture angle (EAA)	Type 2		±5.0° max. *				
	(IEC 61496-2)			ceiver at operating range of 3 m or greater				
	Light source			Infrared LEDs, Wave	elength: 870 nm			
	Startup waiting	time		3 s max.				
Electrical	Power supply v	oltage (V	s)	SELV/PELV 24 VDC	±20% (ripple p-p 10%	max.)		
	Current consum	nption		See 1-6. List of	of Models for more info	rmation.		
	Safety outputs (OSSD)			supply.) Load current: 300 mA cable extension), Cal Leakage current: 1 m *1. For the F3SG-IS 80 mA max. in 3- *2. The residual volta sensor. *3. The load inductar repeats ON and 0 When you use the becomes larger. *4. These values mus a capacitive load	e safety output at 4 Hz st be taken into conside such as a capacitor.	ge: 2 V max. (except fox., Inductive load: 2.2 nax.(NPN) *4 s 150 mA max. in 2-se the Intelligent Tap is considered when the safety of the correction when connecting the connection when connections.	or voltage drop due to H max. *1 *2 *3 Igment cascade and connected to the utput frequently ad inductance and elements including	
	Auxiliary output			supply.) Load current: 100 m/	nsistor output (PNP or A max., Residual volta e is 3 V max. when the	ge: 2 V max. *		
	Output operation	Safety	output	Light-ON (Safety out emitting signal.)	puts are turned to the	ON state when the rec	eiver receives an	
	mode Auxiliary output			Safety output (Inverted signal output: Enable) (default) (Configurable by SD Manager 3)				

	Model		F3SG-□SRA□□□□-14 F3SG-□SRA□□□□-25 F3SG-□SRA□□□□-45 F3SG-□SRA□□□□-85 F3SG-□SRB□□□□-14 F3SG-□SRB□□□□-25 F3SG-□SRB□□□□-45 F3SG-□SRB□□□□-85				
	Input voltage	TEST	Light emission stops when connected to 24 VDC ON voltage: Vs-3 V to Vs (short circuit current: approx. 5.0 mA) * OFF voltage: 0 V to 1/2 Vs, or open (short circuit current: approx. 6.0 mA) * Light emission stops when connected to 0 V ON voltage: 0 to 3 V (short circuit current: approx. 6.0 mA) OFF voltage: 1/2 Vs to Vs, or open (short circuit current: approx. 5.0 mA) *				
		OPERATING RANGE SELECT INPUT	Long: 12 V to Vs (short circuit current: approx. 4.2 mA) * or open Short: 0 to 3 V (short circuit current: approx. 4.2 mA)				
	RESET/EDM		PNP ON voltage: Vs-3 V to Vs (short circuit current: approx. 9.5 mA) * OFF voltage: 0 V to 1/2 Vs, or open (short circuit current: approx. 13.0 mA) * NPN ON voltage: 0 to 3 V (short circuit current: approx. 13.0 mA) OFF voltage: 1/2 Vs to Vs, or open (short circuit current: approx. 9.5 mA) *				
		MUTE A/B , PRE-RESET, PSDI	PNP ON voltage: Vs-3 V to Vs (short circuit current: approx. 4.5 mA) * OFF voltage: 0 V to 1/2 Vs, or open (short circuit current: approx. 7.0 mA) * NPN ON voltage: 0 to 3 V (short circuit current: approx. 7.0 mA) OFF voltage: 1/2 Vs to Vs, or open (short circuit current: approx. 4.5 mA) *				
		*The Vs indicate	es a supply voltage value in your environment.				
	Overvoltage cat (IEC 60664-1)	tegory	II				
	Indicators		See ■ F3SG-SR Series for more information.				
	Protective circuit	it	Output short-circuit protection				
	Insulation resist	ance	20 MΩ or higher (500 VDC megger)				
	Dielectric streng	gth	1,000 VAC, 50/60 Hz (1 min)				
Functional	Mutual interfere	ence prevention	Optical synchronization by Scan Code: in up to 2 sets Wired synchronization: in up to 3 sets See 5-1-4. Mutual Interference Prevention for more information.				
	Cascade conne	ection	Number of cascaded segments: 3 max. Total number of beams: 255 max.				
	Test function		Self-test (at power-on, and during operation) External test (light emission stop function by test input)				
	Safety-related functions		Interlock External Device Monitoring (EDM) Pre-Reset PSDI Fixed Blanking/Floating Blanking Reduced Resolution Muting/Override Mutual Interference Prevention PNP/NPN Selection Response Time Adjustment See Chapter 2 System Operation and Functions and Chapter 3 Setting with Intelligent Tap for more information.				

	Model		F3SG-□SRA□□□□-14 F3SG-□SRB□□□□-14	F3SG-□SRA□□□□-25 F3SG-□SRB□□□□-25	F3SG-□SRA□□□□-45 F3SG-□SRB□□□□-45	F3SG-□SRA□□□□-85 F3SG-□SRB□□□□-85		
Environmental	Ambient	Operating	-30 to 55 °C (non-icing)					
	temperature	Storage	-30 to 70 °C	<u>-, </u>				
	Ambient	Operating	35% to 85% (non-condensing)					
	humidity Storage Ambient illuminance		35% to 95%					
				3,000 lx max. on receivax. on receivax.				
	Degree of prote (IEC 60529)	ction		IP67, JIS C 0920 Ann				
	Vibration resista (IEC 61496-1)	ance	10 to 55 Hz, Multiple	amplitude of 0.7 mm,	20 sweeps for all 3 ax	res		
	Shock resistant (IEC 61496-1)	ce	100 m/s², 1000 shock	ks for all 3 axes				
	Pollution degree (IEC 60664-1)	e	3					
Connections	Root cable	Type of connection	pin receiver) or open- IP67 and IP67G (JIS * The F3SG-SR mee	ended type C 0920 Annex 1) * rat ts the degree of protec F3SG-SR. The degree	red when mated.			
		Number of wires	Emitter: 5, Receiver: 8					
		Cable length	See 5-4-3-1. Root-Straight Cable and 5-4-3-2. Root-Plug Cable for Extended for more information.					
		Cable diameter	6 mm					
		Minimum bending radius	R5 mm					
	Cascading cable	Type of connection	emitter and 8-pin reco IP67 and IP67G (JIS * The F3SG-SR mee	d connector, To casca eiver) or dedicated cor C 0920 Annex 1) * rat ts the degree of protect F3SG-SR and the roo	nnector ed when mated. ction when the cascad			
		Number of wires	Emitter: 5, Receiver:	8				
		Cable length	See 5-4-3-5. (Cascading Cable for E.	xtended for more infor	mation.		
		Cable diameter	6 mm					
		Minimum bending radius	R5 mm					
	Extension cable - Extended Socket-	Type of connection	The extension cable	5-pin emitter and 8-pin meets the degree of p xtension cable.The de es are uncovered.	rotection when the roc	ot cable is correctly		
	Straight Cable	Number of wires	Emitter: 5, Receiver:	8				
	- Extended Plug-Socket Cable	Cable length	See 5-4-3-3. Extended Socket-Straight Cable and 5-4-3-4. Extended Plug-Socket Cable for more information.					
		Cable diameter	6.6 mm					
		Minimum bending radius	R36 mm					


	Model		F3SG-□SRA□□□□-14 F3SG-□SRB□□□□-14	F3SG-□SRA□□□□-25 F3SG-□SRB□□□□-25	F3SG-□SRA□□□□-45 F3SG-□SRB□□□□-45	F3SG-DSRADDDD-85 F3SG-DSRBDDDD-85		
Connections	Cable	/€ See the	section following this to	able for the restrictions	on cable extension.			
	extension	Root cable	between power supp In wired synchronizat power supply and red * When the Intelligen	In optical synchronization: 100 m max* between power supply and emitter and between power supply and receiver In wired synchronization: 100 m max* between power supply and emitter, between power supply and receiver, and between emitter and receiver * When the Intelligent Tap (F39-SGIT-IL3) is connected to the sensor, this applies in the case of the rated power supply of 24 VDC to 24 VDC +20%.				
		Cascade connection						
Material			Housing: Aluminum alloy Cap: PBT resin Front window: Acrylic resin Side-Mount Bracket (Intermediate Bracket)(F39-LSGF): Zinc alloy FE plate: Stainless steel					
Weight			See 1-6-2. List information.	et of Models, Current C	onsumption and Weig	tht for more		
Included acce	essories		Instruction Sheet, Quick Installation Manual, Troubleshooting Guide Sticker, Warning Zone Label, End Cap (for switching Scan Code Selection function), Side-Mount Bracket (Intermediate Bracket) (F39-LSGF)* *The quantity varies depending on the protective height. Protective height of 0160 to 1440: 2 sets (total 4 pcs), 1520 to 2480: 3 sets (total 6 pcs)					
Conformity	Conforming sta	andards	See Legislation	on and Standards for r	nore information.			
	Type of ESPE	(IEC 61496-1)	F3SG-4SR□□□□□-□□: Type 4 F3SG-2SR□□□□□-□□: Type 2					
	Performance Level (PL)/Safety category PFHD		F3SG-4SR□□□□□-□□: PL e/Category 4 (EN ISO 13849-1:2015) F3SG-2SR□□□□□-□□: PL c/Category 2 (EN ISO 13849-1:2015)					
			F3SG-USRUUUU	□-□□: 1.1×10 ⁻⁸ max. (IEC 61508)			
	Proof test inter	val Тм	Every 20 years (IEC	61508)				
	SFF		99% (IEC 61508)					
	HFT		1 (IEC 61508)					
	Classification		Type B (IEC 61508-2)					

■ Restrictions on cable extension

The cable extension must satisfy all the following conditions.


<Intellingent Tap not used>

- Wired synchronization

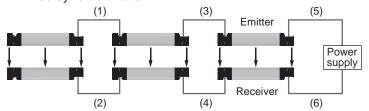

Maximum extionsion length (1) to (4): 10 m each * (5) to (6): 100 m each


- Optical synchronization

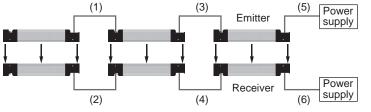

Maximum extionsion length (1) to (4): 10 m each * (5) to (6): 100 m each

<Intellingent Tap used>

- Wired synchronization

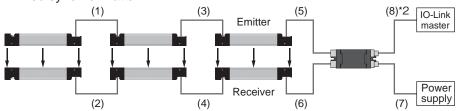

Maximum cable extension (Load condition: Safety outputs 1 and 2: 60 mA, Auxiliary output: 60 mA)

Sensor	ı	F3SG-□SRA *1 *3	3	F3SG-□SRB *1 *3			
Cascading	Single 2-segment *4 3-segment *4			Single	2-segment	3-segment	
(1),(2),(3),(4)		10 m each *5		10 m each *5			
(5)+(7) (6)+(7)	≤ 100 m	≤ 70 m	≤ 60 m	≤ 100 m	≤ 95 m	≤ 70 m	

^{*1.} Cable extension when (5) and (6) are 10 m each

^{*} Not including Cascading Cable for Extended (F39-JGR3W) and Root Cable (F39-JGR3K).


^{*2. (8)} must be 20 m max.

^{*3.} Under the maximum load conditions (safety outputs 1 and 2 of 300 mA per channel and auxiliary output of 100 mA), the cable extension must be 50% max. of the length listed in the table for the F3SG-□SRA and 80% max. for the F3SG-□SRB.

^{*4.} Conditions exist for the use of the F3SG-□SRA in 2-segment or 3-segment cascade. Refer to 1-5-1. F3SG-SR Series -Electrical - Safety outputs (OSSD).

^{*5.} Not including the Cascading Cable for Extended (F39-JGR3W) and the Root-Plug Cable for Extended (F39-JGR3K).

- Optical synchronization

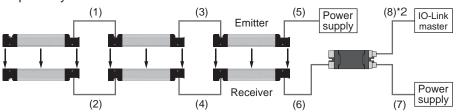


Maximum cable extension (Load condition: Safety outputs 1 and 2: 60mA, Auxiliary output: 60 mA)

Sensor		F3SG-□SRA *1 *3	3	F3SG-□SRB *1 *3			
Cascading	Single 2-segment *4 3-segment *4			Single	2-segment 3-segment		
(1),(2),(3),(4)		10 m each *5		10 m each *5			
(5)		100 m		100 m			
(6)+(7)	≤ 100 m	≤ 100 m	≤ 80 m	≤ 100 m	≤ 100m	≤ 100 m	

- *1. Cable extension when (6) is 10 m
- *2. (8) must be 20 m max.
- *3. Under the maximum load conditions (safety outputs 1 and 2 of 300 mA per channel and auxiliary output of 100 mA), the cable extension must be 50% max. of the length listed in the table for the F3SG-□SRA and 80% max. for the F3SG-□SRB.
- *4. Conditions exist for the use of the F3SG-□SRA in 2-segment or 3-segment cascade. Refer to 1-5-1. F3SG-SR Series Electrical Safety outputs (OSSD).
- *5. Not including the Cascading Cable for Extended (F39-JGR3W) and the Root-Plug Cable for Extended (F39-JGR3K).

<Using Y-Joint Plug/Socket Connector (F39-GCNY2)>

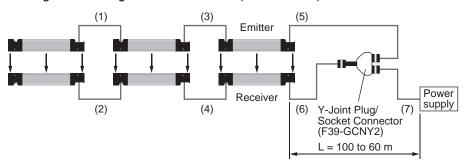

Maximum cable extension (Load condition: Safety outputs 1 and 2: 60mA, Auxiliary output: 60 mA)

Sensor	F	=3SG-□SRA *1 *2	2	F3SG-□SRB *1 *2			
Cascading	Single 2-segment *3 3-segment *3			Single	2-segment	3-segment	
(1),(2),(3),(4)		10 m each *4		10 m each *4			
L: (5)+(7) (6)+(7)	≤ 100 m	≤ 70 m	≤ 60 m	≤ 100 m	≤ 90 m	≤ 80 m	

- *1. Cable extension when (5) and (6) are 10 m each
- *2. Under the maximum load conditions (safety outputs 1 and 2 of 300 mA per channel and auxiliary output of 100 mA), the cable extension must be 50% max. of the length listed in the table for the F3SG-□SRA and 80% max. for the F3SG-□SRB.
- *3. Conditions exist for the use of the F3SG-□SRA in 2-segment or 3-segment cascade. Refer to 1-5-1. F3SG-SR Series Electrical Safety outputs (OSSD).
- *4. Not including the Cascading Cable for Extended (F39-JGR3W) and the Root-Plug Cable for Extended (F39-JGR3K).

1-5-2. Intelligent Tap

	Model		F39-SGIT-IL3			
Applicable ser			F3SG-SR Series			
Performance	Response time		Output ON to OFF and OFF to ON: 44 ms max. each * *The response time is the time interval between the changes of the states of the sensor OSSD's and the DO (pin 2).			
	Startup waiting t	ime	3 s max.			
Electrical	Power supply vo	ltage (Vs)	Supplied from external power source: SELV/PELV 24 VDC±20% (ripple p-p 10% max.) USB bus powered: 5 VDC			
	Current consum	ption	85 mA max. (When connecting 24 VDC power supply and IO-Link Master)			
	Safety outputs (0 Auxiliary output	OSSD)/	Refer to the ratings and specifications of the F3SG-SR. The safety outputs and auxiliary output of the Intelligent Tap are directly connected to those of the F3SG-SR. See 1-5-1. F3SG-SR Series for more information.			
	Digital output for (IO-Link) *	pin 2	One PNP transistor output Load current: 100 mA max., Residual voltage: 2 V max., Leakage current: 1 mA max. The DO is in the OFF state when the safety outputs are in the ON state. The DO is in the ON state when the safety outputs are in the OFF state. (Regardless of the PNP/NPN setting of the F3SG-SR)			
	*For the DO (pin	2) of CN3	,			
	Input voltage	RESET, EDM	PNP ON voltage: Vs-3 V to Vs (short circuit current: approx. 9.5 mA) *2 OFF voltage: 0 V to 1/2 Vs, or open (short circuit current: approx. 13.0 mA) *2 NPN ON voltage: 0 to 3 V (short circuit current: approx. 13.0 mA) OFF voltage: 1/2 Vs to Vs, or open (short circuit current: approx. 9.5 mA) *2			
		MUTE A/B, PRE-RESET, PSDI *1	PNP ON voltage: Vs-3 V to Vs (short circuit current: approx. 4.5 mA) *2 OFF voltage: 0 V to 1/2 Vs, or open (short circuit current: approx. 7.0 mA) *2 NPN ON voltage: 0 to 3 V (short circuit current: approx. 7.0 mA) OFF voltage: 1/2 Vs to Vs, or open (short circuit current: approx. 4.5 mA) *2			
			y available for F3SG-SR. cates a supply voltage value in your environment.			
	Overvoltage category (IEC 60664-1)		II			
	Protective circuit	1	Output short-circuit protection, Output reverse polarity protection			
	Insulation resista	ance	20 MΩ or higher (500 VDC megger)			
	Dielectric streng	th	1,000 VAC, 50/60 Hz (1 min)			
Functional	Maintenance Info	ormation	Power-ON Time See 2-26. Maintenance Information for more information.			
Environmental	Ambient	Operating	-30 to 55 °C (non-icing)			
	temperature	Storage	-30 to 70 °C			
	Ambient	Operating	35% to 85% (non-condensing)			
	humidity	Storage	35% to 85%			
	Degree of protection (IEC 60529)		IP65, IP67 and IP67G (Covers and cables connected with the Intelligent Tap.)			
	Vibration resista (IEC 61496-1)	nce	10 to 55 Hz, Multiple amplitude of 0.7 mm, 20 sweeps for all 3 axes			
	Shock resistance (IEC 61496-1)	е	100 m/s², 1000 shocks for all 3 axes			
	Pollution degree (IEC 60664-1)		3			

	Model	F39-SGIT-IL3				
Connections	To sensors, control box and IO- Link	M12 connectors: 8-pin (CN1: receiver and CN2: control box) and 5-pin (CN3: IO-Link and CN4: emitter), IP67 and IP67G (JIS C 0920 Annex 1) rated when mated. The F3SG-SR meets the degree of protection when the root cable of the F3SG-SR is correctly connected with the F3SG-SR.				
	Connection	USB Type-C™				
	Cable extension	20 m max. between IO-Link Master and Intelligent Tap, 4 m max.* between PC and Intelligent Tap via USB cable * It is not guaranteed that the Intelligent Tap is connectable to any PC or USB cable. Verify the connection with the USB cable you use.				
IO-Link	IO-Link version	Version 1.1				
communicati	Baud rate	COM3: 230.4 kbps				
ons	Data length	PD: 4 bytes, OD: 32 bytes (M-sequence type: TYPE_2_V)				
	Minimum cycle time	12 ms				
Material		PBT resin				
Weight		F39-SGIT-IL3: 180 g (when packaged), F39-LITF1: 50 g (when packaged)				
Included acce	essories	Instruction Sheet and M12 Connector Cover (2 pcs)				

1-5-3. Bluetooth® Communication Unit

Model	F39-SGBT
Applicable sensor	F3SG-SR Series
Power supply voltage (Vs)	24 VDC±20%, ripple p-p 10% max. (shares power supply of Intelligent Tap)
Current consumption	30 mA max. (shares power supply of Intelligent Tap)
Ambient temperature	Operating: -30 to 55 °C (non-icing) Storage: -30 to 70 °C
Ambient humidity	Operating: 35% to 85% (non-condensing) Storage: 35% to 85%
Degree of protection	IP65, IP67 and IP67G (rated when connected to Intelligent Tap)
Vibration resistance	10 to 55 Hz, Multiple amplitude of 0.7 mm, 20 sweeps for all 3 axes
Shock resistance	100m/s², 1000 shocks for all 3 axes
Type of connection	To be connected to Intelligent Tap
Communication system	Bluetooth® Version 3.0
Communication profile	SPP (Serial Port Profile)
Transmission distance	Approx. 10 m max. (Output power: Class 2) *
Material	PBT resin
Weight	70g (when packaged)

^{*}It depends on use environment conditions.

1-6. List of Models

1-6-1. List of Models and Response Times

1-6-1-1. F3SG-SR

■ Finger protection (Detection capability: 14-mm dia.)

Model		Number of beams	Protective height [mm]	Response time (Optical synchronization) [ms] ON to OFF OFF (not			Response time (Wired synchronization) [ms]	
				ON to OFF	(synchronized) to ON	synchronized) to ON	ON to OFF	OFF to ON
F3SG-4SR□0160-14	F3SG-2SRB0160-14	15	160	8	40	140	10	50
F3SG-4SR□0200-14-F		19	200	8	40	140	10	50
F3SG-4SR□0240-14	F3SG-2SRB0240-14	23	240	8	40	140	10	50
F3SG-4SR□0280-14-F		27	280	8	40	140	10	50
F3SG-4SR□0320-14	F3SG-2SRB0320-14	31	320	8	40	140	10	50
F3SG-4SR□0360-14-F		35	360	8	40	140	10	50
F3SG-4SR□0400-14	F3SG-2SRB0400-14	39	400	8	40	140	10	50
F3SG-4SR□0440-14-F		43	440	13	65	165	17	85
F3SG-4SR□0480-14	F3SG-2SRB0480-14	47	480	13	65	165	17	85
F3SG-4SR□0520-14-F		51	520	13	65	165	17	85
F3SG-4SR□0560-14	F3SG-2SRB0560-14	55	560	13	65	165	17	85
F3SG-4SR□0600-14-F		59	600	13	65	165	17	85
F3SG-4SR□0640-14	F3SG-2SRB0640-14	63	640	13	65	165	17	85
F3SG-4SR□0680-14-F		67	680	13	65	165	17	85
F3SG-4SR□0720-14-F		71	720	13	65	165	17	85
F3SG-4SR□0760-14-F		75	760	13	65	165	17	85
F3SG-4SR□0800-14	F3SG-2SRB0800-14	79	800	13	65	165	17	85
F3SG-4SR□0840-14-F		83	840	13	65	165	17	85
F3SG-4SR□0880-14-F		87	880	13	65	165	17	85
F3SG-4SR□0920-14-F		91	920	13	65	165	17	85
F3SG-4SR□0960-14-F		95	960	13	65	165	17	85
F3SG-4SR□1000-14	F3SG-2SRB1000-14	99	1000	13	65	165	17	85
F3SG-4SR□1200-14	F3SG-2SRB1200-14	119	1200	13	65	165	17	85
F3SG-4SR□1400-14	F3SG-2SRB1400-14	139	1400	13	65	165	17	85
F3SG-4SR□1600-14	F3SG-2SRB1600-14	159	1600	18	90	190	21	105
F3SG-4SR□1800-14	F3SG-2SRB1800-14	179	1800	18	90	190	21	105
F3SG-4SR□2000-14	F3SG-2SRB2000-14	199	2000	18	90	190	21	105

Note 1. The maximum speed of movement of a test rod up to which the detection capability is maintained is 2.0 m/s.

Note 2. The response times are values when Scan Code is set at Code B. The response times for Code A are 1 ms shorter than these values.



Refer to 2-3. Mutual Interference Prevention for more information.

■ Hand protection (Detection capability: 25-mm dia.)

Model		Number of beams	neignt	Response time (Optical synchronization) [ms]			Response time (Wired synchronization) [ms]	
			[111111]	ON to OFF	OFF (synchronized) to ON	OFF (not synchronized) to ON	ON to OFF	OFF to ON
F3SG-4SR□0160-25	F3SG-2SRB0160-25	8	160	8	40	140	10	50
F3SG-4SR□0200-25-F		10	200	8	40	140	10	50
F3SG-4SR□0240-25	F3SG-2SRB0240-25	12	240	8	40	140	10	50
F3SG-4SR□0280-25-F		14	280	8	40	140	10	50
F3SG-4SR□0320-25	F3SG-2SRB0320-25	16	320	8	40	140	10	50
F3SG-4SR□0360-25-F		18	360	8	40	140	10	50
F3SG-4SR□0400-25	F3SG-2SRB0400-25	20	400	8	40	140	10	50
F3SG-4SR□0440-25-F		22	440	8	40	140	10	50
F3SG-4SR□0480-25	F3SG-2SRB0480-25	24	480	8	40	140	10	50
F3SG-4SR□0520-25-F		26	520	8	40	140	10	50
F3SG-4SR□0560-25	F3SG-2SRB0560-25	28	560	8	40	140	10	50
F3SG-4SR□0600-25-F		30	600	8	40	140	10	50
F3SG-4SR□0640-25	F3SG-2SRB0640-25	32	640	8	40	140	10	50
F3SG-4SR□0680-25-F		34	680	8	40	140	10	50
F3SG-4SR□0720-25	F3SG-2SRB0720-25	36	720	8	40	140	10	50
F3SG-4SR□0760-25-F		38	760	8	40	140	10	50
F3SG-4SR□0800-25	F3SG-2SRB0800-25	40	800	8	40	140	10	50
F3SG-4SR□0840-25-F		42	840	13	65	165	17	85
F3SG-4SR□0880-25	F3SG-2SRB0880-25	44	880	13	65	165	17	85
F3SG-4SR□0920-25-F		46	920	13	65	165	17	85
F3SG-4SR□0960-25	F3SG-2SRB0960-25	48	960	13	65	165	17	85
F3SG-4SR□1000-25-F		50	1000	13	65	165	17	85
F3SG-4SR□1040-25	F3SG-2SRB1040-25	52	1040	13	65	165	17	85
F3SG-4SR□1120-25	F3SG-2SRB1120-25	56	1120	13	65	165	17	85
F3SG-4SR□1200-25	F3SG-2SRB1200-25	60	1200	13	65	165	17	85
F3SG-4SR□1280-25	F3SG-2SRB1280-25	64	1280	13	65	165	17	85
F3SG-4SR□1360-25	F3SG-2SRB1360-25	68	1360	13	65	165	17	85
F3SG-4SR□1440-25	F3SG-2SRB1440-25	72	1440	13	65	165	17	85
F3SG-4SR□1520-25	F3SG-2SRB1520-25	76	1520	13	65	165	17	85
F3SG-4SR□1600-25	F3SG-2SRB1600-25	80	1600	13	65	165	17	85
F3SG-4SR□1680-25	F3SG-2SRB1680-25	84	1680	13	65	165	17	85
F3SG-4SR□1760-25	F3SG-2SRB1760-25	88	1760	13	65	165	17	85
F3SG-4SR□1840-25	F3SG-2SRB1840-25	92	1840	13	65	165	17	85
F3SG-4SR□1920-25	F3SG-2SRB1920-25	96	1920	13	65	165	17	85
F3SG-4SR□2080-25	F3SG-2SRB2080-25	104	2080	13	65	165	17	85
F3SG-4SR□2280-25	F3SG-2SRB2280-25	114	2280	13	65	165	17	85
F3SG-4SR□2480-25	F3SG-2SRB2480-25	124	2480	13	65	165	17	85

Note 1. The maximum speed of movement of a test rod up to which the detection capability is maintained is 2.0 m/s.

Note 2. The response times are values when Scan Code is set at Code B. The response times for Code A are 1 ms shorter than



Refer to 2-3. Mutual Interference Prevention for more information.

■ Arm/leg protection (Detection capability: 45-mm dia.)

Model		Number of beams	Protective height [mm]	Response time (Optical synchronization) [ms]			Response time (Wired synchronization) [ms]	
			[11111]	ON to OFF	OFF (synchronized) to ON	OFF (not synchronized) to ON	ON to OFF	OFF to ON
F3SG-4SR□0240-45	F3SG-2SRB0240-45	6	240	8	40	140	10	50
F3SG-4SR□0400-45	F3SG-2SRB0400-45	10	400	8	40	140	10	50
F3SG-4SR□0560-45	F3SG-2SRB0560-45	14	560	8	40	140	10	50
F3SG-4SR□0720-45	F3SG-2SRB0720-45	18	720	8	40	140	10	50
F3SG-4SR□0880-45	F3SG-2SRB0880-45	22	880	8	40	140	10	50
F3SG-4SR□1200-45	F3SG-2SRB1200-45	30	1200	8	40	140	10	50
F3SG-4SR□1520-45	F3SG-2SRB1520-45	38	1520	8	40	140	10	50

Note 1. The maximum speed of movement of a test rod up to which the detection capability is maintained is 2.0 m/s.

Note 2. The response times are values when Scan Code is set at Code B. The response times for Code A are 1 ms shorter than these values.



Refer to 2-3. Mutual Interference Prevention for more information.

■ Body protection (Detection capability: 85-mm dia.)

Model		Number of beams	Protective height [mm]	Response time (Optical synchronization) [ms]			Response time (Wired synchronization) [ms]	
			[11111]	ON to OFF	OFF (synchronized) to ON	OFF (not synchronized) to ON	ON to OFF	OFF to ON
F3SG-4SR□0280-85	F3SG-2SRB0280-85	4	280	8	40	140	10	50
F3SG-4SR□0440-85	F3SG-2SRB0440-85	6	440	8	40	140	10	50
F3SG-4SR□0600-85	F3SG-2SRB0600-85	8	600	8	40	140	10	50
F3SG-4SR□0760-85	F3SG-2SRB0760-85	10	760	8	40	140	10	50
F3SG-4SR□0920-85	F3SG-2SRB0920-85	12	920	8	40	140	10	50

Note 1. The maximum speed of movement of a test rod up to which the detection capability is maintained is 2.0 m/s.

Note 2. The response times are values when Scan Code is set at Code B. The response times for Code A are 1 ms shorter than



Refer to 2-3. Mutual Interference Prevention for more information.

1-6-2. List of Models, Current Consumption and Weight

1-6-2-1. F3SG-SR

■ Finger protection (Detection capability: 14-mm dia.)

Model	Number of	Protective height [mm]	Current cons	sumption [mA]	Weight [kg]		
Model	beams		Emitter	Receiver	Net	Gross	
F3SG-4SRA0160-14	15	160	68	106	0.4	1.2	
F3SG-□SRB0160-14	15	160	69	97	0.4	1.2	
F3SG-4SRA0200-14-F	19	200	71	108	0.5	1.3	
F3SG-4SRB0200-14-F	19	200	70	97	0.5	1.3	
F3SG-4SRA0240-14	23	240	74	111	0.6	1.4	
F3SG-□SRB0240-14	23	240	71	98	0.6	1.4	
F3SG-4SRA0280-14-F	27	280	77	114	0.7	1.5	
F3SG-4SRB0280-14-F	27	280	73	99	0.7	1.5	
F3SG-4SRA0320-14	31	320	81	117	0.8	1.6	
F3SG-□SRB0320-14	31	320	74	100	0.8	1.6	
F3SG-4SRA0360-14-F	35	360	84	119	0.9	1.8	
F3SG-4SRB0360-14-F	35	360	75	100	0.9	1.8	
F3SG-4SRA0400-14	39	400	87	122	1	1.9	
F3SG-□SRB0400-14	39	400	77	101	1	1.9	
F3SG-4SRA0440-14-F	43	440	90	125	1.1	2	
F3SG-4SRB0440-14-F	43	440	78	102	1.1	2	
F3SG-4SRA0480-14	47	480	93	128	1.2	2.1	
F3SG-□SRB0480-14	47	480	79	103	1.2	2.1	
F3SG-4SRA0520-14-F	51	520	96	131	1.3	2.2	
F3SG-4SRB0520-14-F	51	520	81	103	1.3	2.2	
F3SG-4SRA0560-14	55	560	99	133	1.4	2.3	
F3SG-□SRB0560-14	55	560	82	104	1.4	2.3	
F3SG-4SRA0600-14-F	59	600	103	136	1.5	2.5	
F3SG-4SRB0600-14-F	59	600	83	105	1.5	2.5	
F3SG-4SRA0640-14	63	640	106	139	1.6	2.6	
F3SG-□SRB0640-14	63	640	85	106	1.6	2.6	
F3SG-4SRA0680-14-F	67	680	109	142	1.7	2.7	
F3SG-4SRB0680-14-F	67	680	86	106	1.7	2.7	
F3SG-4SRA0720-14-F	71	720	112	144	1.8	2.8	
F3SG-4SRB0720-14-F	71	720	87	107	1.8	2.8	
F3SG-4SRA0760-14-F	75	760	115	147	1.9	2.9	
F3SG-4SRB0760-14-F	75	760	89	108	1.9	2.9	
F3SG-4SRA0800-14	79	800	118	150	2	3	
F3SG-□SRB0800-14	79	800	90	109	2	3	
F3SG-4SRA0840-14-F	83	840	121	153	2.1	3.1	
F3SG-4SRB0840-14-F	83	840	91	109	2.1	3.1	
F3SG-4SRA0880-14-F	87	880	124	155	2.2	3.2	
F3SG-4SRB0880-14-F	87	880	93	110	2.2	3.2	
F3SG-4SRA0920-14-F	91	920	128	158	2.3	3.4	
F3SG-4SRB0920-14-F	91	920	94	111	2.3	3.4	
F3SG-4SRA0960-14-F	95	960	131	161	2.4	3.5	
F3SG-4SRB0960-14-F	95	960	95	112	2.4	3.5	
F3SG-4SRA1000-14	99	1000	134	164	2.5	3.6	
F3SG-□SRB1000-14	99	1000	97	112	2.5	3.6	
F3SG-4SRA1200-14	119	1200	150	178	3.1	4.2	
F3SG-□SRB1200-14	119	1200	103	116	3.1	4.2	
F3SG-4SRA1400-14	139	1400	165	191	3.6	4.7	
F3SG-□SRB1400-14	139	1400	110	120	3.6	4.7	

Model	Number of	Protective	Current cons	umption [mA]	Weight [kg]		
	beams height	height [mm]	Emitter	Receiver	Net	Gross	
F3SG-4SRA1600-14	159	1600	181	205	4.1	5.5	
F3SG-□SRB1600-14	159	1600	117	124	4.1	5.5	
F3SG-4SRA1800-14	179	1800	197	219	4.6	6.1	
F3SG-□SRB1800-14	179	1800	124	128	4.6	6.1	
F3SG-4SRA2000-14	199	2000	212	233	5.1	6.7	
F3SG-□SRB2000-14	199	2000	130	131	5.1	6.7	

Note 1. The net weight is the weight of an emitter and a receiver.

Note 2. The gross weight is the weight of an emitter, a receiver, included accessories and a package.

■ Hand protection (Detection capability: 25-mm dia.)

Model	Number of	Protective height [mm]	Current cons	sumption [mA]	Weight [kg]		
Wodel	beams		Emitter	Receiver	Net	Gross	
F3SG-4SRA0160-25	8	160	63	105	0.4	1.2	
F3SG-□SRB0160-25	8	160	61	96	0.4	1.2	
F3SG-4SRA0200-25-F	10	200	65	108	0.5	1.3	
F3SG-4SRB0200-25-F	10	200	62	96	0.5	1.3	
F3SG-4SRA0240-25	12	240	68	110	0.6	1.4	
F3SG-□SRB0240-25	12	240	63	97	0.6	1.4	
F3SG-4SRA0280-25-F	14	280	71	112	0.7	1.5	
F3SG-4SRB0280-25-F	14	280	64	97	0.7	1.5	
F3SG-4SRA0320-25	16	320	74	115	8.0	1.6	
F3SG-□SRB0320-25	16	320	65	97	0.8	1.6	
F3SG-4SRA0360-25-F	18	360	76	117	0.9	1.8	
F3SG-4SRB0360-25-F	18	360	65	98	0.9	1.8	
F3SG-4SRA0400-25	20	400	79	119	1	1.9	
F3SG-□SRB0400-25	20	400	66	98	1	1.9	
F3SG-4SRA0440-25-F	22	440	82	121	1.1	2	
F3SG-4SRB0440-25-F	22	440	67	98	1.1	2	
F3SG-4SRA0480-25	24	480	84	124	1.2	2.1	
F3SG-□SRB0480-25	24	480	68	99	1.2	2.1	
F3SG-4SRA0520-25-F	26	520	87	126	1.3	2.2	
F3SG-4SRB0520-25-F	26	520	69	99	1.3	2.2	
F3SG-4SRA0560-25	28	560	90	128	1.4	2.3	
F3SG-□SRB0560-25	28	560	70	99	1.4	2.3	
F3SG-4SRA0600-25-F	30	600	92	131	1.5	2.5	
F3SG-4SRB0600-25-F	30	600	71	100	1.5	2.5	
F3SG-4SRA0640-25	32	640	95	133	1.6	2.6	
F3SG-□SRB0640-25	32	640	72	100	1.6	2.6	
F3SG-4SRA0680-25-F	34	680	98	135	1.7	2.7	
F3SG-4SRB0680-25-F	34	680	73	100	1.7	2.7	
F3SG-4SRA0720-25	36	720	100	137	1.8	2.8	
F3SG-□SRB0720-25	36	720	74	101	1.8	2.8	
F3SG-4SRA0760-25-F	38	760	103	140	1.9	2.9	
F3SG-4SRB0760-25-F	38	760	75	101	1.9	2.9	
F3SG-4SRA0800-25	40	800	106	142	2	3	
F3SG-□SRB0800-25	40	800	76	101	2	3	
F3SG-4SRA0840-25-F	42	840	109	144	2.1	3.1	
F3SG-4SRB0840-25-F	42	840	77	101	2.1	3.1	
F3SG-4SRA0880-25	44	880	111	147	2.2	3.2	
F3SG-□SRB0880-25	44	880	78	102	2.2	3.2	
F3SG-4SRA0920-25-F	46	920	114	149	2.3	3.4	
F3SG-4SRB0920-25-F	46	920	79	102	2.3	3.4	

Model	Number of	Protective	Current cons	sumption [mA]	Weight [kg]		
iviodei	beams	height [mm]	Emitter	Receiver	Net	Gross	
F3SG-4SRA0960-25	48	960	117	151	2.4	3.5	
F3SG-□SRB0960-25	48	960	80	102	2.4	3.5	
F3SG-4SRA1000-25-F	50	1000	119	154	2.5	3.6	
F3SG-4SRB1000-25-F	50	1000	81	103	2.5	3.6	
F3SG-4SRA1040-25	52	1040	122	156	2.6	3.7	
F3SG-□SRB1040-25	52	1040	82	103	2.6	3.7	
F3SG-4SRA1120-25	56	1120	127	160	2.9	3.9	
F3SG-□SRB1120-25	56	1120	84	104	2.9	3.9	
F3SG-4SRA1200-25	60	1200	133	165	3.1	4.2	
F3SG-□SRB1200-25	60	1200	86	104	3.1	4.2	
F3SG-4SRA1280-25	64	1280	138	170	3.3	4.4	
F3SG-□SRB1280-25	64	1280	88	105	3.3	4.4	
F3SG-4SRA1360-25	68	1360	144	174	3.5	4.6	
F3SG-□SRB1360-25	68	1360	90	106	3.5	4.6	
F3SG-4SRA1440-25	72	1440	149	179	3.7	4.8	
F3SG-□SRB1440-25	72	1440	92	106	3.7	4.8	
F3SG-4SRA1520-25	76	1520	154	183	3.9	5.3	
F3SG-□SRB1520-25	76	1520	93	107	3.9	5.3	
F3SG-4SRA1600-25	80	1600	160	188	4.1	5.5	
F3SG-□SRB1600-25	80	1600	95	107	4.1	5.5	
F3SG-4SRA1680-25	84	1680	165	192	4.3	5.8	
F3SG-□SRB1680-25	84	1680	97	108	4.3	5.8	
F3SG-4SRA1760-25	88	1760	170	197	4.5	6	
F3SG-□SRB1760-25	88	1760	99	109	4.5	6	
F3SG-4SRA1840-25	92	1840	176	202	4.7	6.2	
F3SG-□SRB1840-25	92	1840	101	109	4.7	6.2	
F3SG-4SRA1920-25	96	1920	181	206	4.9	6.4	
F3SG-□SRB1920-25	96	1920	103	110	4.9	6.4	
F3SG-4SRA2080-25	104	2080	192	215	5.3	6.9	
F3SG-□SRB2080-25	104	2080	107	111	5.3	6.9	
F3SG-4SRA2280-25	114	2280	205	227	5.8	7.5	
F3SG-□SRB2280-25	114	2280	112	113	5.8	7.5	
F3SG-4SRA2480-25	124	2480	219	238	6.3	8	
F3SG-□SRB2480-25	124	2480	117	114	6.3	8	

Note 1. The net weight is the weight of an emitter and a receiver.

Note 2. The gross weight is the weight of an emitter, a receiver, included accessories and a package.

■ Arm/leg protection (Detection capability: 45-mm dia.)

Model	Number of		Current cons	umption [mA]	Weight [kg]		
Wiodei	beams	height [mm]	Emitter	Receiver	Net	Gross	
F3SG-4SRA0240-45	6	240	60	107	0.6	1.4	
F3SG-□SRB0240-45	6	240	52	95	0.6	1.4	
F3SG-4SRA0400-45	10	400	71	116	1	1.9	
F3SG-□SRB0400-45	10	400	56	95	1	1.9	
F3SG-4SRA0560-45	14	560	82	124	1.4	2.3	
F3SG-□SRB0560-45	14	560	60	96	1.4	2.3	
F3SG-4SRA0720-45	18	720	93	133	1.8	2.8	
F3SG-□SRB0720-45	18	720	64	96	1.8	2.8	
F3SG-4SRA0880-45	22	880	104	141	2.2	3.2	
F3SG-□SRB0880-45	22	880	68	97	2.2	3.2	
F3SG-4SRA1200-45	30	1200	125	158	3.1	4.2	
F3SG-□SRB1200-45	30	1200	75	98	3.1	4.2	
F3SG-4SRA1520-45	38	1520	147	175	3.9	5.3	
F3SG-□SRB1520-45	38	1520	83	99	3.9	5.3	

Note 1. The net weight is the weight of an emitter and a receiver.

■ Body protection (Detection capability: 85-mm dia.)

Model	Number of	Protective	Current cons	umption [mA]	Weight [kg]		
iviodei	beams	height [mm]	Emitter	Receiver	Net	Gross	
F3SG-4SRA0280-85	4	280	63	111	0.7	1.5	
F3SG-□SRB0280-85	4	280	50	95	0.7	1.5	
F3SG-4SRA0440-85	6	440	72	120	1.1	2	
F3SG-□SRB0440-85	6	440	52	95	1.1	2	
F3SG-4SRA0600-85	8	600	81	128	1.5	2.5	
F3SG-□SRB0600-85	8	600	54	96	1.5	2.5	
F3SG-4SRA0760-85	10	760	91	136	1.9	2.9	
F3SG-□SRB0760-85	10	760	56	96	1.9	2.9	
F3SG-4SRA0920-85	12	920	100	145	2.3	3.4	
F3SG-□SRB0920-85	12	920	58	96	2.3	3.4	

Note 1. The net weight is the weight of an emitter and a receiver.

Note 2. The gross weight is the weight of an emitter, a receiver, included accessories and a package.

Note 2. The gross weight is the weight of an emitter, a receiver, included accessories and a package.

CHECK!

1-6-3. Calculation of Response Time of Cascaded Segments


F3SG-SRA	Х	F3SG-PG-A/-L	-
F3SG-SRB	Х	F3SG-PG-C	-

The F3SG-SR can be used in cascade connection. In cascade connection, a response time is determined by the total number of beams.

If the total number of beams of all F3SG-SR's in a cascade connection is 12 or less, its response time is 7 ms (Code A)/8 ms (Code B) when the Optical Synchronization is activated and 9 ms or less when the Wired Synchronization is activated.

If the total number of beams of all F3SG-SR's in a cascade connection is 140 or less, its response time is 12 ms (Code A)/13 ms (Code B) when the Optical Synchronization is activated and 15 ms or less when the Wired Synchronization is activated. The number of beams of each F3SG-SR segment, however, must be 112 or less.

If an F3SG-SR with 113 or more beams is included in the cascade connection, its response time is 17 ms (Code A)/18 ms (Code B) when the Optical Synchronization is activated and 22 ms or less when the Wired Synchronization is activated.

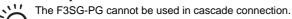

The table below summarizes the relation described above.

■Cascaded sensors in Optical Synchronization with Scan Code A

		F	Response time [ms	s]
Number of beams	Number of beams		OFF	OFF (Not
(per single sensor)	(total system)	ON→OFF	(Synchronized)	synchronized)
			→ON	→ON
1 to 12	1 to 12	7	35	135
1 to 112	13 to 140*	12	60	160
1 to 199	141 to 255	17	85	185

^{*}The number of beams of each sensor segment in cascaded connection must be 112 or less.

■Cascaded sensors in Optical Synchronization with Scan Code B

	, ,			
		F	Response time [ms	5]
Number of beams	Number of beams		OFF	OFF (Not
(per single sensor)	(total system)	ON→OFF	(Synchronized)	synchronized)
			→ON	→ON
1 to 12	1 to 12	8	40	140
1 to 112	13 to 140*	13	65	165
1 to 199	141 to 255	18	90	190

^{*}The number of beams of each sensor segment in cascaded connection must be 112 or less.

■Cascaded sensors in Wired Synchronization

Number of beams	Number of beams	Response time [ms]		
(per single sensor)	(total system)	ON→OFF	OFF→ON	
1 to 12	1 to 12	9	45	
1 to 112	13 to 140*	15	75	
1 to 199	141 to 255	22	110	

^{*}The number of beams of each sensor segment in cascaded connection must be 112 or less.



Chapter 2 System Operation and Functions

2-1. Combination of Functions	31
2-2. Operating States	33
2-3. Mutual Interference Prevention	35
2-4. PNP/NPN Selection	39
2-5. Self-Test	40
2-6. External Test	42
2-7. Lockout Reset	44
2-8. Interlock	45
2-9. Pre-Reset	48
2-10. PSDI	51
2-11. External Device Monitoring (EDM)	54
2-12. Auxiliary Output	57
2-13. Muting	61
2-14. Override	85
2-15. Fixed Blanking	90
2-16. Floating Blanking	96
2-17. Reduced Resolution	101
2-18. Warning Zone	104
2-19. Setting Zone Adjacency Conditions	108
2-20. Operating Range Selection	110
2-21. Response Time Adjustment	112
2-22. Area Beam Indicator (ABI)	113
2-23. Designated Beam Output	116
2-24. Stable Light Threshold Adjustment	118
2-25. Incident Light/Ambient Light	119
2-26. Maintenance Information	120
2-27. Operating Status Monitoring	123

2-28. Instantaneous Block Detection	124
2-29. Setting Recovery	125
2-30. Backup/Restoration	126
2-31. IO-Link	127

∕!\ WARNING

The F3SG-SR must be installed, configured, and incorporated into a machine control system by a sufficiently trained and qualified person. An unqualified person may not be able to perform these operations properly, which may cause a person to go undetected, resulting in serious injury.



Make sure the Responsible Person test the operation of the F3SG-SR after setting with the SD Manager 3 to verify that the F3SG-SR operates as intended. Make sure to stop the machine until the test is complete. Unintended settings may cause a person to go undetected, resulting in serious injury.



2-1. Combination of Functions

Possible combinations of the F3SG-SR functions are shown in the table below. The combinations in the table are available under certain conditions. The other functions can be combined without any limitations.



The functions listed in the table below are not available for the F3SG-RE.

Refer to 2-19. Setting Zone Adjacency Conditions for further information.

YES: Combination available


YES-C: Combination available by setting with SD Manager 3.

NO: Combination unavailable

	Fixed Blanking	Floating Blanking	Reduced Resolutio n	Muting/ Override	Pre- Reset	Warning Zone	EDM	Interlock	Input signal linkage of ABI	Teach-in input Push-SW or external wiring	PSDI
Fixed Blanking	-	YES-C*2	NO	YES	NO	YES-C	YES	YES	YES-C	YES-C	YES-C
Floating Blanking	YES-C *2	-	NO	YES *1	NO	YES-C	YES	YES	YES-C*3	YES-C*3	YES-C*3
Reduced Resolution	NO	NO	-	NO	YES-C	NO	YES-C	YES-C	YES-C	YES-C	YES-C
Muting/Override	YES	YES *1	NO	-	NO	YES-C	YES	YES	YES	NO	NO
Pre-Reset	NO	NO	YES-C	NO	-	YES-C	YES	NO	NO	NO	NO
Warning Zone	YES-C	YES-C	NO	YES-C	YES-C	-	YES-C	YES-C	YES-C	YES-C	YES-C
EDM	YES	YES	YES-C	YES	YES	YES-C	-	YES	YES-C	YES-C	YES-C
Interlock	YES	YES	YES-C	YES	NO	YES-C	YES	-	YES-C	YES-C	NO
Input signal linkage of ABI *4	YES-C	YES-C*3	YES-C	NO	NO	YES-C	YES-C	YES-C	-	NO	NO
Teach-in input Push-SW or external wiring *5	YES-C	YES-C*3	YES-C	NO	NO	YES-C	YES-C	YES-C	NO	-	NO
PSDI	YES-C	YES-C*3	YES-C	NO	NO	YES-C	YES-C	NO	NO	NO	-

^{*1.} This combination requires that the Floating Blanking zone covers the full detection zone and that the Muting/Override function also covers the full detection zone.

*2. When the Fixed Blanking and Floating Blanking are selected, the top or bottom beam must be included in the Fixed Blanking zone, as shown in the left figure below. It is not allowed to set the Fixed Blanking zone not to cover the top or bottom beam, as shown in the right figure below. It is also not allowed to set a Fixed Blanking zone to split a Floating Blanking zone.

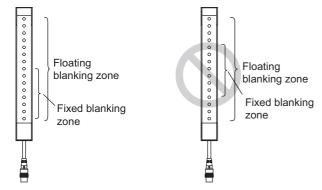

- *3. The monitoring temporarily disabling function by the external wiring of floating blanking is not usable together.
- *4. This is the function to operate the area beam indicator (ABI) using muting input A/B. For details, refer to 2-22. Area Beam Indicator
- *5. This is the function to use the teach-in input of fixed blanking or floating blanking by the [Push-SW or external wiring]. For details, refer to 4-3-2-3. Teach-in Input
 - Considerations for enabling and disabling Muting function with SD Manager 3

Setting parameters of the following functions is saved according to the state where the Muting function is enabled and disabled, respectively. After changing the Muting function from Enable to Disable or from Disable to Enable, check the settings of these functions again.

Affected functions:

- External Device Monitoring (EDM)
- Start Interlock
- Restart Interlock
- Auxiliary Output



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



Refer to the Setting with Configuration Tool sections of the affected functions in Chapter 2 System Operation and Functions for more information on the setting parameters.

2-2. Operating States

The following operating states exist for the F3SG-SR and Intelligent Tap.

2-2-1. Operating States of F3SG-SR and Intelligent Tap

■ MACHINE RUN State

The two safety outputs are in the ON state and the green OSSD indicator on the receiver is illuminated. The protected machine is allowed to operate. Pressing and releasing the reset switch has no effect.

■ MACHINE STOP State

The two safety outputs are in the OFF state and the red OSSD indicator on the receiver is illuminated. The protected machine is not allowed to operate. If connecting the sensor with the Intelligent Tap to use it, the IN and OUT indicators of the Intelligent Tap is lit up in yellow and green, respectively.

■ INTERLOCK State

The two safety outputs are in the OFF state and the yellow SEQ indicator on the receiver is illuminated. The INTERLOCK state does not allow the protected machine to operate until the detection zone is clear of obstructions and the reset switch is pressed and released.



Refer to 2-8. Interlock for more information.

■ LOCKOUT State

The two safety output signals is in the OFF state, and each indicator is illuminated or blinks as shown in the table below. In addition, the indicator which has detected an error is illuminated or blinks to display the error. The LOCKOUT state does not allow the protected machine to operate. The primary difference between LOCKOUT and INTERLOCK states is that the F3SG-SR system will remain in the LOCKOUT state until the cause of the error is corrected, regardless of power cycling or an external reset switch press and release.

Condition	Device	Indicator	Name	Color	Illuminated	Blinking
	Emitter	E or ERR	Lockout	Red	-	LOCKOUT state
		E or ERR	Lockout	Red	-	LOCKOUT state
The F3SG-SR is in the LOCKOUT state.	Receiver	M or MAINT	Maintenance	Red	LOCKOUT state due to a recoverable error (When in cascade connection, the indicator of only the sensor segment having the error is illuminated)	LOCKOUT state due to a replacement- recommended error (When in cascade connection, the indicator of only the sensor segment having the error blinks)
	Intelligent Tap	IN	Sensor status	Yellow	-	The F3SG-SR is in the LOCKOUT state.
The Intelligent Tap is in the	Intelligent Tap	ERR	Lockout	Red	The Intelligent Tap is in the LOCKOUT state	-
LOCKOUT state	Receiver	M or MAINT	Maintenance	Orange	-	Intelligent Tap is in the LOCKOUT state

Refer to 8-1-2. LOCKOUT State for more information.

■ TEACH-IN Mode

The two safety outputs are in the OFF state and the green CFG indicator on the receiver is blinking.

Refer to 8-1-2. LOCKOUT State for more information of the error indication.

■ SETTING State

The two safety outputs are in the OFF state. The yellow TEST, green LONG and green CODE indicators on the emitter and the green CFG and green PNP and green CODE indicators on the receiver are blinking. Then, the IN and OUT indicators of the Intelligent Tap blink in yellow and green, respectively. The SETTING state does not allow the protected machine to operate. The user can change settings of the functions, monitor the operating states or view maintenance information (Intelligent Tap, SD Manager 3 or SD Manager 3 Mobile APP) under this state.



Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information.

2-2-2. Operating States of Intelligent Tap

■ Backup

The configuration of F3SG-SR is saved in the Intelligent Tap. The machine guarded cannot be operated. For the system operation and user operation method during backup, refer to 3-6-2. Performing Backup.

Restoration

The configuration in the Intelligent Tap is written into F3SG-SR. The machine guarded cannot be operated. For the system operation and user operation method during restoration, refer to 3-6-3. Performing Restoration.

IO-Link Communications

While the IO-Link master and Intelligent Tap are in communication, the IO-Link indicator of the Intelligent Tap blinks in green.

2-3. Mutual Interference Prevention

! WARNING

Make sure the Responsible Person tests the operation of the F3SG-SR after setting with the End Cap to verify that the F3SG-SR operates as intended. Make sure to stop the machine until the test is complete. Unintended settings may cause a person to go undetected, resulting in serious injury.



When using more than one set of F3SG-SR's in adjacent areas, the emitter of one F3SG-SR may interfere with the receiver of the other, causing the safety functions to stop working properly. Install, configure and maintain them so that mutual interference does not occur.



The F3SG-SR has two types of mutual interference prevention methods, the Optical Synchronization and the Wired Synchronization. When the Optical Synchronization method is used, the F3SG-SR prevents mutual interference by the Scan Code Selection.

2-3-1. Mutual Interference Prevention of F3SG-SR

2-3-1-1. Optical Synchronization

F3SG-SRA	✓
F3SG-SRB	✓

Overview

Synchronization is required between an emitter and a receiver for normal operation of the F3SG-SR. The optical synchronization method of F3SG-SR uses a specific beam to realize synchronization. The beam is hereinafter called "synchronization beam".



By connecting the emitter and receiver with the Intelligent Tap simultaneously, the wired synchronization is configured. If using the Intelligent Tap and optical synchronization configuration together, do not connect the emitter with the Intelligent Tap.

Depending on sensor configuration, the synchronization beam is either of the followings:

- One segment system: End beams (Top or Bottom beam)
- Cascaded system: End beams (Top or Bottom beam) of the primary sensor For an emitter and a receiver to synchronize, at least one synchronization beam must be unblocked.

The synchronization process is performed when:

- (1) The power is turned on for an emitter and a receiver
- (2) All beams of the primary sensor are blocked and then unblocked
- (3) Synchronization is lost due to an error such as noise and ambient light




The sensor can maintain the synchronization in other cases than those described above and it is not necessary to keep the synchronization beam unblocked all the time.




CHECK!

In the Optical Synchronization, use the same F3SG-SR models for the emitter and receiver.

■Conditions to establish synchronization

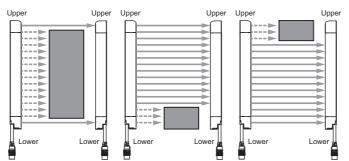

■Conditions to fail synchronization

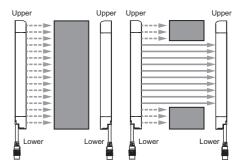

■ Response time of "OFF (Synchronized) → ON" and "OFF (Not synchronized) → ON"

Response time of "OFF (Synchronized) → ON" is the response time from when the F3SG-SR is in the OFF state and the emitter and receiver are synchronized to when the F3SG-SR is turned to the ON state.

Response time of "OFF (Not synchronized) → ON" is the response time from when the F3SG-SR is in the OFF state and the emitter and receiver are not synchronized to when the F3SG-SR is turned to the ON state. This response time is longer than that of "OFF (Synchronized) → ON" since the F3SG-SR evaluates if it is blocked or unblocked, after the synchronization is established.

■ Scan Code Selection

F3SG-SRA	✓
F3SG-SRB	✓

The F3SG-SR has two scan codes (Code A and Code B). These scan codes have different internal processing time. The use of different scan codes allows for placement of systems in close proximity and in line with each other and minimize mutual interference.

The response time for Code A is 1 ms shorter than that for Code B.



Refer to 1-6-1. List of Models and Response Times for more information on the response time at the time of optical synchronization setting.



Refer to 5-1-4. Mutual Interference Prevention for how to mitigate mutual interference.

■ Factory Default Setting

The factory default setting is Code A.



Both the emitter and receiver units must be set to the same code.


■ Setting with End Cap

Scan code can be set as code A or B by changing the termination cap. The termination cap for functional setting is attached on the TOP side. To change the scan code, replace the terminal cap before installing F3SG-SR. Replace the termination cap after turning OFF the power. In the Wired Synchronization*, selecting a scan code is unnecessary. When using the F3SG-SR in cascade connection, make sure to attach the End Cap to the secondary sensor farthest from its power supply.

End Cap	Description	Color
	Scan Code A (factory default setting)	Black
O SCHOOL STATES	Scan Code B	White

^{*} In the Wired Synchronization, F3SG-SR can prevent mutual interference in up to 3 sets.

Loosen the fixing screws (at 2 locations) of the End Cap connected near the "TOP" mark of the F3SG-SR and remove the End Cap as shown below. Connect the replacing End Cap to the F3SG-SR and tighten the fixing screws to fix the End Cap. The recommended torque to tighten the Mounting Screws is 0.35 N·m.

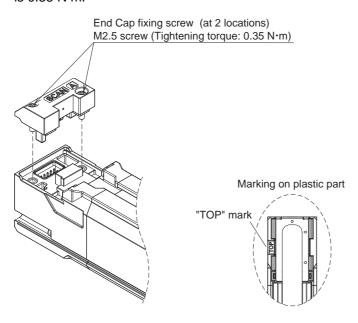

- Do not remove the insulating rubber attached to the End Cap. Failure to do so may cause deterioration of the protective functions.
- When attaching the End Cap, tightly fasten the screw (M2.5, recommended torque: 0.35 N·m). Failure to do so may CHECK! cause the End Cap to come loose, leading to deterioration of the protective functions.
 - The insulating rubber attached to connector of the End Cap may come off when removing the End Cap. If the rubber comes off, place it back to the groove of the connector and insert the connector to the sensor body.

■ Setting with SD Manager 3

The user cannot make any changes to the settings of this function by the SD Manager 3.



2-3-1-2. Wired Synchronization

F3SG-SRA	✓
F3SG-SRB	✓

Overview

Synchronization is required for between an emitter and a receiver for normal operation of the F3SG-SR. The Wired Synchronization for F3SG-SR is realized by wired communication between an emitter and a receiver. In the Wired Synchronization setting, in up to three sets of the F3SG-SR can prevent mutual interference.



The Mutual Interference Prevention does not work between the F3SG-SR in the Optical Synchronization and the F3SG-SR in the Wired Synchronization.



Refer to 1-6-1. List of Models and Response Times for more information on the response time.



 \mathcal{N} Refer to 5-1-4. Mutual Interference Prevention for more information on the Mutual Interference Prevention.

There are two ways to operate the F3SG-SR in the Wired Synchronization setting.

- 1) Connect the emitter and the receiver with the Intelligent Tap.
- 2) Connect the COM(+) and COM(-) lines of the emitter and receiver with each other.

The COM(+) and MUTE A use the same line and so do the COM(-) and MUTE B. If you use the Muting and the Wired Synchronization, make sure to connect the F3SG-SR with the Intelligent Tap.

In the Wired Synchronization setting, the Area Beam Indicator (ABI) of the emitter can be linked with that of the receiver.



In the Optical synchronization, the Area Beam Indicator (ABI) of the emitter keeps off regardless of the operation of the



Refer to 5-4-3-1. Root-Straight Cable for more information on the wiring.




The F3SG-SR in the Wired Synchronization setting also requires the connection with the End Cap. Connect the emitter and the receiver with the End Cap before power on.

2-4. PNP/NPN Selection

F3SG-SRA	✓
F3SG-SRB	✓

2-4-1. Overview

The F3SG-SR has the PNP/NPN Selection function for the user to select the polarity of the inputs and outputs between PNP and NPN by changing the wiring. When the F3SG-SR system is set to PNP, the PNP indicator is illuminated in green.

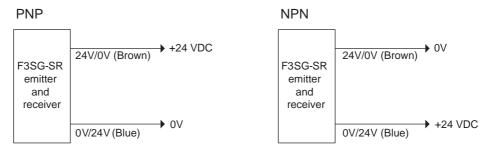

The F3SG-SR is set to PNP when the 24V/0V line (brown) is connected to +24 VDC and the 0V/24V line (blue) to 0 V, The F3SG-SR is set to NPN when the 0V/24V line (blue) is connected to +24 VDC and the 24V/0V line (brown) to 0 V.

When using an Intelligent Tap, wire the F39-JGDA-D sensor connected with CN2 of the Intelligent Tap in the same way as above.

2-4-2. Setting with Intelligent Tap

The user cannot make any changes to the settings of this function by the DIP Switch on the Intelligent Tap.

2-4-3. Setting with SD Manager 3


The user cannot make any changes to the settings of this function by the SD Manager 3.

2-5. Self-Test

F3SG-SRA	✓
F3SG-SRB	✓

2-5-1. Overview

The F3SG-SR performs the Self-Test when power is turned ON (within 3 s) to check for errors. Also, it regularly performs the Self-Test (within a response time) while operating. This function cannot be cancelled.

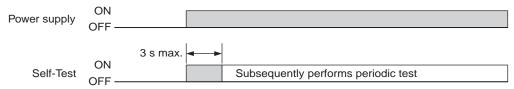

If an error is found in the Self-Test, the F3SG-SR enters the LOCKOUT state, keeps the safety outputs in the OFF state, and indicates the error at the same time.

2-5-1-1. Self-Test details

The Self-Test detects such error as described below.

Emitter


- · Failure of emitter unit or circuit
- CPU failure
- · Memory failure
- Failure of DIP Switch

Receiver

- · Abnormal external power supply voltage
- Failure of internal power supply circuit
- Failure of receiver unit or detection circuit
- CPU failure
- Memory failure
- · Failure of safety output circuit
- Disconnected or short-circuited cable
- Failure of DIP Switch
- Failure of End Cap

2-5-1-2. Waveform of safety outputs

When the safety outputs are in the ON state, they are cyclically turned OFF as shown below to test the output circuit. When this OFF signal is fed back, the output circuit is diagnosed as normal. If the output signal does not include an OFF pulse signal due to short-circuit, etc, the receiver diagnoses a failure in the output circuit or wiring, and it enters the LOCKOUT state.

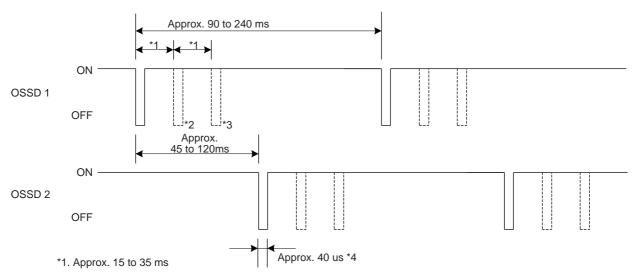

- *2. Signal when in 2-segment or 3-segment cascade.
- *3. Signal when in 3-segment cascade.
- *4. An OFF pulse signal of safety outputs may extend to about 100 µs due to the effect of the connected load (mostly capacitive load).

2-6. External Test

F3SG-SRA	✓
F3SG-SRB	✓

2-6-1. Overview

This function stops the emission using an external signal. It can be used to verify that a safety system should properly stop (safety outputs turn OFF) when F3SG-SR is blocked.

To stop the emission, apply the following voltage to the emitter's TEST line.




When the Muting is active, kept ON even if the emission is stoped.

Light emission stop condition (TEST input wire)	Input voltage
Emission stops when connecting with 24 VDC.	Vs-3 to Vs
Emission stops when connecting with 0 V.	0 to 3 V


■ Basic wiring diagram

Emission stops when connecting with 24 VDC.

Emission stops when connecting with 0 V.

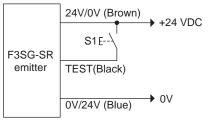


S1: Test switch (Connect the line to 0 V if this switch is not required.)

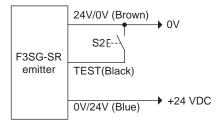


S2: Test switch (Connect the line to +24 VDC if this switch is not required.)

■ Timing chart

Emission stops when connected to 0 VDC:

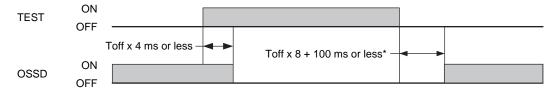

Emission stops when connected to 24 VDC:

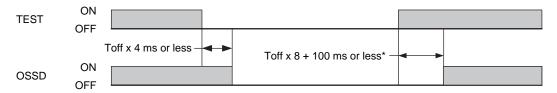

^{*} Toffx8 + 100 ms or less is the value when the Optical Synchronization is used. When the Wired Synchronization is used, the time is Toff x 8 ms or less.

Toff: ON to OFF response time

2-6-2. Factory Default Setting

External Test Signal Inverted is disabled. The emission stop condition can be selected by setting if enabling or disabling the external test input inversion to the PNP/NPN selection. Refer to the table below.

External Test Signal Inversion *1	Emission stops condition	
External rest Signal inversion	PNP setting *2	NPN setting *2
Enable (factory default setting)	Emission stops when connected to 24 VDC	Emission stops when connected to 0 VDC
Disable	Emission stops when connected to 0 VDC	Emission stops when connected to 24 VDC

^{*1.} The user can make changes to the settings of this function by the SD Manager 3.

2-6-3. Setting with Intelligent Tap

This function cannot be used when connecting the Intelligent Tap to F3SG-SR.

2-6-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function name	Initial value	Configurable value
External Test Signal Inversion	Disable	Enable/Disable



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

^{*2.} The user can make changes to the settings of this function by wiring.

2-7. Lockout Reset

F3SG-SRA	✓
F3SG-SRB	✓

When the cause of the LOCKOUT state is removed, you can release the LOCKOUT state of the F3SG-SR by using either of the following methods.


- Cycle the power back ON
- Reset input


The resetting method by the reset input depends on the setting of PNP/NPN Selection as follows.

PNP	NPN
Open or apply 0 V to 1/2 Vs to the RESET line (yellow) for 1 s or longer, and then apply a voltage of Vs-3 V to Vs again.	Open or apply 1/2 Vs to Vs to the RESET line (yellow) for 1 s or longer, and then apply a voltage of 0 to 3 V again.

■ Basic wiring diagram


• External Device Monitoring not used and in Manual Reset mode

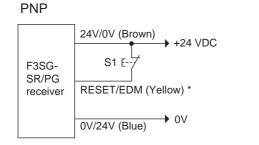

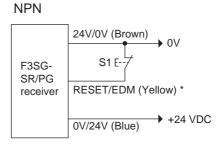

S1: Lockout or interlock reset switch

■ Timing chart

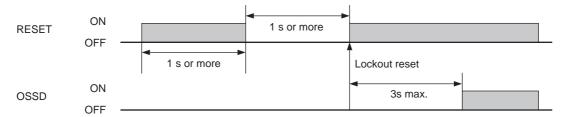

The table below shows the relation between the ON/OFF states and external lines.

Input	External connection	
Input	PNP	NPN
ON	Vs-3 V to Vs	0 to 3 V
OFF	0 V to 1/2 Vs, or open	1/2 Vs to Vs, or open

^{*}Also used as Lockout Reset input line.

2-8. Interlock

∕!\ WARNING

Install a protective structure so that the hazardous part of a machine can only be reached by passing through the sensor's detection zone. If access to the hazardous part by reaching over the detection zone of a vertically mounted F3SG-SR cannot be excluded, the height of the detection zone and the safety distance shall be determined in consideration of such a risk. Install the sensors so that part of the person is always present in the detection zone when working in a machine's hazardous zones. If a person is able to step into the hazardous zone of a machine and remain behind the F3SG-SR's detection zone, configure the system with Restart Interlock function. Failure to do so may result in serious injury due to unexpected startup.



Install the reset switch in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone.



F3SG-SRA	✓
F3SG-SRB	✓

2-8-1. Over view

The F3SG-SR turns the safety outputs OFF when its power is turned on or the F3SG-SR is blocked and holds this state until a RESET signal is received. This state is called "INTERLOCK state". The function to keep the INTERLOCK state is called "Interlock function". The SEQ indicator is illuminated in yellow in the INTERLOCK state.

The F3SG-SR has two Interlock functions, Start Interlock and Restart Interlock.

Start Interlock

The F3SG-SR turns the safety outputs OFF at power-on or recovery from power failure and keep this state until a reset signal is received. This is useful when you keep the machine stopped until a preoperation check is completed after the power is turned ON.

Restart Interlock

The F3SG-SR turns the safety outputs OFF when the F3SG-SR is blocked and keep this state until a reset signal is received. Restart interlock is useful when you restart the machine being stopped upon blocking the F3SG-SR, only after the operator confirms a safe condition.

The F3SG-SR has three ways to reset the INTERLOCK state: Auto Reset, Manual Reset, and Pre-Reset applicable to specific applications. Refer to 2-9. Pre-Reset for more information.

Auto Reset mode

In the Auto Reset mode, the Start Interlock and Restart Interlock are disabled. When the blocking object is removed from the detection zone, the INTERLOCK state is automatically released and the safety outputs are automatically turned ON. The Auto Reset mode is desirable for application where a worker is not able to enter the area between the detection zone and the hazardous part of the machine or you use a relay unit to activate Start Interlock and Restart Interlock.

Manual Reset mode


In the Manual Reset mode, the Start Interlock and the Restart Interlock are enabled. When a reset signal is given while no blocking object exists in a detection zone, the safety outputs are turned ON.




Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.


Basic wiring diagram


• Auto Reset mode

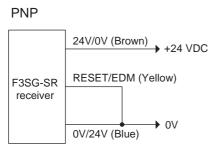

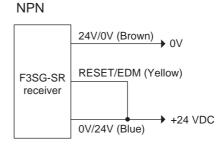

Manual Reset mode

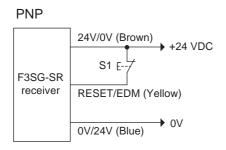

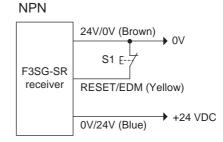


S1: Lockout or interlock reset switch

The table below shows the relation between the ON/OFF states and external lines.

Input	External Connection	
IIIput	PNP NPN	
ON	Vs-3 V to Vs	0 to 3 V
OFF	0V to 1/2 Vs, or open	1/2 Vs to Vs, or open

■ Timing chart


Start Interlock

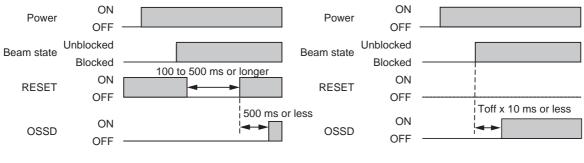

Start Interlock: Enabled

Start Interlock: Disabled

Restart Interlock

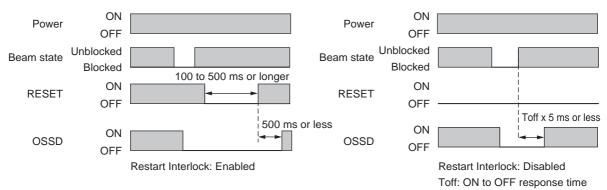

* The minimum pressing time of reset switch can be changed using SD Manager 3.

2-8-2. Factory Default Setting

The start interlock and restart interlock are disabled, so the sensor operates as the auto reset mode.

2-8-3. Setting with Intelligent Tap

Auto reset or manual reset can be configured using Positions 4 and 5 of the DIP Switch on the Intelligent Tap.

When the Manual Reset mode is configured, start Interlock and Restart Interlock are enabled.

Refer to 3-4. LED Indicators on Intelligent Tap for more information.

- Minimum pressing time of reset switch*: 100 ms (factory default setting)
- * By using SD Manager 3, the time can be set by 100 ms in a range of 100 to 500 ms.



Make sure the Position 2 of the DIP Switch is set at ON (DIP Switch Enabled) to activate the settings by the DIP Switch.



Refer to Chapter 3 Setting with Intelligent Tap for more information on setting this function by the Intelligent Tap.

2-8-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function	Initial value		Configurable value or
Function	When muting enabled *	When muting disabled *	numerical range
Start interlock	Disabled	Disabled	Enabled/disabled
Restart interlock	Disabled	Disabled	Enabled/disabled
Minimum pressing time of reset switch	100 ms	100 ms	100-500 ms (by 100 ms)

For this function, setting parameters are kept individually in each case that the muting function is set enabled or disabled. When changing of the muting state from enabled to disabled or vice versa using SD Manager 3, confirm the setting of this function again.

For details, refer to Considerations for enabling and disabling Muting function with SD Manager 3 of 2-1. Combination of Functions.



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



/[Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-9. Pre-Reset

⚠ WARNING

Install the pre-reset switch always in the hazardous zone and where it cannot be activated from outside the hazardous zone.



F3SG-SRA	✓
F3SG-SRB	✓

2-9-1. Overview


An operator may enter and work in the hazardous zone for maintenance.

Under such a circumstance, another operator may press the reset switch to restart the machine without recognizing the operator working in the hazardous zone, posing a danger. The Pre-Reset function ensures safety for an operator working in the hazardous zone by adding another reset switch (pre-reset switch) in the hazardous zone.

If the Pre-Reset function is enabled, an operator can work in the hazardous zone and press the prereset switch installed in the hazardous zone, pass the sensor, and press the reset switch to restart the machine.

Shown below is overview of restarting the machine using the Pre-Reset. (Example of the maximum number of times the F3SG-SR can be blocked is set at 1)


- 1. Press the pre-reset switch. (Input a PRE-RESET signal.)
- 2. Pass and block the F3SG-SR.
- 3. Press the reset switch to restart the system. (Input a RESET signal.)

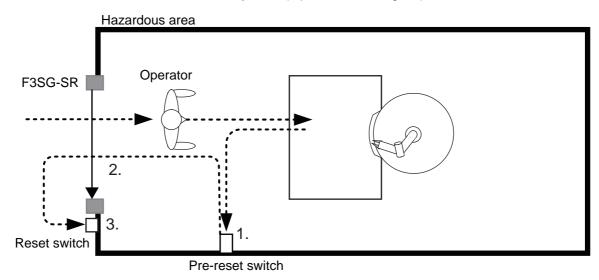

Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

■ Basic wiring diagram

• Pre-Reset mode

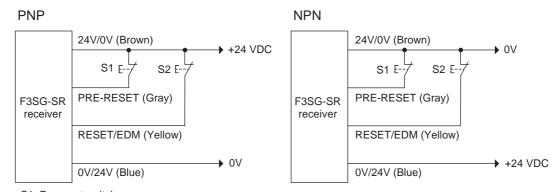


S1: Pre-reset switch S2: Lockout or interlock reset switch

The table below shows the relation between the ON/OFF states and external lines.

Input	External connection	
IIIput	PNP NPN	
ON	Vs-3 V to Vs	0 to 3 V
OFF	0V to 1/2 Vs, or open	1/2 Vs to Vs, or open

■ Timing chart

This is an example of the maximum number of times the F3SG-SR can be blocked is set at 1.

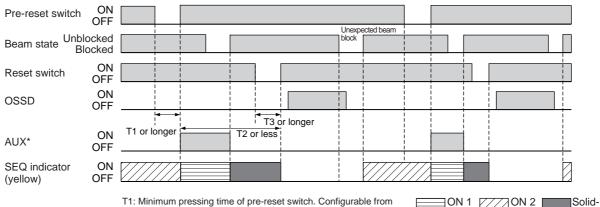

- T1: Minimum pressing time of pre-reset switch. Configurable from 100 to 500 ms in 100-ms increments. T3 = T1
- T2: Maximum permissible time from input of PRE-RESET signal to input of RESET signal. Configurable from 8 to 60 s in 1-s increments.
- T3: Minimum pressing time of reset switch. Configurable from 100 to 500 ms in 100-ms increments.

2-9-2. Factory Default Setting

The Pre-Reset function has been set to disabled.

d times

lon

^{*}When Auxiliary Output is set to Pre-reset Information by the SD Manager 3.

2-9-3. Setting with Intelligent Tap

Configuring the Positions 4 and 5 of the DIP Switch on the Intelligent Tap as Pre-Reset enables the Pre-Reset mode. Refer to 3-4. LED Indicators on Intelligent Tap for more information.

When the Pre-Reset mode is configured, the function is activated with the following conditions:

- Minimum pressing time of the reset switch and pre-reset switch *1: 100 ms (factory default setting)
- Maximum number of times the F3SG-SR can be blocked after input of PRE-RESET signal *2: Infinite (factory default setting) (The F3SG-SR must be blocked at least once.)
- Maximum permissible time from input of PRE-RESET signal to input of RESET signal *3: 8 s (factory default setting)
- *1 By using SD Manager 3, this parameter can be set by 100 ms in a range of 100 to 500 ms. (The minimum pressing time of the pre-reset switch is equal to that of reset switch.)
- *2 By using SD Manager 3, this parameter can be set to no limit or 1 to 9 times by one time.
- *3 By using SD Manager 3, this parameter can be set by 1 s in a range of 8-60 s.



Make sure the Position 2 of the DIP Switch is set at ON (DIP Switch Enabled) to activate the settings by the DIP Switch.



Refer to Chapter 3 Setting with Intelligent Tap for more information on setting this function by the DIP Switch on the

2-9-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function	Initial value	Configurable value or numerical range
Pre-reset function	Disabled	Enabled/disabled
Maximum number of times F3SG can be blocked	0 (infinite)	0 (infinite) / 1-9 times (by time)
Maximum permissible time from input of PRE-RESET signal to input of RESET signal (s)	8 s	1-60 s (by the second)
Minimum pressing time of reset switch *	100 ms	100-500 ms (by 100 ms)

^{*} Set the minimum pressing time of the reset switch and pre-reset switch. The same minimum pressing time is applied to both



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



/[Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-10. PSDI

. ∴ WARNING

To use the F3SG-SR in PSDI mode (initiation of cyclic operation by a presence sensing device), you must configure an appropriate circuit between the F3SG-SR and the machine. For details about PSDI, refer to OSHA 1910.217, IEC 61496-1, and other relevant standards and regulations.



F3SG-SRA	✓
F3SG-SRB	✓


2-10-1. Overview

PSDI (Presence Sensing Device Initiation) is the function that F3SG-SR judges the unblocked/blocked state of the detection zone and operates the machine cyclically (repeatedly). Operations of two-hand push button switches are made unnecessary majorly on press machines, so operator's burden can be reduced and machine availability can be improved.

The following two types of PSDI can be realized without using controllers.


• Single break

The press machine of manual loading and automatic unloading is restarted in this mode by blocking of the light curtain and unblocking after that.

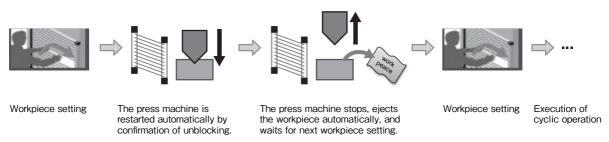


• Double break

The press machine of manual loading and manual unloading is restarted in this mode after blocking and unblocking of the light curtain is repeated twice.

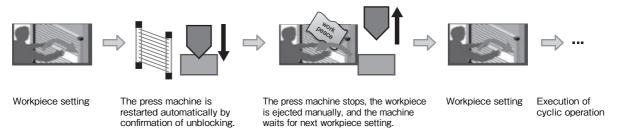

■ Basic wiring diagram

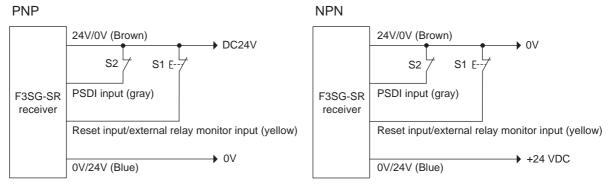

S1: Reset switch


S2: Press position confirmation switch

The table below shows the relation between the ON/OFF state and external connection.

Input	External connection	
Input	PNP NPN	
ON	Vs-3 V to Vs	0 to 3 V
OFF	0V to 1/2 Vs, or open	1/2 Vs to Vs, or open


■ Timing chart

· Single Break

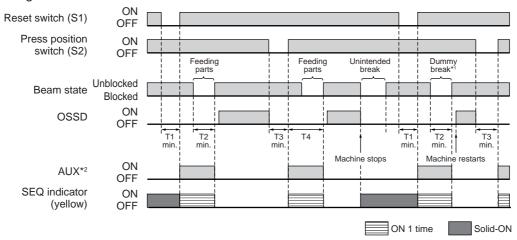

- T1: Minimum pressing time of reset switch, configurable by 100 ms in a range of 100-500 ms
- T2: Minimum break time (300 ms)
- T3: Minimum pressing time of press position switch. T3 = T1
- T4: Wait time until single break is complete (30 s or less)
- *1. When the machine is stopped by unintended block in the middle of pressing of parts, operation of the reset switch (S1) and then a single dummy break are needed for reinitiation of the machine cycle.
- *2. When Auxiliary Output is set to PSDI Information by the SD Manager 3.

· Double Break

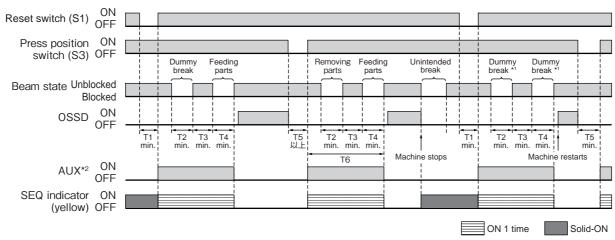

- T1: Minimum pressing time of reset switch, configurable by 100 ms in a range of 100-500 ms
- T2: Minimum break time (300 ms)
- T3: Minimum unblocked time during the time from removing to feeding parts. T3 = T1
- T4: Minimum break time (300 ms)
- T5: Minimum pressing time of press position switch. T5 = T1
- T6: Wait time until double break is complete (30 s or less)
- *1. When the machine is stopped by unintended block in the middle of pressing of parts, operation of the reset switch (S1) and then double dummy break are needed for reinitiation of the machine cycle.
- *2. When Auxiliary Output is set to PSDI Information by the SD Manager 3.

2-10-2. Factory Default Setting

The PSDI function is set disabled.

2-10-3. Setting Change using Intelligent Tap

It is unable to change the setting of this function using the DIP Switch of the Intelligent Tap.

2-10-4. Setting Change using SD Manager 3

The following setting can be made using SD Manager 3.

Function	Initial value	Configurable value or numerical range
PSDI function	Disabled	Disable/Single break/Double break
Minimum pressing time of reset switch *	100 ms	100 to 500 ms in 100-ms increments

^{*} Set the minimum pressing time of the reset switch and pre-reset switch. The same minimum pressing time is applied to both



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



/[] For the details of the setting change using SD Manager 3, refer to Chapter 4 Setting with SD Manager 3.

2-11. External Device Monitoring (EDM)

F3SG-SRA	✓
F3SG-SRB	✓

2-11-1. Overview

This function monitors if external relays (or contactors) operate normally to detect malfunctions, such as welding, in the external relays. When the NC contact of the external relays is open before the safety outputs switch from OFF to ON, the safety outputs remain in the OFF state. When the NC contact is not open within the allowable delay time after the safety outputs switch from OFF to ON, the F3SG-SR enters the LOCKOUT state.


■ Basic wiring diagram

Perform wiring so that the specified voltage is applied to the RESET line via the NC contact of the extenal relays. Refer to the table below for the specified voltage.

The external relays or contactors must have the direct opening mechanism or be force-guided ones.


PNP/NPN	Voltage
PNP	Vs-3 V to Vs
NPN	0 V to 3 V

• In Auto Reset mode

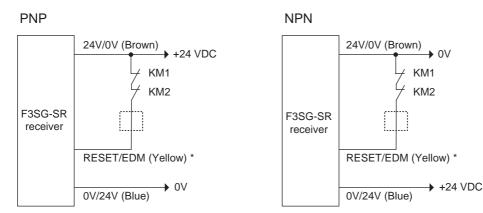

KM1, KM2: External device

• In Manual Reset mode

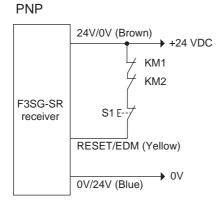


S1: Lockout or interlock reset switch KM1, KM2: External device

PAN 24V/0V (Brown) 0V KM1 KM2 F3SG-SR receiver RESET/EDM (Yellow) 0V/24V (Blue) +24 VDC

^{*}When using a lockout reset switch, connect an NC contact switch to this line in the position shown by the broken line.

■ Timing chart

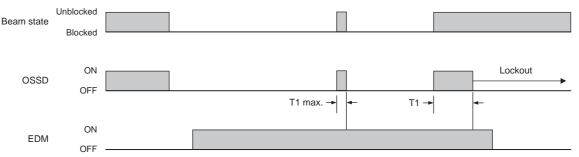

T1: Allowable delay time. This parameter can be set by 0.1 s in a range of 0.1 to 4.0 s.

2-11-2. Factory Default Setting

The EDM function is disabled.

2-11-3. Setting with Intelligent Tap

The user can select the setting from EDM Enabled or Disabled by the DIP Switch. When enabling EDM, the function operates under the following condition.

- Allowable delay time *: 0.3 s (factory default setting)
- * By using SD Manager 3, this parameter can be set by 0.1 s in a range of 0.1 to 4.0 s.



Make sure the Position 2 of the DIP Switch is set at ON (DIP Switch Enabled) to activate the settings by the DIP Switch.



After making the setting, make sure to perform the wiring so that the specified voltage is supplied into the RESET line of the receiver without passing through the NC contacts of the external relays, and confirm the F3SG-SR enters the LOCKOUT state.



Refer to Chapter 3 Setting with Intelligent Tap for more information on setting this function by the Intelligent Tap.

2-11-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function	Initial value		Configurable value or numerical range
runction	Muting function enabled*	Muting function disabled*	Configurable value of flumencal range
EDM	Disable	Disable	Enable/Disable
Allowable delay time	0.3 s	0.3 s	0.1 to 4 s in 0.1-s increments

^{*} Setting parameters of this function is saved according to the states where the Muting function is enabled and disabled, respectively. After changing the Muting function from Enable to Disable or from Disable to Enable with the SD Manager 3, also check the settings of this function again.



Refer to ■ Considerations for enabling and disabling Muting function with SD Manager 3 under 2-1. Combination of Functions for more information.



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



After you make any change to the setting, verify that the F3SG-SR goes to the LOCKOUT state when the F3SG-SR is wired in such a way that the specified voltage is applied directly to the RESET line of the receiver without the NC contact



Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-12. Auxiliary Output

⚠ WARNING

Do not use the output signal of the auxiliary output for safety applications. Failure to do so may result in serious injury when the F3SG-SR fails.



F3SG-SRA	✓
F3SG-SRB	✓


2-12-1. Overview

The Auxiliary Output is used to monitor the status of F3SG-SR. This output can be connected to a device such as an indication lamp, PLC, etc.

Usage Example:

- Indicate that the F3SG-SR is in the MUTING or OVERRIDE state.
- Indicate that a machine is stopped. (Safety outputs are in the OFF state.)

■ Basic wiring diagram

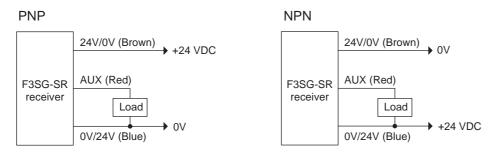




The load current of the auxiliary output is 100 mA max.

2-12-2. Factory Default Setting

It is configured to the inverted signal of the safety outputs.

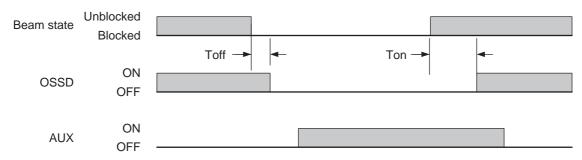


Ton: OFF to ON response time Toff: ON to OFF response time

2-12-3. Setting with Intelligent Tap

The user cannot make any changes to the settings of this function by the DIP Switch on the Intelligent

When the Pre-Reset is enabled by the Dip Switch on the Intelligent Tap, the factory default setting is inverted signal of the safety outputs.

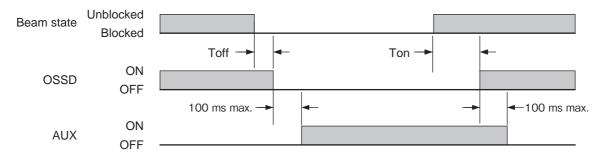

Ton: OFF to ON response time Toff: ON to OFF response time

2-12-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function	Initial	Configurable value or numerical	
Function	Muting enabled *	Muting disabled	range
Output operation mode	Safety output information	Safety output information	*2
Inverted signal output	Enable	Enable	Enable/Disable
Output pattern	Solid-ON	Solid-ON	Solid-ON/ON 1 time *3

^{*1.} Setting parameters of this function is saved according to the states where the Muting function is enabled and disabled, respectively. After changing the Muting function from Enable to Disable or from Disable to Enable with the SD Manager 3, also check the settings of this function again.




Refer to ■ Considerations for enabling and disabling Muting function with SD Manager 3 under 2-1. Combination of Functions for more information.



Refer to 2-13. Muting for more information on settings of the Muting function.

- *2. Refer to the table of Information (Output operation mode) assigned to auxiliary output below.
- *3. Output signal is sent according to the patterns as shown in the output pattern chart below.

Output pattern chart

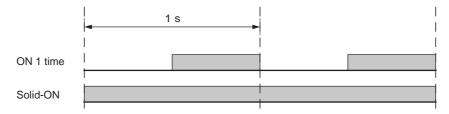

Information (Output operation mode) assigned to auxiliary output

Information Name	Description (Auxiliary output is turned ON under the following condition)
Safety output information	When the safety outputs are in the ON state
Interlock information	Under the INTERLOCK state
Lockout information	Under the LOCKOUT state
Excess power-on time information	When power-on time exceeds power-on time threshold
Excess load switching frequency information	When load switching frequency exceeds load switching frequency threshold
Stable-state information	When light intensity, which is constantly monitored, is 170% or higher of ON-threshold
Muting information	Under the MUTING state
Override information	Under the OVERRIDE state
Muting/Override information	Under either the MUTING or OVERRIDE state
Light level diagnosis information	When the F3SG-SR is unblocked and light intensity is within a range from 100% to 170% of ON-threshold for 10 s or longer
Warning Zone Information	When warning zone is blocked
PSDI Information	When the F3SG-SR is ready to be blocked for feeding or removing parts
Blanking bream unblocked information	When Fixed-Blanking or Floating Blanking beams are unblocked
Troubleshooting support signal	When one of the signals of Sequence error information, Interference/vibration information and Light level diagnosis information is in the ON state.
Designated beam output information	When a designated beam is blocked or unblocked
Sequence error information	Under the MUTING SEQUENCE ERROR state or the INTERLOCK SEQUENCE ERROR state
Reset-input information	When RESET/EDM/Override input is in the ON state
Mute A input information	When MUTE A input is in the ON state
Mute B input information	When MUTE B input is in the ON state
EDM input information	When EDM signal input is in the ON state
Individual cascaded sensor output (Channel 1)	When the safety outputs of the primary sensor in cascade connection are in the ON state
Individual cascaded sensor output (Channel 2)	When the safety outputs of the 1st secondary sensor in cascade connection are in the ON state
Individual cascaded sensor output (Channel 3)	When the safety outputs of the 2nd secondary sensor in cascade connection are in the ON state
Blanking/Warning-zone information	When Fixed Blanking, Floating Blanking, Reduced Resolution or Warning Zone function is enabled
Instantaneous block information	When the F3SG-SR system stops accidentally due to interference or vibration. (In case of cascade connection, when any of cascaded segments comes under this condition.)
Pre-reset Information	Under Pre-reset state
Communication quality diagnosis information	Assigned when retry occurs in communications due to noise or short-circuit of the communication line.
Recoverable error information	Assigned when a recoverable error occurs.
Replacement-recommended error information	Assigned when a replacement-recommended error occurs.
No assignment (function OFF)	This function is disabled.



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-13. Muting

! WARNING

The Muting and Override functions disable the safety functions of the device. Especially setting the Muting Time Limit parameter to infinite may cause the safety functions to be disabled for a long time. Install the F3SG-SR, muting sensor and physical barrier and configure time settings for Muting and Override so that an operator should not enter hazardous zone when the Muting and Override are active.



Install muting sensors so that they can distinguish between the object that is being allowed to pass through the detection zone and a person. If the Muting function is activated by the detection of a person, the machine may not stop operating, resulting in serious injury.



Muting lamps that indicate the state of the Muting and Override functions must be installed where they are clearly visible to workers from all the operating positions.



Use two independent input devices for muting inputs. Failure to do so may cause the MUTING state due to a single muting sensor's failure.



F3SG-SRA	✓
F3SG-SRB	✓

2-13-1. Overview

Muting function temporarily disables safety function of the F3SG-SR, keeping safety outputs ON even if beams are blocked. This makes it possible to install safety light curtains for AGV passage, enabling both safety and productivity. When muting is active, the area beam indicator (ABI) *1 or the TOP/BTM indicator blinks to notify people around the sensor that the safety functions are disabled.

The following three operation modes are available for the Muting function.

- 1. Standard Muting mode (factory default setting)
- 2. Exit-Only Muting mode
- 3. Position Detection Muting mode
- *1 F3SG-SRA is applicable.
- *2 F3SG-SRB is applicable.




/[] Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

The following settings are available for a beam range to be muted.

- Full zone muted (factory default setting)
- Partial zone muted

Dynamic Muting

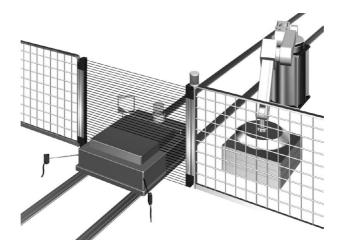

Using muting function

<Muting sensor>

The muting sensor is the sensor to trigger a signal to temporarily disable the safety functions of the F3SG-SR. You can use a photoelectric sensor of through-beam type or reflective type proximity switch, or limit switch. (Recommended: OMRON E3Z series, E2E series (3-wire type), D4N series) Use a 3-wire type transistor output, which is the same as the output type of the F3SG-SR, or NO type contact. Two-wire type sensor must not be used.

The Intelligent Tap is necessary when using the Muting with the F3SG-SR in the Wiring Synchronization.

The Intelligent Tap cannot be used when using the Muting with the F3SG-SR in the Optical Synchronization.



When the F3SG-SR is in PNP settings, use the muting sensor of the PNP transistor type.

When the F3SG-SR is in NPN settings, use the muting sensor of the NPN transistor type.

<Muting lamp>

You may need a muting lamp depending on your application or as a result of a risk assessment analysis. Before determining the use of the muting lamp, check laws and regulations of the country or region where the F3SG-SR is used and make sure of full compliance with them. For the muting lamp, use a commercially available external indicator.

The external indicator can be connected to the auxiliary output.



For settings of the auxiliary output, see 2-12. Auxiliary Output.

<LED indicator statuses>

Area beam indicator (ABI) *1	Blinks under the MUTING or OVERRIDE state.
TOP/BTM indicator *2	
SEQ indicator	Blinks during a muting sequence error.
CFG indicator	If the Dynamic Muting function is enabled, the indicator blinks while measuring the workpiece height.
	If the Dynamic Muting function is enabled, the indicator turns on after the new muting zone is determined.

^{*1} F3SG-SRA is applicable.

^{*2} F3SG-SRB is applicable.



/ For muting error indication, see 8-1-3-3. Muting Sequence Error Indication.



For dynamic muting, see 2-13-5. Dynamic Muting.



For the use in conjunction with other functions, see 2-1. Combination of Functions.

<Muting zone range>

You can specify a detection zone to be muted within the detection zone of the F3SG-SR.

Muting zone range	Description		
Full zone muted	Full area of the detection zone is muted.		
(factory default setting)	This allows the safety function to be disabled in the full detection zone. This is a typical usage.		
Partial zone muted	A specified area in the detection zone configured by the SD Manager 3 is muted. This can be used if you want to disable the safety function only in a specific area of the detection zone. Setting the full detection zone for the muting zone allows the full zone to be muted.		
Dynamic Muting	This can be used by enabling the Dynamic Muting function. The full detection zone is muted for a certain time period from the start of the muting, then a partial zone is muted depending on the detected workpiece size. 2-13-5. Dynamic Muting		

2-13-2. Standard Muting Mode

2-13-2-1. Overview

The factory default setting is set to this mode.

Turning the muting inputs A and B ON with time difference enables the Muting state.

■ Start Conditions

If both of the following two conditions are satisfied, the MUTING state is enalbed.

- 1. No blocking object is found in the F3SG-SR's detection zone, and safety outputs are ON.
- 2. After the muting input A is turned ON*, the muting input B is turned ON* within the range between the muting input time limit values T1min (0.1 s) and T1max (4 s).
 - *PNP setting: Vs-3V to Vs, NPN setting: 0 to 3V

The MUTING state can be enabled in up to 80 ms after the condition No.2 is satisfied.

When the condition No.1 is satisfied but the time requirement of the condition No.2 is not, a muting sequence error occurs and the SEQ indicator on the receiver blinks. However, when there is a muting sequence error, the F3SG-SR does not enter the MUTING state but it continues the normal operation with the safety function enabled.



For muting error indication, see 8-1-3-3. Muting Sequence Error Indication.

The Muting error state can be released by any of following conditions:

- 1. Correct initial muting condition continues for 0.1 s or longer. *
- 2. Power cycle when the muting inputs A and B are in the OFF state.
- * The correct initial muting condition is the state where the following two conditions are satisfied.
 - Safety outputs of the F3SG-SR are turned ON.
 - Muting input A and B are turned OFF.

■ End conditions


If either of the following conditions is satisfied, the MUTING state is released.

- The muting input A or B turns OFF for the maximum allowable muting signal interruption of T3 (at least 0.1 s: configurable) or longer.
- The duration of the MUTING state exceeds the muting time limit of T2 (at least 60 s: configurable).



The MUTING state is also released when the F3SG-SR enters the LOCKOUT state.

■ Timing chart

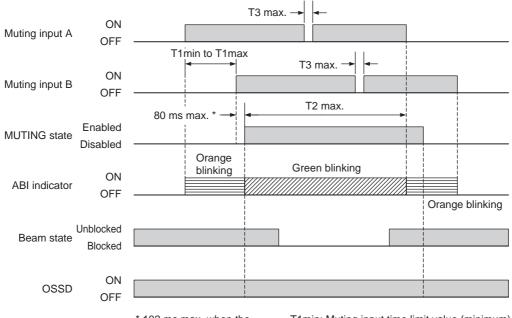

* 102 ms max. when the Intelligent Tap is connected to the F3SG-SR. T1min: Muting input time limit value (minimum)


T1max: Muting input time limit value (maximum) T2: Muting time limit

T3: Maximum allowable muting signal interruption

■ Factory default setting

Variable	Variable name	Value	Description
T1min	Muting input time limit value (minimum)	0.1 s	Minimum time difference between muting inputs A and B. If the time difference between muting inputs A and B is smaller than this value, a muting sequence error occurs.
T1max	Muting input time limit value (maximum)	4 s	Maximum time difference between muting inputs A and B. If the time difference between muting inputs A and B is larger than this value, a muting sequence error occurs.
T2	Muting time limit	60 s	The duration time of the Muting function. The MUTING state is cancelled if it continues for longer than this time limit.
Т3	Maximum allowable muting signal interruption	0.1 s	Maximum duration of a signal interruption allowed in muting inputs A and B.

■ Basic wiring diagram

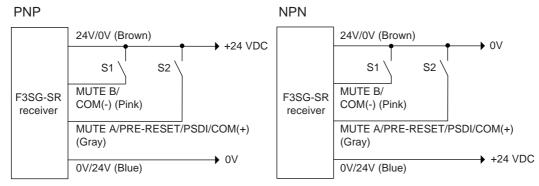

S1, S2: Muting sensor

Installation requirements for muting sensors


- Set the muting sensors so that they can detect all of the passing detection (palettes, automobiles, etc.). Do not install the muting sensor in a position so that only the front or rear end of the objects is detected.
- Set the muting sensors so that they detect the objects even when they are loaded on palettes or other transport devices.
- Also, install the F3SG-SR and muting sensors so that each object passes through all muting sensors before the next object arrives at the first muting sensor. Also, install all F3SG-SRs and muting sensors so that no person is able to accidentally enter the hazardous zone while the muting function is enabled.
- If objects' speeds can vary, the allocation of muting sensors must be taken into consideration.
- Install muting sensors so that they can distinguish between the object that is being allowed to be passed through the detection zone and a person.

2-13-2-2. Installation Example 1 of Standard Muting Mode (Using Two Muting Sensors)

This is an example of two retro-reflective type photoelectric sensors used as muting sensors installed in a cross pattern.

Use two sensors when the length L of the workpieces are not constant or are insufficient.

1 Before a workpiece passes through

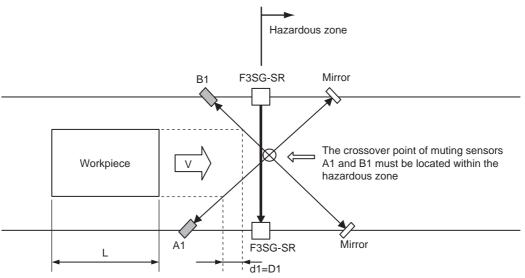


- L: Length of workpiece
- d1: Maximum distance required for the muting sensor to keep the muting function enabled
- D1: Minimum distance required for the muting sensor to keep the muting function enabled

The output state of the muting sensors A1 and B1 are both OFF, and the safety function of the F3SG-SR is enabled.


In this example where two muting sensors are used, the crossover point of the muting sensors A1 and B1 is in the hazardous zone. This configuration prevents the Muting function from being enabled by a person passing through the crossover point.

2. MUTING started

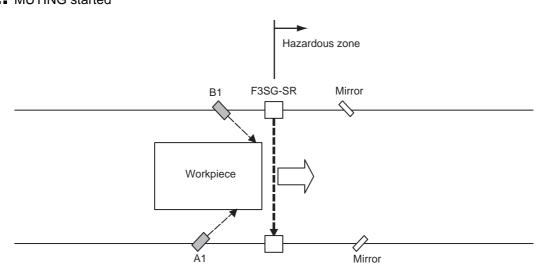


When the muting sensors A1 and B1 are turned ON in this order, the F3SG-SR enters the MUTING state. In this state, the safety function of F3SG-SR is disabled.

3. MUTING is maintained

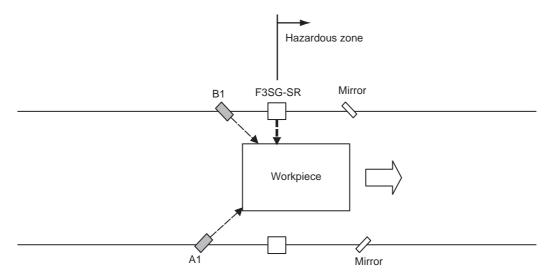

The F3SG-SR is blocked but the safety function is disabled due to MUTING, and the OSSD 1 and 2 are turned ON.

4. MUTING is released

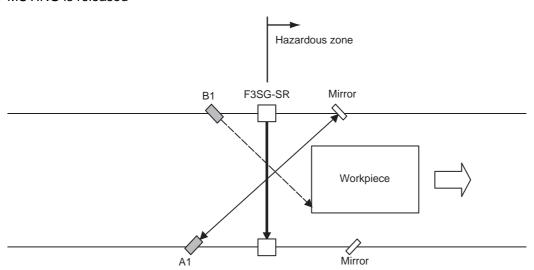

The muting sensor A1 is turned OFF, the Muting state is released, and the safety function of the F3SG-SR is enabled.

■ Installation distance

The minimum distance, D1 [m], required for muting sensors to keep MUTING enabled is:

D1 < L Formula (1) L [m]: Length of a workpiece

The maximum distance, d1 [m], required for muting sensors to keep the MUTING state enabled is:

 $V \times T1min < d1 < V \times T1max \dots$ Formula (2)

V [m/s]: Approach speed of a workpiece

T1min [s]: Muting input time limit value (minimum). It is set as 0.1 s. It can be changed.

T1max [s]: Muting input time limit value (maximum). It is set as 4 s. It can be changed.


To enable the MUTING state, D1 and d1 must satisfy formulas (1) and (2), respectively.

This distance must prevent the MUTING state from being enabled by a person passing through the muting sensors.


Also, install the F3SG-SR and muting sensors so that each workpiece passes through all muting sensors before the next workpiece arrives at the first muting sensor.

■ Wiring diagram (PNP)

Using a photoelectric sensor as a muting sensor

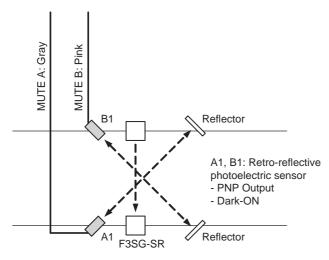


Using an NO contact type switch as a muting sensor

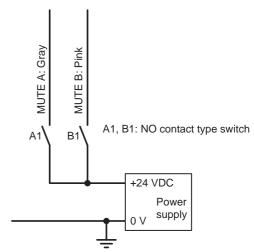

Note. Two-wire type muting sensor cannot be used.


■ Timing chart

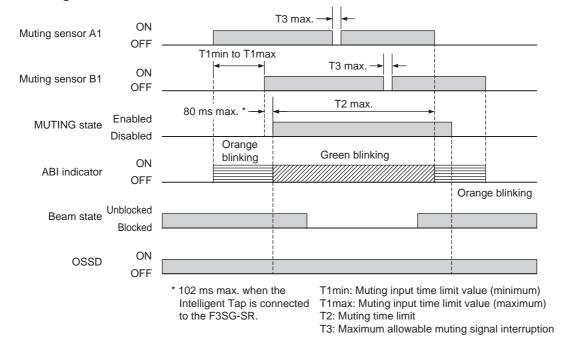

■ Installation Example 2 of Standard Muting Mode (Using Four Muting Sensors)

This installation example uses four through-beam type photoelectric sensors as muting sensors. The use of four muting sensors is useful when the length of the workpieces is constant or longer, and the entrance and exit have enough space. Muting can be activated from both directions in the arrangement as shown below.


1. Before a workpiece passes through

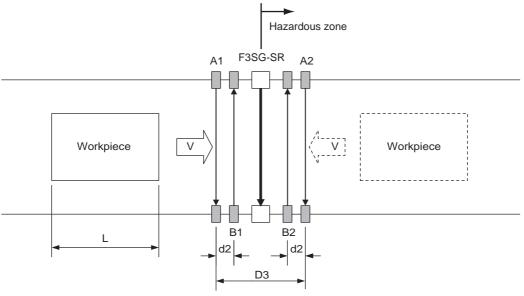

- L: Length of workpiece
- d2: Maximum distances required for the muting sensor to keep the muting function enabled
- D3: Minimum distance required for the muting sensor to keep the muting function enabled


All muting sensors are turned OFF and the safety function of the F3SG-SR is enabled.

2. MUTING started

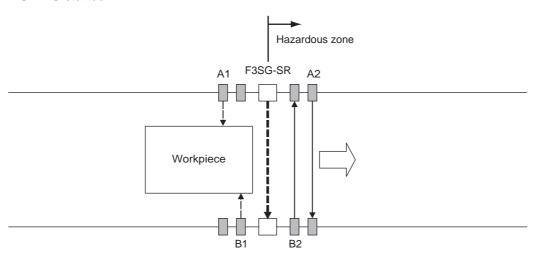


When the muting sensors A1 and B1 are turned ON in this order, MUTING starts. In this state, the safety function of F3SG-SR is disabled.

3. MUTING is maintained

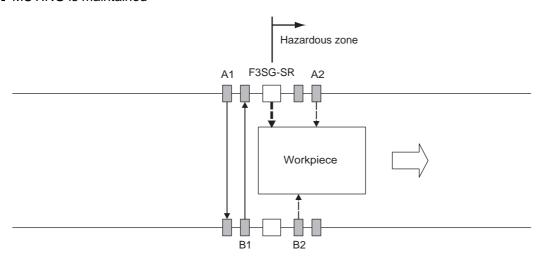

The muting sensors A1 and B1 are turned OFF but A2 and B2 are ON, so the MUTING state is still maintained. The OSSD 1 and 2 are turned ON.

4. MUTING is released

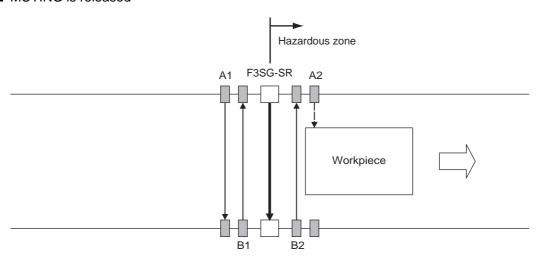

The muting sensor B2 is turned OFF, the MUTING state is released, and the safety function of the F3SG-SR is enabled.

■ Installation distande

The minimum distance, D3 [m], required for muting sensors to keep MUTING enabled is:


D3 < L Formula (3) L [m]: Length of a workpiece

The maximum distance, d2 [m], required for muting sensors to keep MUTING enabled is :

V x T1min < d2 < V x T1max Formula (4) V [m/s] : Approach speed of a workpiece

T1min [s] : Muting input time limit value (minimum). It is set as 0.1 s. (configurable) T1max [s] : Muting input time limit value (maximum). It is set as 4 s. (configurable)


To enable the MUTING state, D3 and d2 must satisfy formulas (3) and (4), respectively. This distance must prevent the MUTING state from being enabled by a person passing through the muting sensors. Also, install the F3SG-SR and muting sensors so that each workpiece passes through all muting sensors before the next workpiece arrives at the first muting sensor.

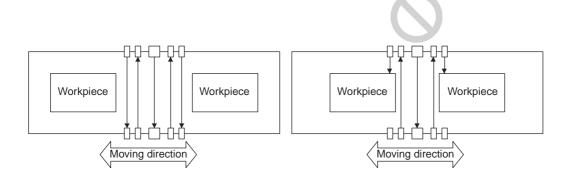

■ Wiring diagram (PNP)


Using a photoelectric sensor as a muting sensor

Using an NO contact type switch as a muting sensor (PNP)

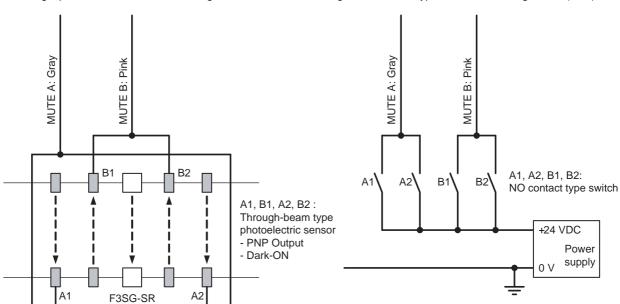

Note. Two-wire type muting sensor cannot be used.


■ Timing chart

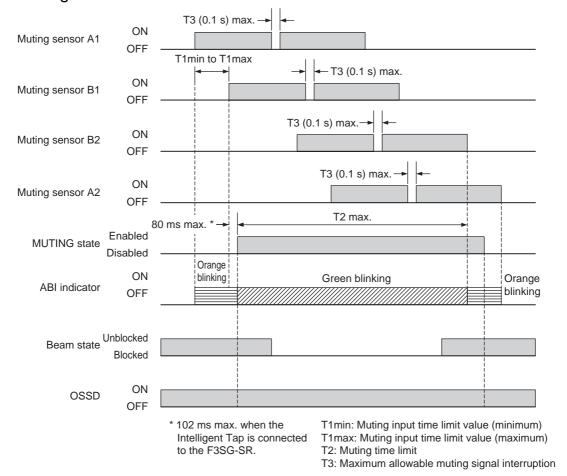

■ Reference: Preventing light interference of muting sensor

When a photoelectric sensor is used as a muting sensor, light interference may cause a muting error of the F3SG-SR.

The cause and measures for light interference are shown as follows:

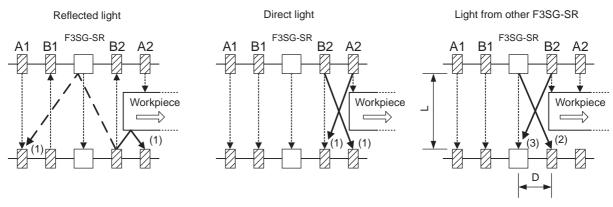

(1) Interference between muting sensors

- ullet Use sensors with mutual interference prevention (such as retro-reflective E3Z-R $\Box\Box$ series)
- Use laser-type sensors (such as laser-type E3Z-LR□ series)
- Take distance from a sensor causing the interference
- Displace beams for each other to prevent interference (change installation height or place them crosswise)
- · Install a physical barrier
- Attach interference prevention filter (provided for E3Z series as accessories)
- Attach a slit to reduce light intensity (provided for E3Z series as accessories)
- · Lower the sensitivity

- Reduce a distance between a workpiece and a muting sensor to prevent reflected light from a workpiece
- (2) Interference to a muting sensor from the F3SG-SR
 - Take distance (D) from a sensor causing the interference
 - Displace beams for each other to prevent interference (change installation height or place them crosswise)
 - · Install a physical barrier
 - Arrange sensors in alternation
 - · Lower the sensitivity
- (3) Interference to the F3SG-SR from a muting sensor
 - Use a red LED type sensor (such as retro-reflective E3Z-R□□ series)
 - Use laser-type sensors (such as laser-type E3Z-LR□ series)
 - Take distance (D) from a sensor causing the interference
 - Displace beams for each other to prevent interference (change installation height or place them crosswise)
 - Install a physical barrier
 - Arrange sensors in alternation
 - Attach a slit to reduce light intensity (provided for E3Z series as accessories)

Mutual interference between a muting sensor and F3SG-SR in (2) and (3) above can be prevented by configuring D satisfying a formula shown below:

- If L = 0.3 to 3 m, D = 0.26 m or larger
- If L = 3 m or larger, D = L x tan5° = L x 0.088 m or larger
- L: Distance between an emitter and a receiver of the F3SG-SR
- D: Distance between a muting sensor and a F3SG-SR

2-13-3. Exit-Only Muting Mode

2-13-3-1. Overview

Turning the muting inputs A and B ON with time difference enables MUTING. Difference from Standard Muting mode exists in the muting completion condition.


■ Start conditions

If both of the following two conditions are satisfied, the MUTING state is enalbed.

- 1. No blocking object is found in the F3SG-SR's detection zone, and the safety outputs are ON.
- 2. After the muting input A is turned ON*, the muting input B is turned ON* within the range between the muting input time limit values T1min (0.1 s) and T1max (4 s).
 - *PNP setting: Vs-3V to Vs, NPN setting: 0 to 3V

The MUTING state can be enabled in up to 80 ms after the condition No.2 is satisfied.

If the condition No.1 is satisfied but the time requirement of the condition No.2 is not, a muting error occurs, and the SEQ indicator on the receiver turns ON. However, when there is a muting error, the F3SG-SR continues the normal operation with the safety function enabled.

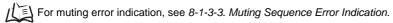

The Muting error state can be released by any of following conditions:

- 1. Correct initial muting condition continues for 0.1 s or longer. *
- 2. Power cycle when the muting inputs A and B are in the OFF state.
- * The correct initial muting condition is the state where the following two conditions are satisfied.
 - Safety outputs of the F3SG-SR are turned ON.
 - Muting input A and B are turned OFF.

■ End conditions


If any of the following condition is satisfied, the MUTING state is released.

- When a workpiece passes the muting sensor A or B and the exit-only muting delay time (4 s: Can be changed) passes.
- When a workpiece passes the F3SG-SR's detection zone and the muting end wait time (1 s: configurable) passes.
- The duration of the MUTING state exceeds the muting time limit (60 s: configurable).

The MUTING state is also released when the F3SG-SR enters the LOCKOUT state.

■ Timing chart

CHECK!

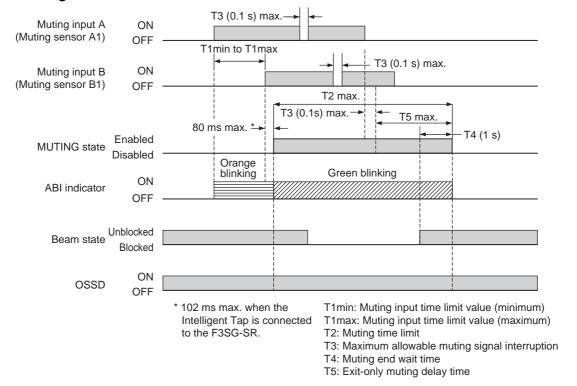


Note. This timing chart shows the case in which the MUTING state was released under the condition of T4 (1 s).

■ Factory default setting

Variable	Variable name	Value	Description
T1min	Muting input time limit value (minimum)	0.1 s	Minimum time difference between muting inputs A and B. If the time difference between muting inputs A and B is smaller than this value, a muting sequence error occurs.
T1max	Muting input time limit value (maximum)	4 s	Maximum time difference between muting inputs A and B. If the time difference between muting inputs A and B is larger than this value, a muting sequence error occurs.
T2	Muting time limit	60 s	The duration time of the Muting function. The MUTING state is cancelled if it continues for longer than this time limit.
Т3	Maximum allowable muting signal interruption	0.1 s	Maximum duration of a signal interruption allowed in muting inputs A and B.
T4	Muting end wait time	1 s	Time difference from when the F3SG-SR is unblocked until the MUTING state is cancelled.
T5	Exit-only muting delay time	4 s	Time difference from when the signal of Muting input A or B is turned OFF until the MUTING state is cancelled.

The MUTING state is also released when the F3SG-SR enters the LOCKOUT state.

■ Basic wiring diagram

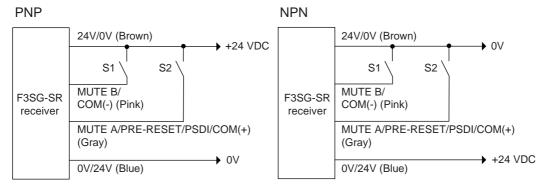


S1, S2: Muting sensor

2-13-3-2. Installation Example of Exit-Only Muting Mode

This is an installation example of the Exit-Only Muting mode. When using the Exit-Only Muting mode, install the muting sensors on the hazardous side of the workpiece exit.


This can be used if a workpiece has a certain length and the hazardous side of the workpiece exit has enough space around it.

1 Before a workpiece passes through

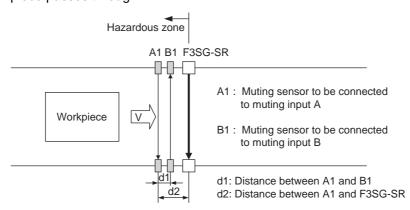


All muting sensors are turned OFF and the safety function of the F3SG-SR is working.

2. MUTING started

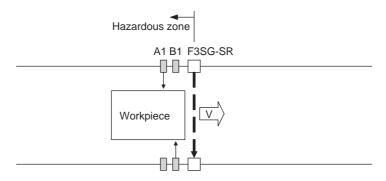


When the muting sensors A1 and B1 are turned ON in this order, and the MUTING state is enabled. In this state, the safety function of F3SG-SR is disabled.

3. Muting state is maintained (Muting sensor A1: OFF)

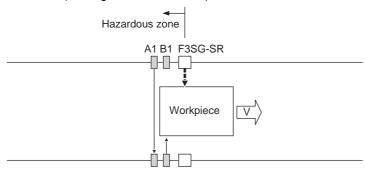


The workpiece has completely passed the muting sensor A1 and the sensor is now in the OFF state. In the Standard Muting mode, the Muting state is released here. In the Exit-Only Muting mode, the F3SG-SR's safety function is disabled for the exit-only muting delay time: T5.

4. Muting state is maintained (Muting sensor B1: OFF)

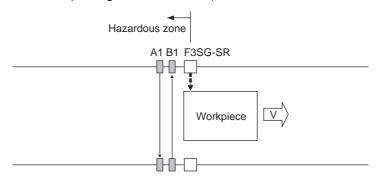

The workpiece has completely passed the muting sensor B1 and the sensor is turned OFF. The F3SG-SR disables its safety function if it is within the exit-only muting delay time.

5. The workpiece passed the F3SG-SR's detection zone

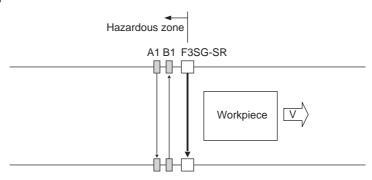

A workpiece has passed the F3SG-SR's detection zone. When the muting end wait time: T4 (1 s: configurable) passes after the F3SG-SR is unblocked, the MUTING state is released.

■ Installation distande

Distances between the muting sensors A1, B1, and the F3SG-SR must be configured based on speed of a workpiece.

Distance d1 between the muting sensors A1 and B1 must satisfy Equations (1) and (2).

Distance d2 between the muting sensor A1 and F3SG-SR must satisfy Equations (3) and (4).

Time t1 [s] to turn the muting sensors A1 and B1 in this order is:

t1 = d1 / VEquation (1)d1 [m]: Distance between muting sensors A1 and B1

V [m/s]: Approach speed of a workpiece

Time t1 in Equation (1) for F3SG-SR to enter MUTING state is within a range shown below:

T1min < t1 < T1maxEquation (2)T1min [s] : Muting input time limit value (minimum)

T1max [s] : Muting input time limit value (maximum)

, (i)

CHECK!

The values of T1min and T1max can be changed by the SD Manager 3.

Time t2 [s] for a workpiece to pass the F3SG-SR's detection zone after passing the muting sensor A1 is:

t2 = d2 / VEquation (3)d2 [m]: Distance between muting sensor A1 and F3SG-SR


V [m/s]: Approach speed of a workpiece

Time t2 in Equation (3) must satisfy following condition: t2 < T5Equation (4)T5: Exit-only muting delay time


CHECK!

The value of T5 can be changed by the SD Manager 3.

Sensors must be installed so that person's passing should not cause the MUTING state. Also, the muting sensors and F3SG-SR must be installed so that MUTING state caused by a workpiece should be ended before the next workpiece arrives at the first muting sensor.

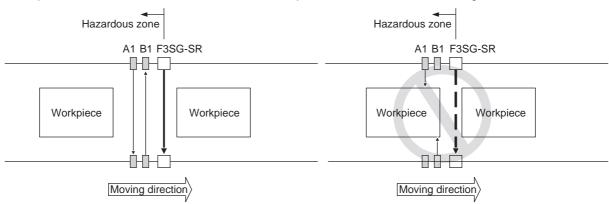

■ Timing chart

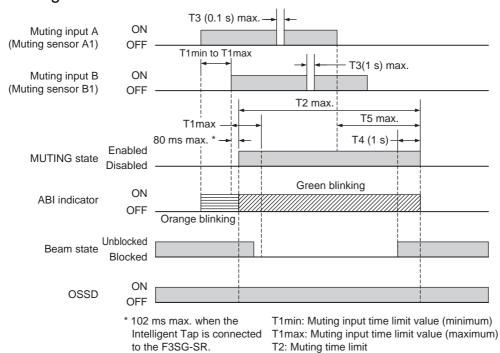

T4: Muting end wait time T5: Exit-only muting delay time

T3: Maximum allowable muting signal interruption

Ε

2-13-4. Position Detection Muting Mode

2-13-4-1. Overview

The MUTING state is enabled when the muting input A turns ON from the OFF state and the muting input B turns OFF from the ON state within the muting input time limit value T1max, measured by a limit switch, etc. Muting inputs must be heterogeneous redundant inputs such as the combination of NO contact and NC contact types. (When using photoelectric sensors of PNP output, use one for Light-ON operation while the other for Dark-ON.) This mode can be used for such a case that the F3SG-SR should be temporarily disabled while a worker puts objects at a loading station.



For the combination of NO and NC contacts, use the NO contact for the muting input A and the NC contact for the muting input B. For the combination of PNP-output photoelectric sensors, use Dark-ON operation for the muting input A and Light-ON operation for the muting input B.

Start conditions

If both of the following two conditions are satisfied, the MUTING state is enalbed.

- 1. No blocking object is found in the F3SG-SR's detection zone, and the safety outputs are ON.
- 2. The duration between when the muting input A is turned ON* from the OFF state and when the muting input B is turned OFF from the ON state* is within the range between the muting input time limit values T1min (0.1 s) and T1max (4 s). Order of muting inputs A and B is irrelevant. *PNP setting: Vs-3V to Vs, NPN setting: 0 to 3V

The MUTING state can be enabled in up to 80 ms after the condition No. 2 is satisfied.

If the condition No. 1 is satisfied but the time requirement of the condition No.2 is not, a muting error occurs, and the SEQ indicator on the receiver turns ON. However, when there is a muting error, the F3SG-SR continues the normal operation with the safety function enabled.



For muting error indication, see 8-1-3-3. Muting Sequence Error Indication.

The Muting error state can be released by any of following conditions:

- 1. Correct initial muting condition continues for 0.1 s or longer. *1
- 2. Power cycle when the muting inputs A and B are in the OFF state.
- *1 The correct initial muting condition is the state where the following two conditions are satisfied.
 - •Safety outputs of the F3SG-SR are turned ON.
 - •Muting input A is turned OFF and Muting input B is turned ON.

■ End conditions


If any of the following conditions is satisfied, the MUTING state is released.

- Muting input A is in the OFF state for T3 or longer (0.1 s or longer).
- Muting input B is in the ON state for T3 or longer (0.1 s or longer).
- The duration of the MUTING state exceeds the muting time limit of T2 (60 s: Can be changed).



The MUTING state is also released when the F3SG-SR enters the LOCKOUT state.

■ Timing chart

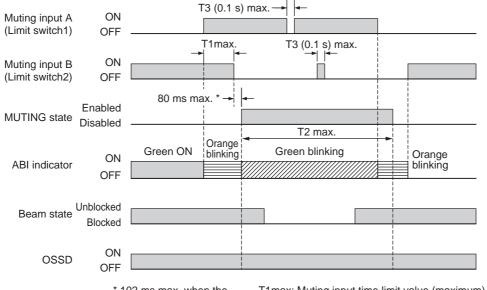

* 102 ms max. when the Intelligent Tap is connected to the F3SG-SR.


T1max: Muting input time limit value (maximum)

T2: Muting time limit

T3: Maximum allowable muting signal interruption

Variable	Variable name	Value	Description
T1max	Muting input time limit value (maximum)	4 s	Maximum time difference between muting inputs A and B. If the time difference between muting inputs A and B is larger than this value, a muting error occurs.
T2	Muting time limit	60 s	The duration time of the Muting function. The MUTING state is cancelled if it continues for longer than this time limit.
Т3	Maximum allowable muting signal interruption	0.1 s	Maximum duration of a signal interruption allowed in muting inputs A and B.

■ Basic wiring diagram

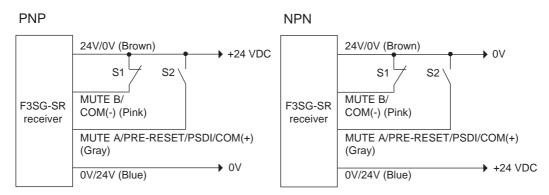


S1, S2: Muting sensor

2-13-4-2. Installation Example of Position Detection Muting Mode

Shown below is an installation example of the Position Detection Muting mode.


This is an application that places a workpiece on a machine's turntable surrounded by guard fence. When hazardous part of the machine is on the opposite side of a human body, the safety function of the F3SG-SR can be disabled so that an operator should be able to place a workpiece on the turntable.

 $oldsymbol{1}$. Hazardous part of the machine is on the same side of a human body

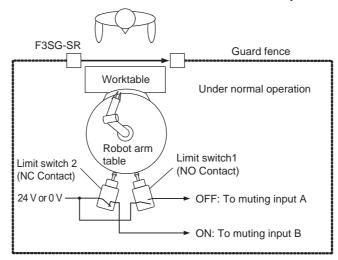


The safety functions of the F3SG-SR is activated with the limit switch 1 being in OFF and the limit switch 2 being ON.

2. Hazardous part of the machine is on the opposite side of a human body

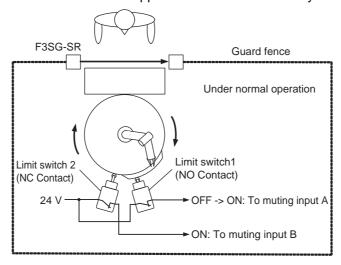

Rotation of a robot arm sets the muting input A from OFF to ON. The safety function of the F3SG-SR is enabled.

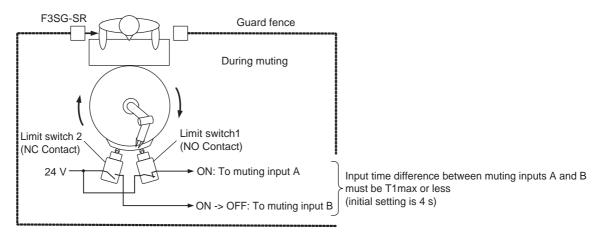

If the duration between when the muting input A is turned ON from the OFF state and when the muting input B is turned OFF from the ON state is within T1max [s], the safety function of the F3SG-SR is disabled.


Time t1 [s] for the F3SG-SR to enter MUTING state is within the range shown below:

t1 < T1max..... Equation (5) T1max [s]: Muting input time limit value (maximum)



The value of T1_{max} can be changed by the SD Manager 3.

■ Timing Chart

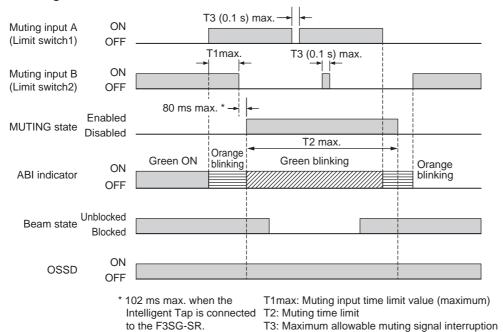

Ε


2-13-5. Dynamic Muting

The Dynamic Muting function can configure a new muting zone while the MUTING state is enabled, based on a result measuring a workpiece height for a certain period of time.

This materializes the safer Muting function with a limited muting zone adjusted according to a workpiece height.

■ Usage example

This function cannot be used for an application in which a workpiece height gets larger after measuring the zone as shown below.

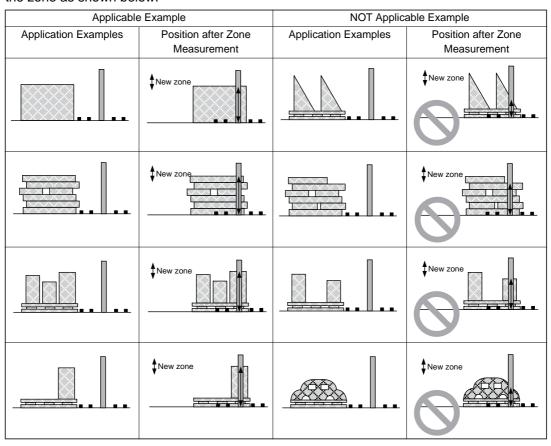

Zone measurement start condition

After the muting start condition is satisfied and the full detection zone is muted, blocking a part of the F3SG-SR causes the Zone Measurement to start.

■ Zone measurement

The Zone Measurement monitors the highest and lowest parts of a passing workpiece during the dynamic muting measurement time Tdyn (3 s: Can be changed). (Void spaces in workpiece(s) are ignored.)


Zone determination

A zone enclosed by the highest and the lowest parts of the workpiece is set as a new muting zone. Configuring a dynamic muting allowable beam allows the muting zone to be expanded by the number of allowable beams. Configuring a dynamic muting allowable beam prevents unintended line stop due to swing of a workpiece, etc. (The factory default setting of the dynamic muting allowable beam is 1.)

■ Dynamic muting allowable beam

The dynamic muting allowable beam allows the muting zone measured by the Zone Measurement to be expanded by the number of additional beam(s) specified as allowable beam.

■ Timing chart

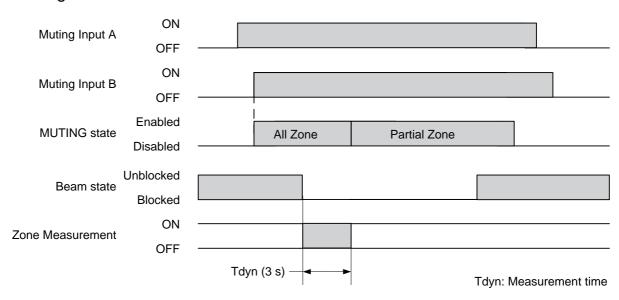

2-13-6. Factory Default Setting

The muting mode is set to Standard Muting Mode and the Dynamic Muting to Disable.

2-13-7. Setting with Intelligent Tap

If the Pre-Reset function is enabled by the DIP Switch, the Muting function is disabled. Otherwise the Muting function is always being enabled.

Refer to Chapter 3 Setting with Intelligent Tap for more information on setting this function by the Intelligent Tap.

2-13-8. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function	Initial value	Configurable value or numerical range
Muting function *	Enable	Enable/Disable
Muting mode	Standard muting mode	Standard Muting (Installation Example1) / Standard Muting (Installation Example2) Exit- only muting mode/Position detection muting mode
Setting by	Manual	Manual/Teach-in
Statistics data recording	Enable	Enable/Disable

^{*}Setting parameters of the following functions is saved according to the states where the Muting function is enabled and disabled with the SD Manager 3, respectively. After changing the Muting function from Enable to Disable or from Disable to Enable, also check the settings of these functions again.

Affected functions: External Device Monitoring (EDM), Start Interlock, Restart Interlock, Auxiliary Output

Refer to 2-26-6. Muting Statistics Information for more information.

Standard Muting mode

Function		Initial value	Configurable value or numerical range
Muting zone	fluting zone Bottom beam		any beam in 1-beam increments
	Top beam		
T1 _{min} : Muting input time limit value (minimum)		0.1 s	0.1 to 3.9 s in 0.1-s increments
T1 _{max} : Muting input time limit value (maximum)		4 s	0.2 to 60 s in 0.1-s increments, or infinite
T2: Muting time limit		60 s	1 to 600 s in 1-s increments, or infinite
T3: Maximum allowable muting signal interruption		0.1 s	0.1 to 20 s in 0.1-s increments

Exit-Only Muting mode

Function		Initial value	Configurable value or numerical range
Muting zone	Muting zone Bottom beam		any beam in 1-beam increments
	Top beam		
T1min: Muting input time I	T1 _{min} : Muting input time limit value (minimum)		0.1 to 3.9 s in 0.1-s increments
T1 _{max} : Muting input time limit value (maximum)		4 s	0.2 to 4 s in 0.1-s increments, or infinite
T2: Muting time limit		60 s	1 to 600 s in 1-s increments, or infinite
T3: Maximum allowable muting signal interruption		0.1 s	0.1 to 4 s in 0.1-s increments
T4: Muting end wait time		1 s	0.1 to 20 s in 0.1-s increments
T5: Exit-only muting delay time		4 s	4 to 20 s in 0.1-s increments

Position Detection Muting mode

Function		Initial value	Configurable value or numerical range
Muting zone	Muting zone Bottom beam		any beam in 1-beam increments
	Top beam		
T1 _{max} : Muting input time limit value(maximum)		4 s	0.2 to 60 s in 0.1-s increments, or infinite
T2: Muting time limit		60 s	1 to 600 s in 1-s increments, or infinite
T3: Maximum allowable	T3: Maximum allowable muting signal interruption		0.1 to 4 s in 0.1-s increments

Dynamic Muting

Function	Initial value	Configurable value or numerical range
Dynamic muting	Disable	Enable/Disable
Dynamic muting measurement time	3 s	1 to 25 s in 0.1-s increments
Number of dynamic muting allowable beams	1	0 to 5 in 1-beam increments



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



Setting the muting time limit to infinite may cause a failure of the muting sensors to go undetected, resulting in the F3SG-SR in an unintended MUTING state. Conduct risk assessment analysis thoroughly before enabling this setting.



Setting the muting input time limit value (maximum) to infinite may cause a failure of the muting sensors to go undetected, resulting in a failure of disabling the MUTING state. Conduct risk assessment analysis thoroughly before enabling this setting.



Dynamic Muting can be used in conjunction with any of Standard, Exit-Only and Position Detection Muting modes.



Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-14. Override

! WARNING

The Muting and Override functions disable the safety functions of the device. Especially setting the Muting Time Limit parameter to infinite may cause the safety functions to be disabled for a long time. Install the F3SG-SR, muting sensor and physical barrier and configure time settings for Muting and Override so that an operator should not enter hazardous zone when the Muting and Override are active.



Muting lamps that indicate the state of the Muting and Override functions must be installed where they are clearly visible to workers from all the operating positions.



Install the switch that activates the Override and that uses hold-to-run device, such as spring return key switch, in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone. Make sure that nobody is in the hazardous zone before activating the Override function.




Make sure to connect an override cancel switch to the RESET line when using the Override function. Otherwise, the OVERRIDE state may not be released by the override cancel switch, resulting in serious injury.



F3SG-SRA	✓
F3SG-SRB	✓

2-14-1. Overview

The Override function turns the safety outputs ON when the muting start condition is not satisfied. If a workpiece stops while passing through the F3SG-SR, as shown below, causing a muting error, the normal state cannot be recovered unless the workpiece is removed from the muting sensors and the detection field of the F3SG-SR. However, the Override function will mute the safety outputs of the F3SG-SR so that the conveyor only can be restarted to move the workpiece out of the muting sensors and detection zone.

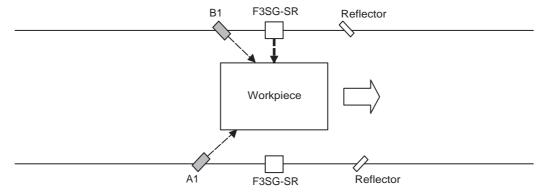

The Override function can be enabled for up to 600 s.

The Area Beam Indicator (ABI) *1 or TOP/BTM Indicator *2 blinks during the Override state.

- *1 F3SG-SRA is applicable.
- *2 F3SG-SRB is applicable.

2-14-2. Override at Normal Operation

You can enable the Override function under the normal operation.

■ Override start conditions

If all of the following conditions are satisfied, the OVERRIDE state is enabled. The OVERRIDE state can be enabled even when there is a muting error.


- 1. Either muting input A or B is in the ON state. (One or more muting sensors are turned ON by a workpiece)
 - This does not apply to Exit-Only Muting mode.
- 2. The F3SG-SR is blocked and the safety outputs are in the OFF state.
- 3. An input signal of a special sequence is entered three times to the RESET line when the conditions No. 1 and 2 above are satisfied. The signal must be entered within a range from 0.1 s to the override input time limit T1 (1 s). (See the timing chart below.)




■ Override end conditions

When any of the following conditions is satisfied, the OVERRIDE state is released.

- 1. A period of 600 s (configurable) passes in the OVERRIDE state.
- 2. All muting sensors are turned OFF.
- 3. The F3SG-SR is unblocked (during exit-only muting mode).
- 4. The following signal to cancel the OVERRIDE state is entered:
 - When the external device monitoring function is enabled, the RESET line is turned ON. (PNP: Connected to Vs-3 V~Vs; NPN: Connected to 0 V~3 V)
 - When the external device monitoring function is disabled, the RESET line is turned OFF.

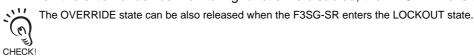

■ Timing chart

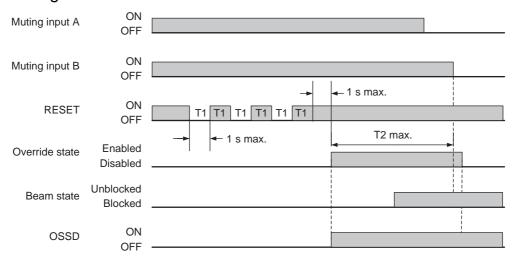

T1: Override input time limit T2: Override time limit


Note. In this timing chart, all muting sensors switched to OFF ends the OVERRIDE state.

■ Factory default setting

Variable	Variable name	Value	Description
T1	Override input time limit	1 s	Maximum input time of override input.
T2	Override time limit		The duration time of the Override function. The OVERRIDE state is cancelled if it continues for longer than this time limit.

■ Basic wiring diagram


• External Device Monitoring used and in Manual Reset mode

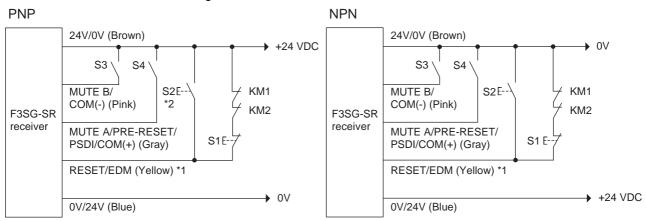

- S1: Lockout or interlock reset switch or override switch
- S2: Override cancel switch
- S3, S4: Muting sensor
- KM1, KM2: External device
- *1. Also used as Override input line.
- *2. Make sure to connect an override cancel switch to the RESET line when using the Override function.

 Otherwise the OVERRIDE state may not be released by the override cancel switch, resulting in serious injury.

• External Device Monitoring not used and in Manual Reset mode

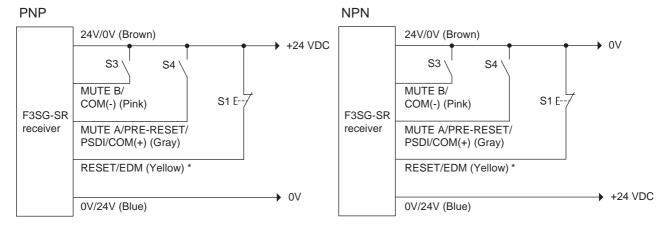

- S1: Lockout/interlock reset switch or override switch or override cancel switch
- S3, S4: Muting sensor
- *1. Also used as Override input line.

2-14-3. Override upon Startup

You can enable the OVERRIDE state by entering a special sequence when the power is turned on. This function is dedicated to Exit-Only Muting mode.

Under the Standard Muting mode or the Position Detection Muting mode, a workpiece can be ejected using the Override function under the normal operation as any of muting inputs always turns on even if the power is restarted while muting failed.

CHECK!

■ Override start conditions

When all of the following conditions are satisfied, the OVERRIDE state is enabled. The OVERRIDE state can be achieved even when there is a muting error.

- 1. The F3SG-SR is blocked
- 2. An input signal of a special sequence is entered three times to the RESET line within 3 to 6 s after power-on. The signal must be entered within a range from 0.2 s to the override input time limit T1 (initial value: 1 s). (See the timing chart below.)

■ Override end conditions


When any one of the following conditions is satisfied, the OVERRIDE state is released.

- 1. A period of 600 s (configurable) passes in the OVERRIDE state
- 2. The F3SG-SR is unblocked
- 3. The following signal to cancel the OVERRIDE state is entered:
 - When the external device monitoring function is enabled, the RESET line is turned ON. (PNP: Connected to Vs-3 V~Vs; NPN: Connected to 0 V~3 V)
 - When the external device monitoring function is disabled, the RESET line is turned OFF.

The OVERRIDE state can be also released when the F3SG-SR enters the LOCKOUT state.

■ Timing chart

CHECK!

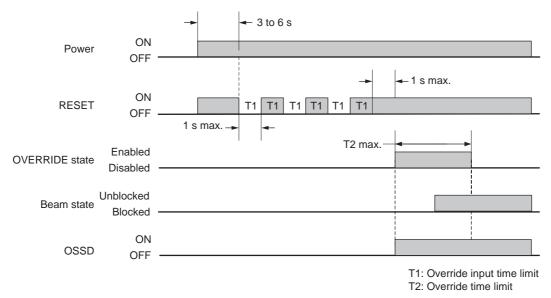

2-14-4. Setting with Intelligent Tap

The user cannot make any changes to this function by the DIP Switch.

2-14-5. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function	Initial value	Configurable value or numerical range
Override	Enable	Enable/Disable
Override input time limit	1 s	0.2 to 5 s in 0.1-s increments
Override time limit	600 s	1 to 600 s in 1-s increments, or infinite



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



Setting the override time limit to infinite may cause a failure of disabling the OVERRIDE state when there is a failure of the override input signal. Conduct risk assessment analysis thoroughly before enabling this setting.



Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-15. Fixed Blanking

<u>∕!</u>\ WARNING

Install a protective structure to cover the whole blanked zone in order to prevent personnel approach to hazardous part of the machine through the blanked area.



If allowable beams are designated for Fixed Blanking, detection capability gets larger near an object that blocks beams. The safety distance calculation must be based on the increased detection capability for this function. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



F3SG-SRA	✓
F3SG-SRB	✓

2-15-1. Overview

■ Fixed blanking function

This function disables a part of the F3SG-SR detection zone. The safety outputs stay in the ON state even if an object exists in the disabled zone.

The fixed blanking zone must include at least one zone consisting of continuous beams. Up to three fixed blanking zones (zone 1 to zone 3) can be set. Note that you cannot set all beams to the fixed blanking zone. In the primary sensor, you cannot set both of the end beams (or synchronization beams) to an identical fixed blanking zone.

■ Fixed blanking zone setting


A zone for fixed blanking zone must be configured. You can configure the zone by the Teach-In using a blocking object placed in a desired position or by designating desired beams manually. In this example shown below, the 5th and 10th beams are set as bottom and top beams respectively.



/ E For details of the teach-in setting with Push Switch or Muting Input A., see 3-7-1. Setting Fixed Blanking by Teach-in.



 \mathcal{L} For details of the teach-in setting with SD Manager 3, see 4-3-4-1. Fixed Blanking.

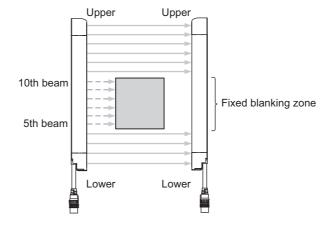

Fixed blanking monitoring function

For safety reasons, the F3SG-SR transitions to LOCKOUT state* if part of a fixed blanking zone is unblocked. (Factory default setting.)

In this case, power cycle or reset input enables the Fixed Blanking function again with the same setting as previous one. Turn off the power and on again or turn on the reset input while all fixed blanking zones are blocked.

When the F3SG-SR is set to Blanking Zone cancelled, the Fixed Blanking function is cancelled if part of a fixed blanking zone is unblocked.

In this case, power cycle enables the Fixed Blanking function again with the same setting as previous

Turn off the power and on again while all fixed blanking zones are blocked.

When quick blanking is set, if part of the zone set by the fixed blanking function is unblocked, the safety outputs are turned OFF.

In this case, if interlock is released with all the fixed blanking zones blocked, the safety outputs are turned ON.

When interlock is reset automatically, the safety outputs are turned ON at the same time as the blanking zone is blocked. When interlock is reset manually, the safety outputs are turned ON by the reset input after the blanking zone is blocked.


Setting to this monitoring function disabled disables the blanking monitoring.

* Allowable beams configured on both ends of fixed blanking zone are not monitored.

■ Allowable beam


Allowable beam represents a beam out of the target of the Fixed Blanking Monitoring. This should be configured for a fixed blanking beam that is irregularly blocked and unblocked due to oscillation of a blocking object. An allowable beam can be assigned to the beams on both ends or one end of a fixed blanking zone depending on the position of blocked beams and the number of beams in a zone to be blocked by an object (or blocked zone).

When a fixed blanking zone is configured by the Teach-in with the Push Switch or the Muting Input A, the allowable beams are configured automatically. Refer to the following descriptions for details. For allowable beam setting with the SD Manager 3, refer to Chapter 4 Setting with SD Manager 3.

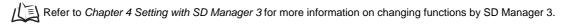

See below for an example. (The example shows the case where the settings are made by the SD Manager 3.)

In this case, 5th, 6th, and 10th beams are set as allowable beams. These beams is repeatedly blocked and unblocked due to oscillation of a blocking object. But because these beams are not the target of the monitoring, the F3SG-SR keeps the safety outputs in the ON state.

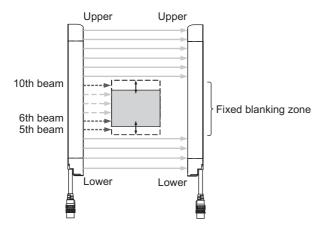


When a fixed blanking zone is configured by the Teach-in with the Push Switch or the Muting Input A, the fixed blanking zone and allowable beams are configured automatically depending on the position of blocked beams and the following conditions.


• When beams including the bottom or top beam are blocked When beams including the bottom or top beam are blocked, allowable beams are configured as

Condition	Number of blocked	Number of allowable beams		Zone with allowable beam configured	Figure
	beams	Upper	Lower		INO.
Beams including the bottom	1 or 2	1	-	Outside the upper beams of the blocked zone	Fig. 1
beam are blocked	3 or more	2	-	1 beam each for outside and inside the upper beams of the blocked zone	Fig. 2
Beams including the top	1 or 2	-	1	Outside the lower beams of the blocked zone	Fig. 3
beam are blocked	3 or more	-	2	1 beam each for outside and inside the lower beams of the blocked zone	Fig. 4

When beams including the lower beam are blocked:

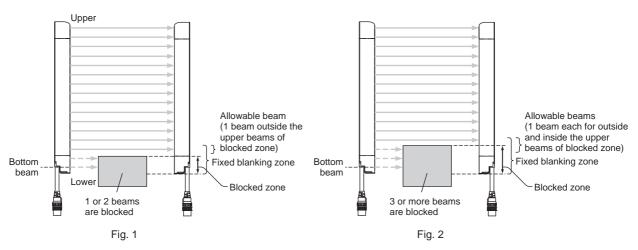


When beams including the top beam are blocked:

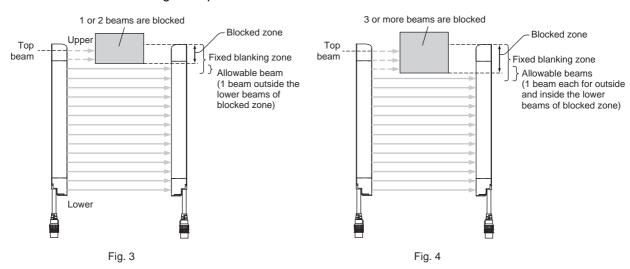

• When beams are blocked within the range from [1 beam next to bottom beam] to [1 beam next to top beam] When beams are blocked within the range from [1 beam next to bottom beam] to [1 beam next to top beam], allowable beams are configured as follows.

Number of blocked	Number of allowable beams		Number of allowable beams Zone with allowable beam configured	Figure
beams	Upper	Lower	Zone with allowable beam conligured	No.
1 or 2	1	1	Outside the blocked zone	Fig. 5
3 or more	2	2	1 beam each for outside and inside the blocked zone	Fig. 6

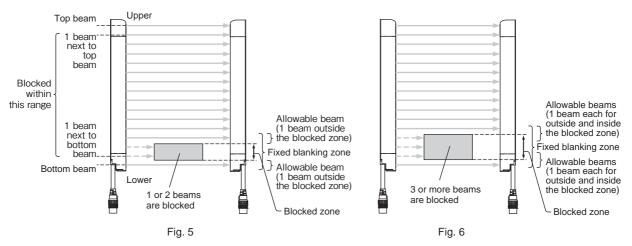

The table below lists the number of allowable beams when a fixed blanking zone and allowable beams are configured with the SD Manager 3.

Number of allowable beams available for fixed blanking beams

	Number of fixed blanking beams	Maximum number of allowable beams
1		Setting not possible
2		1
3		2
4		3
n		n-1

Refer to 3-7-1. Setting Fixed Blanking by Teach-in for more information on Teach-in with the DIP Switch. Refer to 4-3-4-1. Fixed Blanking for more information on setting a fixed blanking zone with the SD Manager 3.

For detection capability on the border between the blanking zone and normal detection zone when allowable beam is configured, see next table.

Detection capability on the border between the blanking zone and normal detection zone when allowable beam is specified.

[mm]


Allowable beam on one end	F3SG-□SR□□□□□-14	F3SG-□SR□□□□□-25	F3SG-□SR□□□□□-45	F3SG-□SR□□□□□-85
Disable	14 (same as nominal)	25 (same as nominal)	45 (same as nominal)	85 (same as nominal)
1 beam	24	45	85	165
2 beams	34	85	125	245
n beams	14+(10×n)	25+(20×n)	45+(40×n)	85+(80×n)

LED indicator status

When the Fixed Blanking is being enabled, the CFG indicator turns on.

■ Constraint between fixed blanking zones

More than one fixed blanking zone can be configured adjacently (Figures 1 and 2). But allowable beams cannot be set adjacently (Figure 3). You cannot overlap fixed blanking zones. (Figure 4)

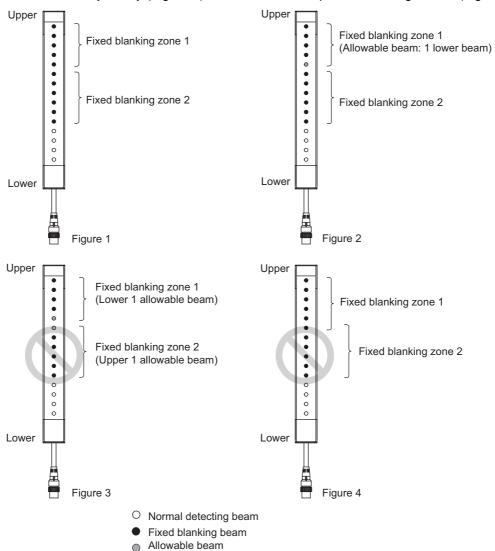

■ Limitation for combination with other functions

You can use this function in combination with the Muting, Floating Blanking and Warning Zone functions at the same time with the SD Manager 3.

Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

Settings for respective zone have limitations.

Refer to 2-19. Setting Zone Adjacency Conditions for more information.

2-15-2. Factory Default Setting

Fixed Blanking is disabled.

2-15-3. Setting with Intelligent Tap

Fixed blanking can be configured using Positions 6 and 7 of the DIP Switch of the Intelligent Tap. The Fixed Blanking Monitoring function is configured as Lockout.



Make sure the Position 2 of the DIP Switch is set at ON (DIP Switch Enabled) to activate the settings by the DIP Switch.



Refer to Chapter 3 Setting with Intelligent Tap for more information on setting this function by the Intelligent Tap.

2-15-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Setting is required for each sensor segment in case of a cascade connection.

Function		Initial value	Configurable value or numerical range	
Fixed Blanking		Disable	Enable/Disable	
Fixed Blanking	Bottom beam	1	any beam in 1-beam increments	
zone	Top beam	1	any beam in 1-beam increments	
Fixed Blanking Monitoring		Lockout	Lockout/Disable monitoring/Cancel blanking zone/ Quick blanking	
Number of allowable upper beams		0 beam	0 to 5 beams in 1-beam increments	
Number of allowable lower beams		0 beam	0 to 5 beams (1-beam increments)	



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



Setting the Fixed Blanking Monitoring function to Disable Monitoring may create an undetectable area where a person can block the F3SG-SR without being detected, and it is not compliant with IEC 61496-2. Conduct risk assessment analysis thoroughly before enabling this setting.



Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-16. Floating Blanking

⚠ WARNING

Detection capability gets larger when the Floating Blanking function is used. When this function is used, the safety distance calculation must be based on the increased detection capability for this function. Otherwise, the machine may not stop before a person reaches to the hazardous part, resulting in serious injury.



If detection capability may get larger and a human body may pass a detection zone to reach a hazardous source, additional safety protection equipment must be installed such as a safety fence



F3SG-SRA	✓
F3SG-SRB	✓

2-16-1. Overview

■ Floating Blanking function

This function allows a specified number of beams to move freely in the detection zone of the F3SG-SR while keeping the safety outputs in the ON state.

Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

■ Floating blanking zone

All beams are configured as a floating blanking zone. If the zone overlapped with that of other function (e.g. Fixed Blanking, Warning Zone), the other function is prioritized in the overlapped zone.

■ Floating Beam

The number of beams that prevents the safety outputs to be turned OFF can be configured by setting the number of floating beams. Setting of the number of floating beams can be configured by specifying the number of beams manually or by moving a blocking object in the detection zone. For details of teach-in setting, see 3-7-2. Setting Floating Blanking by Teach-in.

■ Floating Blanking Monitoring function

The F3SG-SR monitors a blocking object in a floating blanking zone. (If the object is removed or gets smaller, human entry may not be detected by the F3SG-SR, resulting in serious injury.)

The F3SG-SR enters lockout when a blocking object becomes smaller, or removed. (Factory default setting) In this case, power cycle or reset input enables the Floating Blanking function again with the same setting as previous one. Turn off the power and on again or turn on the reset input while all the specified beams are blocked.

It is possible to configure the Floating Blanking Monitoring function to be disabled when a blocking is smaller or removed.

In case configured as Blanking Disable, if a blocking object gets smaller than the setting value, the Floating Blanking function is cancelled. That is, the entire detection zone of the F3SG-SR works as the normal detection zone.

In this case, power cycle enables the Floating Blanking function again with the same setting as previous one. Turn off the power and on again while all the specified beams are blocked.

If Temporarily Disable Monitoring by Wiring is configured, the monitoring function can be temporarily disabled during operation by hard wiring of the muting input A and the muting input B. For details, see below.



If Temporarily Disable Monitoring by Wiring is configured, the Muting function cannot be used.


■ Temporarily disable monitoring by external wiring

If Temporarily Disable Monitoring by Wiring is configured, the Floating Blanking Monitoring function can be temporarily disabled during operation by hard wiring of the muting input A and the muting input B of a receiver.

The Floating Blanking Monitoring function is disabled for a period of T2 by turning the muting input A from OFF to ON and the muting input B from ON to OFF within an input time difference T1 (4s) using a limit switch, etc. Inputs of the muting input A and the muting input B must be redundant inputs of different kinds such as a combination of NO contact and NC contact types.

(In case of a PNP output photoelectric sensor, use one output as Light-ON and the other as Dark-ON


The user can use this function only when the F3SG-SR is used as a one segment system and the function is enabled by the SD Manager 3. The function cannot be enabled when the F3SG-SR is in the cascade connection.

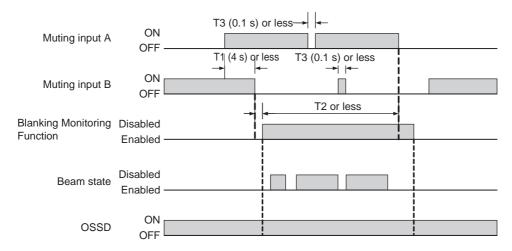

- T1: Muting input limit (fixed to 4 s)
 - The maximum value of an input time difference between muting input A/B. Configured as 4 s.
- T2: Monitoring Temporarily Disabled Time Limit A time limit to disable the Floating Blanking Monitoring function. When this time

period passed, the blanking monitoring function is enabled, and lockout occurs if the blanked beam is unblocked. The factory default setting is 10 s (configurable).

T3: Maximum allowable muting signal interruption (fixed to 0.1 s) Maximum duration of a signal interruption allowed in Muting inputs A and B. This is set at 0.1 s.

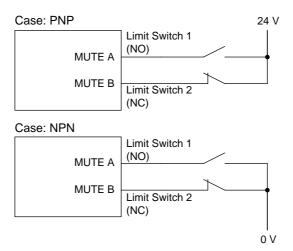



The Muting is not enabled when the Temporarily Disable Monitoring by External Wiring is enabled.

■ Number of allowable beams

Number of beams in the floating blanking zone, that are not monitored by the Floating Blanking Monitoring function.

When the Floating Blanking Monitoring function is enabled and the number of blocked beams becomes less than "the number of Floating beams - the number of allowable beam(s)", the F3SG-SR enters the LOCKOUT state.

Setting Example: the F3SG-RA with 14-mm detection capability


When the number of floating beams is configured as 4 beams, the safety outputs are turned OFF if 5 or more beams are blocked. (Fig. 1)

If the number of floating beams is configured as 4 beams, the safety outputs are not turned OFF if 4 or less beams are blocked. (Fig. 2)


If the monitoring function is being enabled and the number of allowable beams is configured as 1 beam, lockout occurs when a blocking object is lost or 2 or less beams are blocked. (Fig. 3)

When a blocking object of the size that does not turn off the safety outputs blocks multiple locations, the safety outputs are not turned OFF. (Fig. 4)


5 or more beams are blocked

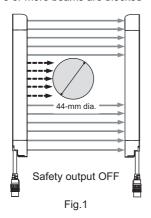


2 or fewer are blocked

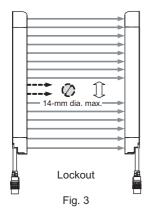

4 or fewer are blocked

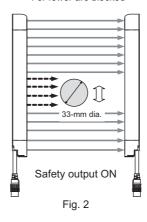

More than one zone is blocked

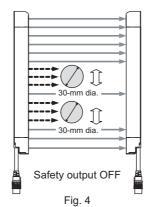

■ Detection capability

Detection capability for F3SG-SR differs based on the number of floating beams as shown below.


Model	Number of floating beams configured	Detection capability	Number of blocked beams to turn safety outputs OFF
	-	14 mm	1 beam
	1 beam	24 mm	2 beams
 F3SG-□SR□□□□□-14	2 beams	34 mm	3 beams
F35G-U3KUUUUU-14	3 beams	44 mm	4 beams
	4 beams	54 mm	5 beams
	n beams	14+(10×n) mm	(n+1) beams
	-	25 mm	1 beam
	1 beam	45 mm	2 beams
 F3SG-□SR□□□□□-25	2 beams	65 mm	3 beams
F35G-U3KUUUUU-25	3 beams	85 mm	4 beams
	4 beams	105 mm	5 beams
	n beams	25+(20×n) mm	(n+1) beams
	-	45 mm	1 beam
	1 beam	85 mm	2 beams
 F3SG-□SR□□□□□-45	2 beams	125 mm	3 beams
F35G-U3KUUUUU-45	3 beams	165 mm	4 beams
	4 beams	205 mm	5 beams
	n beams	45+(40×n) mm	(n+1) beams
F3SG-□SR□□□□□-85	-	85 mm	1 beam
	1 beam	165 mm	2 beams
	2 beams	245 mm	3 beams
1 350-131111111-03	3 beams	325 mm	4 beams
	4 beams	405 mm	5 beams
	n beams	85+(80×n) mm	(n+1) beams

■ LED indicator status

When Floating Blanking is being enabled, the Blanking indicator turns on.

■ Limitation for combination with other functions

You can use this function in combination with the Muting, Fixed Blanking, and Warning Zone functions at the same time with the SD Manager 3. Settings for respective zone have limitations.

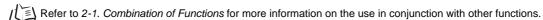

2-16-2. Factory Default Setting

The Floating Blanking is disabled.

2-16-3. Setting with Intelligent Tap

Floating blanking can be configured using Positions 6 and 7 of the DIP Switch of the Intelligent Tap. The Floating Blanking Monitoring function is configured as Lockout.



Make sure the Position 2 of the DIP Switch is set at ON (DIP Switch Enabled) to activate the settings by the DIP Switch.



Refer to Chapter 3 Setting with Intelligent Tap for more information on setting this function by the Intelligent Tap.

2-16-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Setting is required for each sensor segment in case of a cascade connection.

Function	Initial value	Configurable value or numerical range
Floating Blanking	Disable	Enable/Disable
Floating Blanking Monitoring	Lockout	Disable monitoring/Lockout/Cancel blanking zone
Temporarily Disable Monitoring Function	Disable	Enable/Disable
Monitoring temporarily disabled time limit	10 s	1 to 200 s (1-s increments), or infinite
Number of floating beams	1	1 to 15 beams (1-beam increments)
Number of allowable beams	0	0 to 5 beams (1-beam increments)



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



Setting the Floating Blanking Monitoring function to Disable Monitoring may create an undetectable area where a person can block the F3SG-SR without being detected, and it is not compliant with IEC 61496-2. Conduct risk assessment analysis thoroughly before enabling this setting.



Refer to Chapter 4 Setting with SD Manager 3 for more information on changing functions by SD Manager 3.

2-17. Reduced Resolution

∕!\ WARNING

Detection capability gets larger when the Reduced Resolution function is used. When this function is used, the safety distance calculation must be based on the increased detection capability for this function. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



If detection capability may get larger and a human body may pass a detection zone to reach a hazardous source, additional safety protection equipment must be installed such as a safety



F3SG-SRA	✓
F3SG-SRB	✓

2-17-1. Overview

The Reduced Resolution function prevents the safety outputs to turn off by an object moving in a detection zone. With this function, an object with a size of 1 to 3 beams can be ignored by changing a detection capability size. Unless the number of continuously blocked beams exceeds the setting (1 to 3 beams), the total number of blocked beams has no limit. The response time remains the same even when the detection capability is changed.

The difference from the Floating Blanking is that the Reduced Resolution keeps the safety outputs ON even when an object is present discontinuously.




/[3] Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

Example:

Enter of a person into the detection zone is monitored while enter of a transport dolly is allowed.

Example:

The F3SG-SR does not turn the safety outputs OFF when the number of blocked continuous beams is 3 or more. (Fig. 1) The F3SG-SR does not turn the safety outputs OFF when the number of blocked continuous beams is 2 or less. (Fig. 2) The F3SG-SR does not turn the safety outputs OFF when there are some combinations of continuously blocked beams in a detection zone but the number of the continuously blocked beams of each combination is 2 or less. (Fig. 3) The F3SG-SR does not go to the LOCKOUT state and does not turn the safety outputs OFF even when an object has been removed from the detection zone. (Fig. 4)

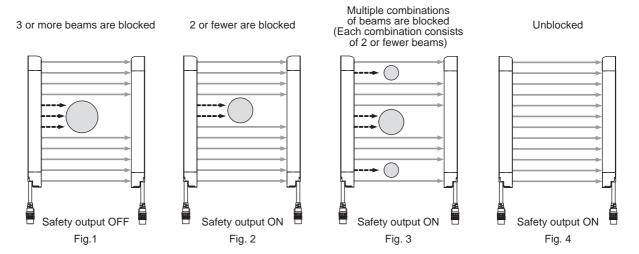

Detection capability

Detection capability for the F3SG-SR differs based on the number of floating beams as shown below.

Model	Number of blocked beams configured	Detection capability	Number of blocked beams to turn safety outputs OFF	Maximum diameter that does not turn off the safety outputs in the detection zone
	-	14 mm	1 beam	-
 F3SG-□SR□□□□□-14	1 beam	24 mm	2 beams	6 mm
F33G-L3KLLLLL-14	2 beams	34 mm	3 beams	16 mm
	3 beams	44 mm	4 beams	26 mm
	-	25 mm	1 beam	-
F3SG-□SR□□□□□-25	1 beam	45 mm	2 beams	15 mm
F33G-L3KLLLLLL-25	2 beams	65 mm	3 beams	35 mm
	3 beams	85 mm	4 beams	55mm
	-	45 mm	1 beam	-
F3SG-□SR□□□□□-45	1 beam	85 mm	2 beams	35 mm
F35G-U5KUUUUU-45	2 beams	125 mm	3 beams	75 mm
	3 beams	165 mm	4 beams	115 mm
F3SG-□SR□□□□□-85	-	85 mm	1 beam	-
	1 beam	165 mm	2 beams	75 mm
F33G-U3KUUUUU-03	2 beams	245 mm	3 beams	155 mm
	3 beams	325 mm	4 beams	235 mm

■ LED indicator status

When the Reduced Resolution is being enabled, the CFG indicator turns on.

Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

2-17-2. Factory Default Setting

Reduced Resolution is disabled.

2-17-3. Setting with Intelligent Tap

The user cannot make any changes to the settings of this function by DIP Switch on the Intelligent Tap.

2-17-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function name	Initial value	Configurable value or numerical range	
Reduced Resolution	Disable	Enable*/Disable	
Number of beams	1	1 to 3 beams in 1-beam increments	

^{*}It is not possible to configure the Reduced Resolution function together with the Muting function. To enable settings of the Reduced Resolution function, disable the Muting function.

In addition, setting parameters of the following functions is saved according to the states where the Muting function is enabled and disabled, respectively. After changing the Muting function from Enable to Disable or from Disable to Enable with the SD Manager 3, also check the settings of these functions again.

Affected functions: External Device Monitoring (EDM), Start Interlock, Restart Interlock, Auxiliary Output



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).

Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-18. Warning Zone


⚠ WARNING

When a warning zone is configured, you must attach labels that indicate a border between normal detection zone and warning zone. Otherwise, the machine may not stop before a person reaches to the hazardous part, resulting in serious injury.



A warning zone must not be used for safety applications. Always install your system so that a detection zone should be passed before reaching a hazardous part of the machine. If access to the hazardous part by reaching over the detection zone of a vertically mounted F3SG-SR cannot be excluded, the height of the detection zone and the safety distance shall be determined in consideration of such a risk.




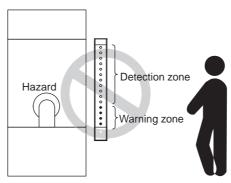

A warning zone must be configured based on a safety distance.

Warning zone

Safety distance (S)

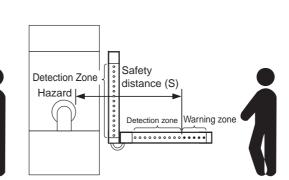



F3SG-SRA	✓
F3SG-SRB	✓

Hazard

2-18-1. Overview

Part of the detection zone can be set as a warning zone. Example:

• When a person enters, indicator or buzzer should notify warning without stopping a machine.

You can specify beams to configure for warning zone. (Fig. 4& 5)


Configuration cannot be executed for cases shown below.

- All beams are configured as a warning zone (Fig. 7).
- A warning zone is configured without including either the top end beam or bottom end beam. (Fig. 8)


When it is configured for the F3SG-SR in cascade connection to have the detection zone, it is possible for the other F3SG-SR's to have the warning zone for the all beams. (Fig. 6)


For the application as shown in Fig. 6, make sure the primary sensor has the detection zone and the secondary sensor has the warning zone. CHECK!

■ Operation Example

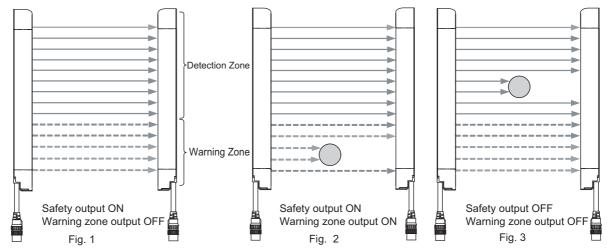


■ Timing chart

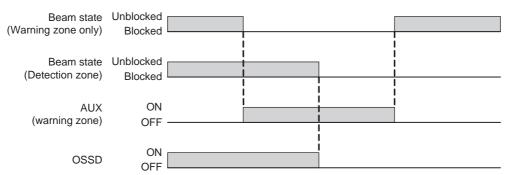

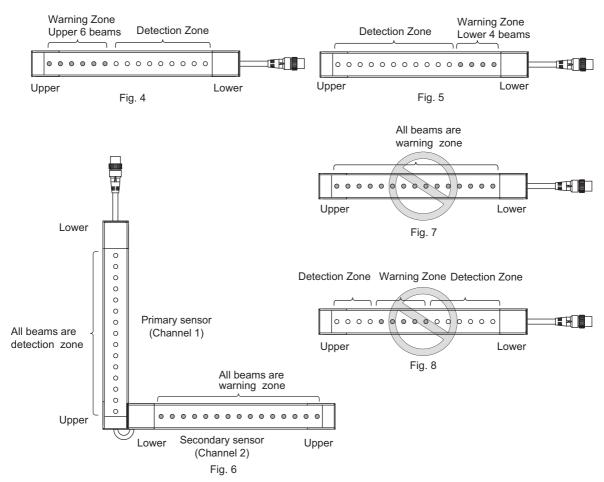

When a warning zone is configured, you must attach Warning Zone Label (included) that indicate a border between normal detection zone and warning zone.

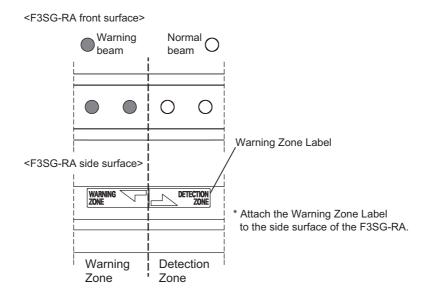

The CFG indicator of the F3SG-SR is illuminated when the Warning Zone is enabled.

Refer to 2-1. Combination of Functions for more information on the use in conjunction with other functions.

2-18-2. Factory Default Setting

Warning Zone is disabled.

2-18-3. Setting with Intelligent Tap

The user cannot make any changes to the settings of this function by the Intelligent Tap.

2-18-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function	Initial value	Configurable value or numerical range	
Warning Zone Disable		Disable/Enable from upper/Enable from lower	
		Any beam from top beam/any beam from bottom beam	

If you want to output the beam state of the warning zone, set the output operation mode of the Auxiliary Output to Warning Zone Information.



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-19. Setting Zone Adjacency Conditions

If any two functions of Muting, Fixed Blanking or Warning Zone functions of the F3SG-SR are used at the same time, the setting zones have limitations.

This section describes the limitations for following points:

- 1. Zone adjacent condition: If zones for multiple functions are configured adjacently
- 2. Zone overlap condition: If zones for multiple functions are configured as overlapped

2-19-1. Zone Adjacency Condition

The table below describes the conditions to configure setting zones for adjacent beams. Except for some conditions, setting zones for these 3 functions can be located adjacently. The user can make the setting by the SD Manager 3.

Zone adjacency condition

Function	Muting	Fixed Blanking	Warning Zone
Muting	-	Yes	Yes
Fixed Blanking	Yes	*	Yes
Warning Zone	Yes	Yes	-

Yes: Possible to configure

^{*} For details about setting adjacent fixed blanking zones.



Refer to Constraint between fixed blanking zones under 2-15. Fixed Blanking.

2-19-2. Zone Overlap Condition

The table below describes the conditions to configure setting zones for overlapping beams.

Except for combination of muting zone and fixed blanking zone (figure 1), setting zones of these 3 functions cannot be overlapped. (Figure 2)

The user can make the setting by the SD Manager 3.




Setting zones of Muting and Floating functions can be overlapped only if each zone covers the full detection zone.

Zone overlap condition

Function	Muting	Fixed Blanking	Warning Zone
Muting	-	Yes	No
Fixed Blanking	Yes	No	No
Warning Zone	No	No	-

Yes: Possible to configure No: Not possible to configure

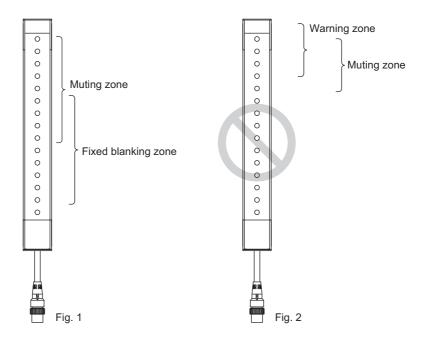



Even if a muting zone and a fixed blanking zone are configured as overlapped, Fixed Blanking Monitoring function is effective.

2-20. Operating Range Selection

F3SG-SRA	✓
F3SG-SRB	✓

2-20-1. Overview

The Operating Range Selection function can change the operating range by changing emission light

The following two modes in the table below are available for operating range.

Mode	Operating range			
Iviode	14 mm *	25 mm *	45 mm *	85 mm *
Short	0.3 to 3.0 m	0.3 to 7.0 m		
Long	0.3 to 10.0 m	0.3 to 20.0 m		

^{*} Detection capability


■ Example

- To set shorter operating range to prevent the F3SG-SR from affecting other photoelectric sensors
- To set shorter operating range to prevent mutual interference in a close area

LED indicator status


When the Operating Range Selection is configured as LONG Mode, the LONG indicator turns on.

Basic wiring diagram

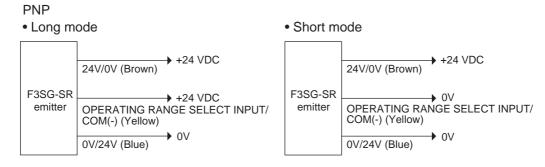


NPN

• Long mode

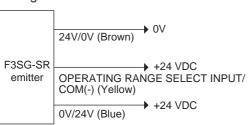

Short mode

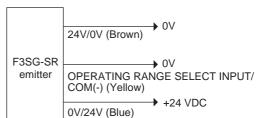




- The F3SG-SR is set to the Long Mode when the OPERATING RANGE SELECT INPUT line (yellow) is open.
- When setting to the operating range by wiring the OPERATING RANGE SELECT INPUT line, the setting is enabled at power-on. Perform the wiring before turning the power on.

2-20-2. Factory Default Setting

The Operating Range Selection is configured as Long Mode. The operating range for the long mode setting is from 0.3 to 20 m for F3SG-SR 25-mm/45-mm detection capability model and from 0.3 m to 10 m for F3SG-SR 14-mm detection capability model.

2-20-3. Setting with Intelligent Tap

The user can select the mode of Operating Range Selection by the DIP Switch.

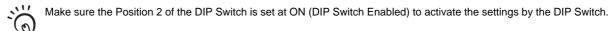

Refer to Chapter 3 Setting with Intelligent Tap for more information on setting this function by the Intelligent Tap.

2-20-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function name	Description	Initial value	Configurable value or numerical range
Operating Range Selection Select the operating range.		Long mode	Short mode/Long mode



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).

Refer to Chapter 4 Setting with SD Manager 3 for more information on changing functions by SD Manager 3.

2-21. Response Time Adjustment

∕!\ WARNING

To change the response time, calculate the safety distance based on the setting. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.




F3SG-SRA	✓
F3SG-SRB	✓

2-21-1. Overview

The Response Time Adjustment function allows the user to select the longer response time in order to reduce the chance the safety outputs are turned OFF by an accidental block of the F3SG-SR due to an environmental factor. Environmental factors include noise, smoke, dust, and bugs.

2-21-2. Factory Default Setting

The response time is configured to the normal mode.

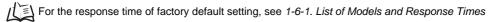

2-21-3. Setting with Intelligent Tap

The user cannot make any changes to the settings of this function by the Intelligent Tap.

2-21-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function	Initial value	Configurable value or numerical range
Response Time Adjustment	Normal mode	Normal mode/2 times slow/ 4 times slow/8 times slow

The ON-to-OFF response time of the Slow mode is doubled compared to the Normal mode.

Slow mode	ON to OFF response time
2 times slow	2 times slower than normal mode
4 times slow	4 times slower than normal mode
8 times slow	8 times slower than normal mode

It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).

Refer to Chapter 4 Setting with SD Manager 3 for more information on changing functions by SD Manager 3.

2-22. Area Beam Indicator (ABI)

F3SG-SRA	✓
F3SG-SRB	

2-22-1. Overview

The unblocked/blocked state of beams, internal state of the sensor, and the state of external wiring are displayed on the Area Beam Indicator (or ABI indicators) located on the beam face according to the setting below.



When the wired synchronization setting is applied, the ABI indicators of the emitter and receiver display synchronously. When the optical synchronization setting is applied, the ABI indicators of the emitter always holds OFF.

■ Unblocked/Blocked State


The ABI indicators located near each beam is illuminated according to the unblocked/blocked state of the beam.

The basic operation is as follows.

Beam unblocked/blocked state	ABI indicator state
Unblocked (stably unblocked or unstably unblocked) and safety outputs OFF.	OFF
Stable state and safety outputs ON	Illuminated in green
Unstable state and safety outputs ON	Illuminated in orange
Blocked	Illuminated in red



In the Optical Synchronization, the ABI indicators are illuminated based on the table above after synchronization is established between the emitter and receiver. If synchronization is not established yet, the ABI indicators are not illuminated.

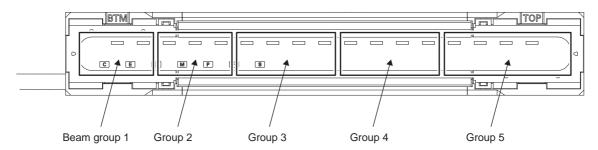

For example on the figure above, if even one of the beams in beam group 1 is blocked, the ABI indicators of that group are illuminated in red. When all the beams in that group are unblocked, the ABI indicators are turned OFF.

After the control output is turned ON, if even one of the beams in a group enters the unstable state, the the ABI indicators of that group are illuminated in orange.

[ABI indication in beam alignment]

For the installation of the F3SG-SR, you can use the ABI indicators to display that beam alignment is

After the F3SG-SR is powered up and synchronization between the emitter and receiver is established, if stable unblocked state cannot be confirmed, the ABI indicators are illuminated as follows.

However, the F3SG-SR does not monitor all beams like in normal operation but monitors the unblocked/blocked state of only some beams in the group (hereinafter those beams are called

monitoring beams). One or two beams are selected automatically from the group as monitoring

Unblocked/blocked state of monitoring beam	ABI indicator state
Stable state	Illuminated in orange
Unstable state or blocked	Illuminated in red

When all monitoring beams reach stable state, all the the ABI indicators change indication at every second like green -> orange -> green -> orange -> green, indicating that beam adjustment is completed.



This operation is executed only in the unblocked/blocked state indication configuration and during start-up. In addition, if stable state of all monitoring beams can be confirmed soon after synchronization is established, this indication is not executed. So, after installation is completed, when the F3SG-SR is powered up again in the arrangement and usage that CHECK! all beams are unblocked or in the normal blocked state, the indication above is not executed.

Input Signal Linkage

Indication of all the ABI indicators can be operated by muting input A and muting input B. For example, by turning ON the ABI indicators using the output signal from the PLC, the ABI indicators are usable as a guide light for the operator or a muting lamp.

Muting input A	Muting input B	ABI indicator state
0 V to 1/2 Vs	0 V to 1/2 Vs	OFF
Vs-3 V to Vs	0 V to 1/2 Vs	Illuminated in green
0 V to 1/2 Vs	Vs-3 V to Vs	Illuminated in red
Vs-3 V to Vs	Vs-3 V to Vs	Illuminated in orange

■ Output Information

F3SG-SR's state can be displayed by the ABI indicators.

The information assigned is equal to the information assigned to the auxiliary output.



For the details of the information assigned to the auxiliary output, refer to 2-12. Auxiliary Output.

2-22-2. Factory Default Setting

The factory default setting is set as unblocked/blocked state information.

2-22-3. Setting Change using Intelligent Tap

It is unable to change the setting of this function using the DIP Switch of the Intelligent Tap.

2-22-4. Setting Change using SD Manager 3

The following setting can be done using SD Manager 3.

Function name	Initial value	Configurable value or numerical range
Output operation mode	Unblocking/blocking	Disabled, unblocking/blocking information, input signal
	information	linkage*1, and output information

Setting when selecting output information

ABI pattern	Function	Initial value	Configurable item
Red	Output operation mode	Safety output information	*2
	Inverted signal output	Enabled	Enabled/disabled
	Output pattern	Solid-ON	Solid-ON, ON 1 time, ON 2 times, and ON 3 times
Orange	Output operation mode	Stable state information	*2
	Inverted signal output	Enabled	Enabled/disabled
	Output pattern	ON 1 time	Solid-ON, ON 1 time, ON 2 times, and ON 3 times
Green	Output operation mode	Safety output information	*2
	Inverted signal output	Disable	Enabled/disabled
	Output pattern	Solid-ON	Solid-ON, ON 1 time, ON 2 times, and ON 3 times

^{*1.} It is unable to use input signal linkage and the muting function together. To enable the setting of input signal linkage, disable the muting function.

In addition, for the following functions, setting parameters are kept individually in each case that the muting function is set enabled or disabled. When changing the muting state from enabled to disabled or vice versa using SD Manager 3, confirm the setting of the respective functions again.

Functions influenced:

External device monitoring, start interlock, restart interlock, and auxiliary output

*2. Configurable items are equal to the information assigned to the auxiliary output. For the details of the information assigned to the auxiliary output, refer to Section 2-12. "Auxiliary Output."



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).

For the details of change of setting parameters using SD Manager 3, refer to Chapter 4 Setting with SD Manager 3.

2-23. Designated Beam Output

F3SG-SRA	✓
F3SG-SRB	✓

2-23-1. Overview


This function allows information on unblocked/blocked states of a given beam to be output. Example:


- To turn Area Beam Indicator (ABI) ON when a specified beam of the F3SG-SR is blocked
- To output, from the auxiliary output, a signal of information on a specified beam being unblocked

If one or more specified beams are blocked or unblocked, the information on the beam state can be provided as an auxiliary output or Area Beam Indicator (ABI).

Operation Example

Designated beam state: Dark-ON

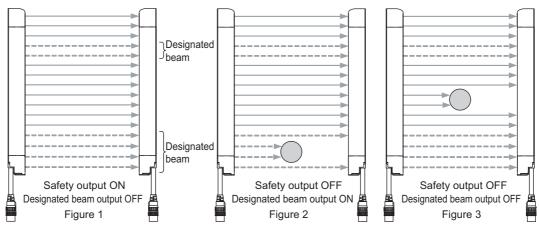

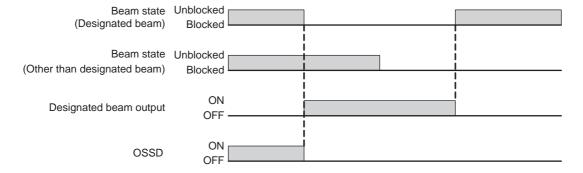

2-23-2. Factory Default Setting

Designated Beam Output is disabled.

2-23-3. Setting with Intelligent Tap

The user cannot make any changes to the settings of this function by the DIP Switch on the Intelligent Tap.

2-23-4. Setting with SD Manager 3

The user can make changes to the settings of this function by the SD Manager 3.

Function		Initial value	Configurable value or numerical range
Designated beam output		Disable	Enable/Disable
Setting by		Manual	Manual/Teach-in
Designated beam zone	Bottom beam	-	Any beam in 1-beam increments
	Top beam	-	
Designated beam state		Light-ON	Light-ON/Dark-ON

When outputting the light unblocked/blocked states of a designated beam, configure any one of the output operation modes of auxiliary output or Area Beam Indicator (ABI) as designated beam output information.



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-24. Stable Light Threshold Adjustment

F3SG-SRA	✓
F3SG-SRB	✓

2-24-1. Overview

The threshold value to judge if the unblocked light quantity of a beam is stable or not can be changed. The threshold value to judge as unblocked is equal to 100%.

The judging status of stable unblocking can be monitored by changing the threshold value according to the operating environment and assigning the stable unblocking information to the auxiliary output and the area beam indicator (ABI).

When the stable light threshold value is changed, the following threshold values of the output information are also

- Auxiliary Output: Stable-state information and Light level diagnosis information (upper limit)
- CHECK! Area Beam Indicator: Stable-state information and Light level diagnosis information (upper limit)
 - IO-Link Process Data: Light level diagnosis information (upper limit)



For the details of the information assigned to the auxiliary output, refer to 2-12. Auxiliary Output.

2-24-2. Factory Default Setting

The threshold value is set to 170%.

2-24-3. Setting Change using Intelligent Tap

It is unable to change the setting of this function using the DIP Switch of the Intelligent Tap.

2-24-4. Setting Change using SD Manager 3

The following setting can be made using SD Manager 3.

Function name	Initial value	Configurable value or numerical range
Stable light threshold	170%	100-300% (by 10%)



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



/LE For the details of the setting change using SD Manager 3, refer to Chapter 4 Setting with SD Manager 3.

2-25. Incident Light/Ambient Light

F3SG-SRA	✓
F3SG-SRB	✓

2-25-1. Incident Light Level Information

2-25-1-1. Overview

The user can use the SD Manager 3 or SD Manager Mobile APP to read incident light level of the F3SG-SR and view on a screen. This function allows beam adjustment while checking incident light level.

2-25-1-2. Setting with SD Manager 3

The user can enable this function to retrieve incident light level information. Making any changes to the function is not possible. (When the F3SG-SR is in the cascade connection, incident light level of each segment can be retrieved.)

2-25-2. Ambient Light Level Information

2-25-2-1. Overview

The user can use the SD Manager 3 or SD Manager Mobile APP to read incident light level of ambient light from a photoelectric sensor or another F3SG-SR unit in a close area and view it on a screen. This function allows the user to identify a photoelectric sensor radiating ambient light or beams being affected by the light.

2-25-2-2. Setting with SD Manager 3

The user can enable this function to retrieve ambient light level information. Making any changes to the function is not possible. (When the F3SG-SR is in the cascade connection, ambient light level of each segment can be retrieved.)



Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3 or SD Manager Mobile APP.

2-26. Maintenance Information

F3SG-SRA	✓
F3SG-SRB	✓

2-26-1. Overview

You can use the SD Manager 3 or SD Manager 3 Mobile APP to read the maintenance information of F3SG-SR to view on a PC screen. The Maintenance Information function indicates the following information:

- Error Log
- Warning Log
- Power-On Time *
- Load Switching Frequency *
- Muting Statistics Information
- * The setting parameters of power ON time threshold and load switching frequency threshold cannot be changed using SD Manager 3 Mobile APP.

Refer to Safety Light Curtain Configuration Tool for Model F3SG (SD Manager 2) User's Manual for more information on setting this function by the SD Manager 3.

2-26-2. Error Log

The user can view details of errors occurred in the past. The error information is recorded in the F3SG-SR main unit every 15 minutes. The displayed information is useful for troubleshooting. Up to 50 past errors can be recorded. The information is displayed for the emitter and receiver, respectively.

2-26-3. Warning Log

The user can view details of the following warnings occurred in the past. The warning information is recorded in the F3SG-SR main unit every 15 minutes. The displayed information can be used for troubleshooting. Up to 50 past warnings can be recorded. The information is displayed for the emitter and receiver, respectively.

- Muting sequence error
- · Interlock sequence error
- Interference/vibration information

2-26-4. Power-ON Time

The user can view the following information related to the power-on time of the F3SG-SR. The poweron time information is recorded in the F3SG-SR main unit every 15 minutes. This information is useful to better understand when to schedule of the F3SG-SR.

· Power-on time threshold

It is possible to give an output signal to the auxiliary output or indicate with Area Beam Indicator (ABI) when the power-on time exceeds the power-on time threshold. The excess power-on time information must be assigned to the output operation mode of the auxiliary output or Area Beam Indicator (ABI).

For the details of the information assigned to the auxiliary output, refer to 2-12. Auxiliary Output.

· Power-on time

This is the current power-on time since the power-on time was last reset. If the power-on time has never been reset, this value is the same as the accumulated power-on time. The information is displayed for the emitter and receiver, respectively.

Accumulated power-on time

This is the cumulative power-on time, from when the F3SG-SR is powered on for the first time after purchase until the present. It is not possible to reset this value by the power-on time reset function.

Power-on time reset

This function can reset the power-on time of the F3SG-SR to zero. When the F3SG-SR is in cascade connection, the power-on time can be reset for each cascaded F3SG-SR segment.

The user can make changes to the settings by the SD Manager 3.

Function	Initial value	Configurable value or numerical range
Power-on time threshold	30,000 h	30,000 to 1,000,000 h in 1-h increments/Disable

2-26-5. Load Switching Frequency

The user can view the number of switching operations of the load connected to the F3SG-SR. The load switching frequency information is recorded in the F3SG-SR main unit every 15 minutes. This information is useful to understand the switching frequency of relays and contactors connected to the F3SG-SR.

Load switching frequency threshold

It is possible to give an output signal to the auxiliary output or indicate with Area Beam Indicator (ABI) when the switching frequency exceeds the switching frequency threshold. The excess load switching frequency information must be assigned to the output operation mode of the auxiliary output or Area Beam Indicator (ABI).

For the details of the information assigned to the auxiliary output, refer to 2-12. Auxiliary Output.

Load switching frequency

This is the switching frequency of the load connected to the F3SG-SR. When the F3SG-SR is in cascade connection, the load switching frequency can be reset for each cascaded F3SG-SR segment.

Accumulated load switching frequency

This is the cumulative load switching frequency, from when the F3SG-SR is powered on for the first time after purchase until the present. It is not possible to reset this value by the load switching frequency reset function.

• Load switching frequency reset

This function can reset the load switching frequency of the F3SG-SR to zero. When the F3SG-SR is in cascade connection, the load switching frequency can be reset for each cascaded F3SG-SR segment. Use this reset function whenever you install or replace relays or contactors.

The user can make changes to the settings by the SD Manager 3.

		<u>, </u>
Function	Initial value	Configurable value or numerical range
Load switching frequency threshold	100,000 times in 1-time increment	100,000 to 4,000,000 times in 1-time increments/
		Disable

2-26-6. Muting Statistics Information

This function logs and visualizes conditions of the F3SG-SR muting operations to help the user adjust settings of muting input time difference. Also, its statistic calculation allows for optimal settings with reduced test runs.



Refer to Chapter 4 Setting with SD Manager 3 for more information on using this function by the SD Manager 3 or SD Manager 3 Mobile APP.

2-26-7. Intelligent Tap Log

You can use the SD Manager 3 to read the maintenance information (Error Log / Accumulated poweron time) of the Intelligent Tap to view on a PC screen. The Maintenance Information function indicates the following information:

• Error Log

The user can view details of errors occurred in the past. The error information is recorded in the Intelligent Tap at the time of occurrence of an error. The displayed information is useful for troubleshooting. Up to 50 past errors can be recorded.

· Accumulated power-on time

The user can view an accumulated value of power-on time from when the Intelligent Tap is powered on for the first time after purchase until the present. It is not possible to reset this value by the power-on time reset function.

2-27. Operating Status Monitoring

F3SG-SRA	✓
F3SG-SRB	✓

2-27-1. Overview

I/O information and the state of the F3SG-SR can be read out with the SD Manager 3.

Refer to Chapter 4 Setting with SD Manager 3 for more information on using this function by the SD Manager 3 or SD Manager 3 Mobile APP.

2-27-2. Readout Information

The user can view the following information related to a receiver.

The information is displayed in a block in case of a cascade connection.

Info	rmation name	Description
External wiring	Power Supply	Displays a supply voltage being supplied
information	OSSD 1 (Black)	Linked to OSSD 1 signal
	OSSD 2 (White)	Linked to OSSD 2 signal
	RESET (Yellow)	Linked to Reset/External Device Monitoring (EDM)/Override input signal
	AUX (Red)	Linked to Auxiliary output signal
	MUTE A (Gray)	Linked to Muting input A/Pre-Reset/PSDI input
	MUTE B (Pink)	Linked to Muting input B
Sensor Information	Scan code	Displays Scan Code setting
	EDM	Displays EDM setting
	Interlock/Pre-Reset/PSDI	Displays Interlock/Pre-Reset/PSDI setting
	Fixed/Floating Blanking	Displays Fixed/Floating Blanking setting
	PNP/NPN	Displays output mode (PNP/NPN) setting
	DIP Enable/Disable	Displays whether the settings by the DIP Switches are enabled or disabled.
Operating Status	Muting information	Linked to the MUTING state
	Override information	Linked to the OVERRIDE state
	Sequence error information	Linked to the MUTING SEQUENCE ERROR state or the INTERLOCK SEQUENCE ERROR state
	Safety output information	Linked to safety output signal
	Push-SW information	Linked to the input signal of Push Switch on Intelligent Tap
	Blanking beam unblocked information	Linked to the state where the blanking beam is unblocked

2-28. Instantaneous Block Detection

F3SG-SRA	✓
F3SG-SRB	✓

2-28-1. Overview

When instantaneous blocking is detected, the beam number and occurrence time of the detection are recorded.

You can use the SD Manager 3 to read the instantaneous block detection information of F3SG-SR to view on a PC screen. The instantaneous block detection information indicates the following information:

Blocked axis

If blocking occurs on more than one beam, the number of the beam which detected the blocking first is recorded. The beam numbers are serial numbers beginning with one, assigned from the power cable side to the termination cap side.



The instantaneous blocking means blocking within the time calculated as the ON to OFF response time of each sensor multiplied by 0.5 to 1.5. If the response time is changed by the Response Time Adjustment function, the detection time changes according to the change.

Presence of vibration

The presence of vibration is recorded at the time of detection of instantaneous blocking.

Accumulated power-on time

The accumulated value of power-on time is recorded at the time of detection of instantaneous blocking.

2-28-2. Factory Default Setting

The instantaneous blocking detection is set as disabled.

2-28-3. Setting Change using Intelligent Tap

It is unable to change the setting of this function using the Intelligent Tap.

2-28-4. Setting Change using SD Manager 3

The following setting can be done using SD Manager 3.

Function	Initial value	Configurable value or numerical range
Instantaneous block detection	Unblocking/blocking information	Disabled, unblocking/blocking information, input signal linkage*1, and output information
in omation	mornidaen	minago 1, and output information



/[For the details of the setting change using SD Manager 3, refer to Chapter 4 Setting with SD Manager 3.

2-29. Setting Recovery

F3SG-SRA	✓
F3SG-SRB	✓

You can use the SD Manager 3 to recover the F3SG-SR setting to the default factory setting.



It is recommended that the Position 2 of the DIP Switch be set at OFF (DIP Switch Disabled).



Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.

2-30. Backup/Restoration

F3SG-SRA	✓
F3SG-SRB	✓

2-30-1. Overview

Implement restoration or copying of the settings of F3SG-SR using the Intelligent Tap.

■ Backup

This is the function to save the configuration of F3SG-SR in the Intelligent Tap.

■ Restoration

This is the function to write the configuration saved in the Intelligent Tap into F3SG-SR.



Both backup and restoration do not need SD Manager 3 and can be implemented even if multiple sensors are connected with each other.



For details, refer to 3-6. Backup/Restoration.

2-31. IO-Link

⚠ WARNING

Do not use the output signal of the IO-Link output for safety applications. Failure to do so may result in serious injury when the F3SG-SR fails.



F3SG-SRA	✓
F3SG-SRB	✓

By using the Intelligent Tap as an IO-Link device, sensor's configuration and monitoring information can be provided via the IO-Link master.



For the details of the IO-Link communications using the Intelligent Tap, refer to 3-9. IO-Link.

Chapter 3 Setting with Intelligent Tap

	 List of Functions Configurable by Intelligent Tap and Initial sethod 	Setup 130
	3-1-1. Functions Configurable by Intelligent Tap	130
	3-1-2. Initial Setup Method after Purchase	130
3-2	2. Connection	131
3-3	3. Wiring	132
3-4	4. LED Indicators on Intelligent Tap	133
3-	5. DIP Switch on Intelligent Tap	134
3-6	6. Backup/Restoration	135
	3-6-1. Description of Functions	135
	3-6-2. Performing Backup	136
	3-6-3. Performing Restoration	138
	3-6-4. Various Usage of Backup and Restoration	141
	3-6-4-1. Plug and Work	141
	3-6-4-2. Copy and Paste of Sensor Settings	141
	3-6-4-3. Changing F3SG-SR Configuration to Conne Intelligent Tap	ct to 141
	3-6-4-4. Changing F3SG-SR's Settings with Intelligent Ta Switch	p DIF 141
3-	7. Teach-in (Fix Blanking / Floating Blanking)	142
	3-7-1. Setting Fixed Blanking by Teach-in	142
	3-7-2. Setting Floating Blanking by Teach-in	146
3-8	3. Connection to SD Manager 3	150
3-9	9. IO-Link	151
	3-9-1. Functional Description	151
	3-9-2. Communication Specifications	151
	3-9-3. Process Data	151
	3-9-4. Service Data	153

3-1. List of Functions Configurable by Intelligent Tap and Initial Setup Method

3-1-1. Functions Configurable by Intelligent Tap

The following functions are configurable by the DIP Switch on the Intelligent Tap (F39-SGIT-IL3).

Function	Page
Interlock	
Pre-Reset	
External Device Monitoring (EDM)	
Fixed Blanking	
Floating Blanking	
Operating Range Selection	



No password is required for configuring the functions by the DIP Switch on the Intelligent Tap. Make sure the Responsible Person keeps the Intelligent Tap properly.

3-1-2. Initial Setup Method after Purchase

When connecting the Intelligent Tap to the F3SG-SR for the first time after purchase, you need to make the following settings.

- 1 Connect the Intelligent Tap to the F3SG-SR. The factory default setting of the DIP Switch Position 1 is ON. If the Position 1 is set at OFF, switch the position to ON.
- 2. Turn the power on. Then the Intelligent Tap performs the Backup automatically and restarts itself.
- **3.** If the DIP Switch Position 1 is set at ON (Lock), the F3SG-SR performs its normal operation.
- **4.** Operate according to the usage below.
 - Setting with DIP Switch
 Turn the power off and operate referring to the following chapter(s).


 3-5. DIP Switch on Intelligent Tap and 3-6-3. Performing Restoration
 - Setting with SD Manager 3
 Connect a USB-C™ cable to the Intelligent Tap and operate referring to the following chapter(s).
 Chapter 4 Setting with SD Manager 3
 - Setting not needed Use the devices as they are.




- When the DIP Switch Position 1 is set at OFF (Unlock) in the step 1 and 2, the Intelligent Tap and the F3SG-SR are waiting for the Backup operation (or waiting for Push Switch operation). In this case, turn the power off, then switch the DIP Switch Position to ON (Lock) and turn the power on again. After this, the F3SG-SR performs its normal operation.
- CHECK! If you write settings with SD Manager 3 to the Intelligent Tap alone before you connect the Intelligent Tap to the F3SG-SR for the first time after purchase, the Backup is not started automatically. Operate according to the Backup procedure. For more information on the Backup procedure, refer to

3-2. Connection

Shown below is a connection example of the Intelligent Tap, F3SG-SR, PC and IO-Link Master. For other connection examples, refer to *4-1-3-1*. *Connection Patterns of F3SG-SR, Intelligent Tap, and Each Device*. For IO-Link master details, see the manual of the IO-Link to connect.

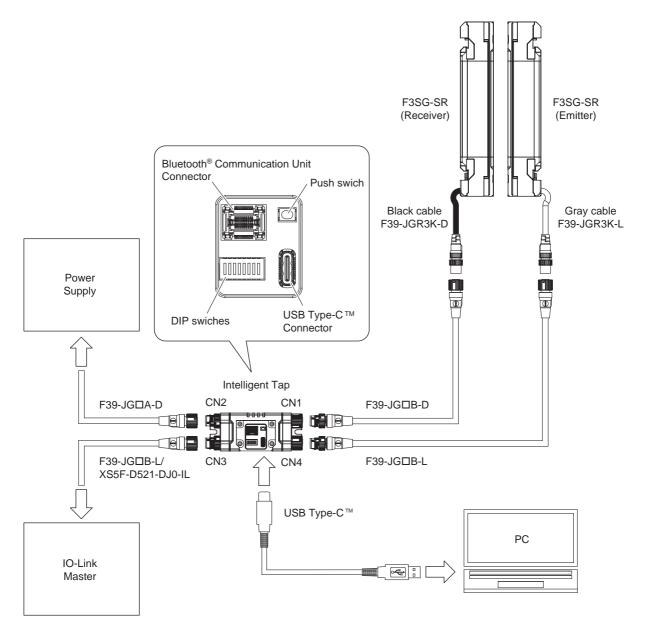

3-3. Wiring

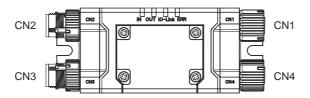

<Internal wiring diagram>



CN2

RESET/EDM	Yellow	1
24V/0V	Brown	2
MUTE A/PRE-RESET/PSDI	Gray	3
MUTE B	Pink	4
OSSD 1	Black	5
OSSD 2	White	6
0V/24V	Blue	7
AUX	Red	8

The wire colors are those of the F39-JG□A-D to be connected to the CN2.

CN1





Male

CN3

L+	Brown	1
DO	White	2
L-	Blue	3
C/Q	Black	4
Not used	Yellow	5

The wire colors are those of the XS5F-D521-DJ0-IL to be connected to the CN3.


CN4

1	+24V
2	TEST
3	OV
4	COM(+)
5	SIO-



Female

3-4. LED Indicators on Intelligent Tap

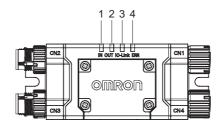

Shown below are indication statuses of LED indicators on the Intelligent Tap when you purchased.

Location	Indicator	Name	Color	Illuminated	Blinking
1	IN	Sensor status	Yellow	Safety outputs of the F3SG-SR are in the ON state	The F3SG-SR is in the LOCKOUT state. Or the Intelligent Tap is waiting for Push Switch operation (in the Backup) or the Intelligent Tap and F3SG-SR are waiting for restart (in the Backup). Or communication error in the Backup or between the F3SG-SR and the Intelligent Tap. Or the Restoration failed
2	OUT	Output status	Green	Outputs of the Intelligent Tap are in the ON state (*1)	The Restoration failed. Or in the Restoration, the Intelligent Tap has communication error, is waiting for Push Switch operation or transferring data, or the Intelligent Tap and F3SG-SR are waiting for restart
			Red	Outputs of the Intelligent Tap are in the OFF state (*2)	Communication error between the F3SG-SR and the Intelligent Tap
3	IO-Link	IO-Link	Green	-	Intelligent Tap communicates with IO-Link Master. Or IO-Link circuit error
4	ERR	Lockout	Red	The Intelligent Tap is in the LOCKOUT state, or has communication error, DIP Switch circuit error at startup, communication error in the Backup or Restoration, restoration failure, IO-Link circuit error, power supply voltage error or other errors	-

^{*1.} When the safety outputs of the F3SG-SR are in the ON state, the outputs of the Intelligent Tap are in the ON state.

In the SETTING state to make settings with the SD Manager 3, the IN and OUT indicators blink. (IN: Yellow, OUT: Green)

CHECK! For more information on the statuses of the LED indicators in the SETTING state, refer to 4-1-4. SETTING State of F3SG-SR with SD Manager 3 Connected.

^{*2.} When the safety outputs of the F3SG-SR are in the OFF state, the outputs of the Intelligent Tap are in the OFF state.

3-5. DIP Switch on Intelligent Tap

<u>∕</u> WARNING

Make sure the Responsible Person tests the operation of the F3SG-SR after setting with the DIP Switch on the F39-SGIT-IL3 to verify that the F3SG-SR operates as intended. Make sure to stop the machine until the test is complete. Unintended settings may cause a person to go undetected, resulting in serious injury.



The table below lists the positions and assigned functions of the DIP Switches on the Intelligent Tap.

☐: Indicates a switch position.

Position	Function	Setting	Description
1	Lock/Unlock	1 ON	Unlock
'		1 ON	Lock (factory default setting)
2	DIP Switch Enable/Disable	2 ON	DIP Switch Disabled (factory default setting)
2	DIP Switch Enable/Disable	2 ON	DIP Switch Enabled
3	EDM	3 O N	EDM Disabled (factory default setting)
3	EDIVI	3 ON	EDM Enabled
		4 O N	Auto Reset (factory default setting)
		5 ON	(a a a a a a a a a a a a a a a a a a a
	Interlock/Pre-Reset	4 ON	Pre-Reset
4, 5		5 ON	The Reserv
٦, ٥		4 🔲 ON	Manual Reset (Start/Restart Interlock)
		5 ON	Manual Neset (Start Nestart Interiock)
		4 ON	Auto Reset (same as Auto Reset (factory default
		5 ON	setting))
		6 ON	Planting Disabled (factors, default actting)
		7 ON	Blanking Disabled (factory default setting)
		6 ON	Fixed Blanking Enabled
6.7	Fixed Blanking/	7 ON	Fixed Bialiking Enabled
6, 7	Floating Blanking	6 ON	Floating Planking Fachlad
		7 ON	Floating Blanking Enabled
		6 ON	Blanking Disabled (same as Blanking Disabled
		7 ON	(factory default setting))
8	Operating Pange Selection	8 O N	Long (factory default setting)
0	Operating Range Selection	8 ON	Short



When the DIP Switch Position 1 is set at ON (Lock), Position 2 at ON (DIP Switch Enabled) and Positions 3 to 8 at OFF*, the functions assigned to the Positions 3 to 8 operates according to the settings of the OFF positions and the following functions are set as described in the table below.

Item	Function	Setting
PSDI	PSDI	Disable
Muting	Muting	Enable
	Zone setting	All beams
Teach-in	Teach-in Input	Enable Teach-in by Push Switch
Area Beam Indicator	Output operation mode of Area Beam Indicator	Block/Unblock Information
Warning Zone	Warning Zone	Disable
Reduced Resolution	Reduced Resolution	Disable

^{*} Refer to 2-1. Combination of Functions for settings to be affected when any of Positions 3 to 8 is set at ON.

3-6. Backup/Restoration

3-6-1. Description of Functions

F3SG-SR series allow easier restoration or copy of F3SG-SR's settings with an Intelligent Tap.

■ Backup

You can save the F3SG-SR's settings to an Intelligent Tap.

■ Restoration

You can write the F3SG-SR's settings saved in an Intelligent Tap to the sensor.



- · You can perform both Backup and Restoration without the SD Manager 3 and even when the F3SG-SR is in the cascade connection. When performing the Restoration, the sensor configuration saved in the Intelligent Tap must be the same as the actual sensor configuration. If the sensor configuration of other than the number of beams is not the same, perform the Backup of the connected F3SG-SR and then perform the Restoration again. Refer to 3-6-3. Performing Restoration for the conditions to perform the Restoration.
- · When the power is shut down or the F3SG-SR is restarted by a reset input in the middle of the Backup or the Restoration, the Backup or the Restoration is interrupted. Start the Backup or the Restoration over again. Refer to 3-6-2. Performing Backup for the Backup procedure and 3-6-3. Performing Restoration for the Restoration procedure.


3-6-2. Performing Backup

∕ WARNING

When performing the Backup, make sure to set the DIP Switch Position 1 at OFF (Unlock) before turning on the power. If the DIP Switch Position 1 is at ON (Lock), the Restoration is performed, which may case the settings of the F3SG-SR to be overwritten and a person to go undetected, resulting in serious injury.



Follow the flowchart below to perform backup.

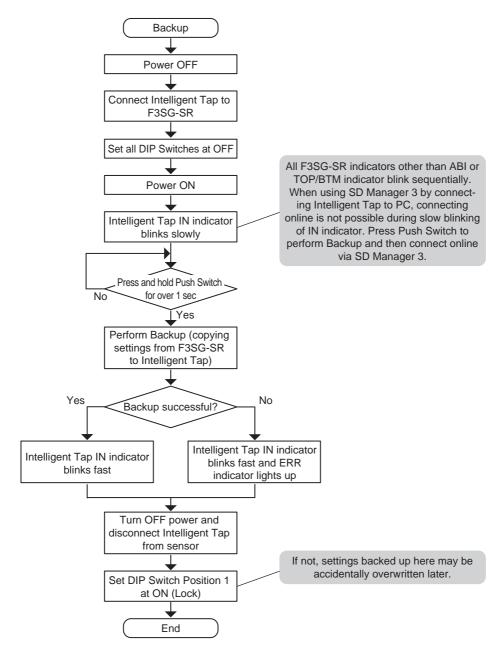

To run the Intelligent Tap while being connected to the F3SG-SR, you must save the F3SG-SR's settings in the Intelligent Tap by the backup operation. After performing the Backup, set the DIP Switch Position 1 at ON (Lock) and connect the Intelligent Tap to the F3SG-SR.

If the Intelligent Tap is under the factory shipment status, the Backup will be automatically performed even if DIP Switch Position 1 is set at ON (Lock) as it has no backup data in it. Unlike the normal Backup, you do not have to operate the Push Switch nor restart the device after the end of the Backup.

The Backup saves the F3SG-SR's setup information in the Intelligent Tap which is automatically restarted and performs its normal operation.

■ LED indication during Backup

	Function	Indicator			
Mode	Mode State		OUT (Green/Red)	IO-Link (Green)	ERR (Red)
	Transitioning modes	-)			
	Waiting for Push Switch operation				
Backup	Transferring data	-)			
	Waiting for restart after Backup				
	Waiting for restart due to communication error				-)



3-6-3. Performing Restoration

⚠ WARNING

When perforning the Restoration, make sure to set the DIP Switch Position 1 at ON (Lock) before turning on the power. If the DIP Switch Position 1 at OFF (Unlock), the Backup is performed, which may cause the settings of the Intelligent Tap to be overwritten and a person to go undetected, resulting in serious injury.




When the Restoration is performed, if the DIP Switch Position 2 is at ON (DIP Switch Enabled) and settings of the DIP Switch Positions 3 to 8 are different from the backup data in the F39-SGIT-IL3, the settings in the DIP Switch takes priority and are saved in the F3SG-SR. To prevent such an accident, it is recommended that you set the DIP Switch Position 2 at OFF before performing the Restoration when you use the settings backed up from the F3SG-SR or make settings with the SD Manager 3.





- When performing the Restoration of the backup data saved in the Intelligent Tap to the F3SG-SR, if the DIP Switch Position 2 is set at ON (DIP Switch Enabled) and the Positions 3 to 8 are set to different functions from the settings of the backup data, the settings of the DIP Switch will be restored to the F3SG-SR. When you want to change the settings of the F3SG-SR to the backup data in the Intelligent Tap, change the DIP Switch Position 2 to OFF (DIP Switch Disabled) and then perform the Restoration again.
- If the DIP Switch Position 1 is set at ON (Lock) and settings in the Intelligent Tap corresponds with that in the sensor, restoration is not performed.

Follow the flowchart below to perform the Restoration.

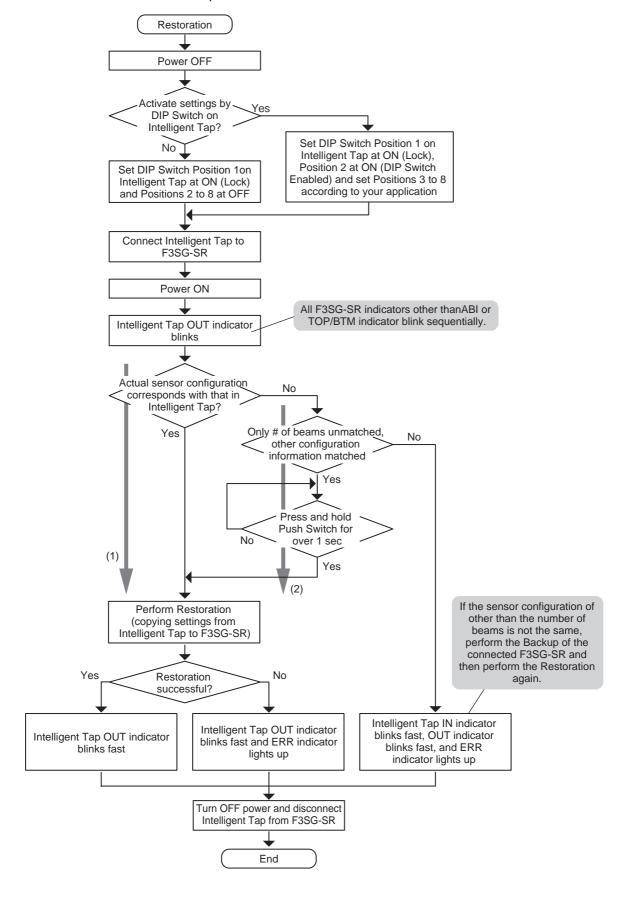

If the sensor configuration (model and cascading) in the Intelligent Tap corresponds with that of the actual one, the Restoration is automatically performed.(1)

If the sensor configurations differ only in the number of beams, you can forcibly perform the Restoration with the Push Switch.(2)

If the sensor configuration of other than the number of beams is not the same, perform the Backup of the connected F3SG-SR and then perform the Restoration again.



After the Restoration is performed, verify that the F3SG-SR operates with intended settings before using the F3SG-SR.

■ LED indication during Restoration

	Function	Indicator			
Mode	State	IN (Yellow)	OUT (Green/Red)	IO-Link (Green)	ERR (Red)
	Transitioning modes		Green		
	Waiting for Push Switch operation		Green		
Restoration	Transferring data		Green	<u></u>	
rectoration	Waiting for restart after Restoration		Green		
	Waiting for restart due to unenforceable condition		Green		-)
	Waiting for restart due to communication error		Green		-)
		Illumin	nated - OFF	Fast blinking	Slow blinking
Fast blinking					
0.25 s →	0.5 s				
Slow blinking					
-	1.0 s 2.0 s				

3-6-4. Various Usage of Backup and Restoration

3-6-4-1. Plug and Work

If the F3SG-SR with the Intelligent Tap installed causes a fault, its settings can be reconfigured only by replacing with a new F3SG-SR of the same model and turning its power ON.

3-6-4-2. Copy and Paste of Sensor Settings

You can configure the same settings to multiple F3SG-SR's by configuring one F3SG-SR, performing the Backup to an Intelligent Tap, and restoring the settings to other F3SG-SR's.

3-6-4-3. Changing F3SG-SR Configuration to Connect to Intelligent Tap

If you want to change an F3SG-SR's configuration to connect to an Intelligent Tap or if you want to connect the Intelligent Tap to another F3SG-SR, perform the Backup of the settings of the newly connected F3SG-SR first.

3-6-4-4. Changing F3SG-SR's Settings with Intelligent Tap DIP Switch

To change the F3SG-SR's settings only by setting the DIP Switch on the Intelligent Tap without using the SD Manager 3, follow the steps below.

1. If the light curtain is under operation while the Intelligent Tap is already connected

- (1) Make sure the power is OFF.
- (2) Make sure that the DIP Position 1 is set at ON (Lock), and set the Position 2 at ON (DIP Switch Enabled).
- (3) Configure other functions with the DIP Switch Positions 3 to 8.
- (4) After restart, restoration is performed.
- (5) When the Restoration is complete, the OUT indicator (green) blinks fast. Restart the F3SG-SR.

2. To reflect the DIP Switch settings to an F3SG-SR that has no Intelligent Tap connected

- (1) Connect an Intelligent Tap to the F3SG-SR.
- (2) Turn the power ON. Refer to "3-6-2. Performing Backup" for the procedure of the Backup.
- (3) Perform the steps from (1) to (4) of the procedure No. 1 above.
- (4) After the Restoration is complete, turn the power OFF and disconnect the Intelligent Tap.

3-7. Teach-in (Fix Blanking / Floating Blanking)

∕!\ WARNING

Make sure the Responsible Person test the operation of the F3SG-SR after setting with the Teach-in to verify that the F3SG-SR operates as intended. Unintended settings may cause a person to go undetected, resulting in serious injury.



F3SG-SRA	Х
F3SG-SRB	Х

3-7-1. Setting Fixed Blanking by Teach-in

Overview

You can teach-in the settings of the Fixed Blanking by interrupting the target area of the Fixed Blanking. The Teach-in described in this chapter is performed with the Intelligent Tap connected to the F3SG-SR and using the Push Switch or the Muting Input A.

Teach-in steps

Perform the Teach-in of the Fixed Blanking based on the following steps.

- (1) Connect Intelligent Tap to F3SG-SR
- (2) Beam Alignment
- (3) DIP Switch Setting
- (4) Transition to Teach-in Mode
- (5) Teach-In and Check Processes
- (6) Restart

(1) Connect Intelligent Tap to F3SG-SR

Connect the Intelligent Tap to the F3SG-SR.

(2) Beam Alignment

Perform the beam alignment for the F3SG-SR. In the case of the Optical Synchronization, install the F3SG-SR so that the synchronization beams are clear. For detailed beam adjustment steps, see 5-3-5. Beam Alignment Procedure.



Misalignment during the Teach-in may result in an unintended setting or a failure of the Teach-in.



The factory default setting of the Teach-in Input is [Enable Teach-in by Push Switch]. When selecting [Enable Teach-in by Push Switch or wiring], select [Teach-in Input] - [Enable Teach-in by Push Switch or wiring] with the SD Manager 3 after the step (2), and then perform the Restoration.

The [Enable Teach-in by Push Switch or wiring] function cannot be used in combination of some functions. Refer to 2-1. Combination of Functions for more information on combinations of functions.



 $\sqrt{|E|}$ Refer to 4-3-2-3. Teach-in Input for more information on setting this function by the SD Manager 3.

Refer to 4-2-7-3. Writing Configuration into Intelligent Tap for more information on the Restoration by the SD Manager 3.

(3) DIP Switch Setting

Before powering the F3SG-SR, set the DIP Switch Position 1 at ON (Lock), Position 2 at ON (DIP Switch Enabled) and Position6 at ON and 7 at OFF (Fixed Blanking Enabled). And then power the F3SG-SR.

The Intelligent Tap restores the settings configured by the DIP Switch, to the F3SG-SR. When the Restoration process is complete successfully, restart the F3SG-SR and check if the F3SG-SR operates normally.

Block the target Fixed Blanking zone by an object. Do not remove the object until the Step (5) is complete.



Refer to 3-4. LED Indicators on Intelligent Tap for more information.

(4) Transition to Teach-in Mode

Press and hold the Push Switch (for 3 s or longer) or turn the muting input A ON (for 3 s or longer) to make the F3SG-SR transition to Teach-in mode.

When the F3SG-SR transitioned to Teach-in mode, the CFG indicator of the F3SG-SR blinks.

(The mode transition to Teach-in mode does not occur if the setting of the DIP Switch is configured as "Unlock", "DIP Switch Disabled" or "Fixed Blanking Disabled".)

Indicator status in Teach-in mode

F3SG-SR

LED Indicator	Status
SEQ	OFF
CFG	Blinking -
ABI	Area blocked by blocking object is illuminated in red


(5) Teach-In and Check Processes

When it is ensured that the F3SG-SR is in the Teach-in mode, press the Push Switch (for within 1 s) or turn the muting input A ON (for within 1 s) to activate the scanning of the blocked area and automatically configure the setting related to the Fixed Blanking.*1


The F3SG-SR judges if the setting is valid or not.

If the setting is invalid *2, SEQ indicator blinks. In this case, try the steps again from (4).

*1 The Fixed Blanking zone is configured to include one additional beam outside the actually blocked beams. Two beams on both ends are configured as allowable beams.

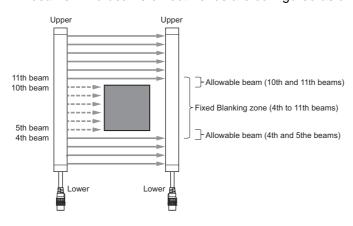

- *2 If the setting value is not an allowable one, the setting is invalid. The following cases are judged as invalid.
 - •All beams have been configured as a Fixed Blanking zone (including allowable beams).(Fig. 1)
 - •All beams except the beams at both ends have been configured as a Fixed Blanking zone. (Fig. 2)
 - •End beams (synchronization beams) have been configured as a Fixed Blanking zone at the same time. (Primary sensor in Optical Synchronization only) (Fig. 3)
 - •The Teach-in must be performed with at least 1 beam being blocked.(Fig. 4)
 - •When the Teach-in is performed for more than one Fixed Blanking zones, there must be at least 3 beams between the blocking objects.(Fig. 5)
 - •Four or more areas have been configured as Fixed Blanking zones for one channel.

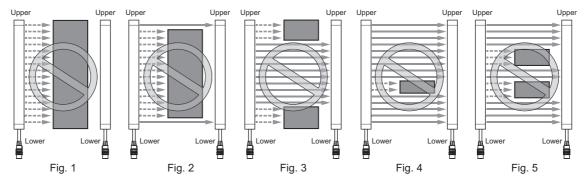

Indicator status of the F3SG-SR when Teach-in setting is valid or invalid

Teach-in se	tting is valid	Teach-in setting is invalid		
LED Indicator	Status	LED Indicator	Status	
SEQ	OFF	SEQ	Blinking —	
CFG	illuminated —	CFG	Blinking -	
ABI	Area blocked by blocking object is illuminated in red	ABI	Area blocked by blocking object is illuminated in red	

(6) Restart

<When operating the F3SG-SR with the Intelligent Tap not connected>

When completing the Teach-in setting, power off the F3SG-SR and remove the Intelligent Tap. Then restart the F3SG-SR.

<When operating the F3SG-SR with the Intelligent Tap connected>

When completing the Teach-in setting, power off the F3SG-SR and set the DIP Switch Position 1 at OFF (Unlock). Then restart the F3SG-SR.

There are two ways to restart.

- Power cycling
- Pressing and holding reset switch (for 1 s or longer): Set the DIP Switch Position 1 at OFF (Unlock). (If restarting the F3SG-SR with the DIP Switch Position 1 set at ON (Lock), the configured zone will be invalid. In this case, try the steps again from (4).)


After the restarting, the F3SG-SR waits for the Backup process of the settings. Perform the Backup process. After the Backup process is complete, the power off the F3SG-SR and set the DIP Switch Position 1 at ON (Lock). Check if the DIP Switch Positions 2 to 8 and other settings are configured as intended, and then restart the F3SG-SR. After the F3SG-SR is restarted, the check if the Fixed Blanking zone and other settings are properly configured.



Refer to 3-6-2. Performing Backup for more information on the Backup procedure.

■ Others

- When the Teach-in is performed with the all Fixed Blanking zone being unblocked, the Fixed Blanking is configured as Disabled. Teach-in is available under cascade connection as well. In such a case, use the Push Switch on the Intelligent Tap or the muting input A to perform Teach-in with the similar steps.
- When the F3SG-SR is in the cascade connection, the Teach-in setting is performed for each channel independently. This allows different F3SG-SR's to have different Teach-in settings depending on the position or size of the blocking object. For example, when the secondary sensor (Channel 2) of the F3SG-SR is blocked, that secondary sensor (Channel 2) only has the Fixed Blanking setting.

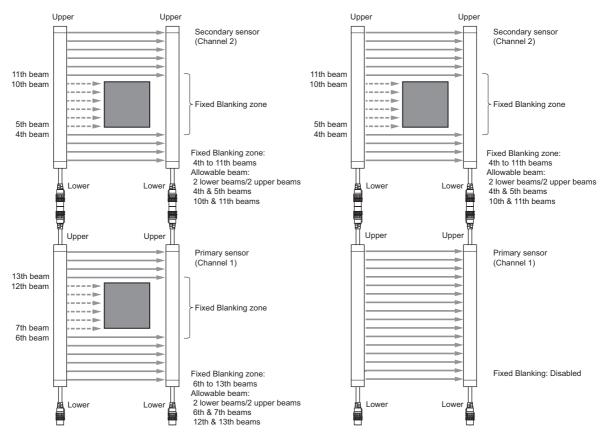

• The Teach-in result for Fixed Blanking and Floating Blanking cannot be saved together. When the Teach-in is ferformed for Floating Blanking, the result of the Teach-in for Fixed Blanking is cleared.

Chapter3 Teach-in (Fix Blanking / Floating Blanking)

3-7-2. Setting Floating Blanking by Teach-in

Overview

You can teach-in the settings of the Floating Blanking by interrupting with an object to monitor by the Floating Blanking. The Teach-in described in this chapter is performed with the Intelligent Tap connected to the F3SG-SR and using the Push Switch or the Muting Input A.

■ Teach-in steps

Perform the Teach-in of the Floating Blanking based on the following steps.

- (1) Connect Intelligent Tap to F3SG-SR
- (2) Beam Alignment
- (3) DIP Switch Setting
- (4) Transition to Teach-in Mode
- (5) Result Check Process
- (6) Restart

(1) Connect Intelligent Tap to F3SG-SR

Connect the Intelligent Tap to the F3SG-SR.

(2) Beam Alignment

Perform the beam alignment for the F3SG-SR. In the case of the Optical Synchronization, install the F3SG-SR so that the synchronization beams are clear.

For detailed beam adjustment steps, see 5-3-5. Beam Alignment Procedure.



Misalignment during the Teach-in may result in an unintended setting or a failure of the Teach-in.



The factory default setting of the Teach-in Input is [Push Switch]. When selecting [Push Switch or external wiring], select [Teach-in Input] - [Push Switch or external wiring] with the SD Manager 3 after the step (2), and then perform the Restoration.



Refer to 4-3-2-3. Teach-in Input for more information on setting this function by the SD Manager 3. Refer to 4-2-7-3. Writing Configuration into Intelligent Tap for more information on the Restoration by the SD Manager 3.

(3) DIP Switch Setting

Before powering the F3SG-SR, set the DIP Switch Position 1 at ON (Lock), Position 2 at ON (DIP Switch Enabled) and Position6 at OFF and 7 at ON (Floating Blanking Enabled). And then power the F3SG-SR.

The Intelligent Tap restores the settings configured by the DIP Switch, to the F3SG-SR. When the Restoration process is complete is completed successfully, restart the F3SG-SR and check if the F3SG-SR operates normally.

Block the target Floating Blanking zone by an object. Do not remove the object until the Step (5) is complete.



The object must be no smaller than the object resolution.




Refer to 3-4. LED Indicators on Intelligent Tap for more information.

(4) Transition to Teach-in Mode

Press and hold the Push Switch (for 3 s or longer) or turn the muting input A ON (for 3 s or longer) to make the F3SG-SR transition to Teach-in mode. Upon transition the scan is started for the blocked location. Move the blocking object in parallel with the F3SG-SR.

The object of the size of at least 1 beam must be moved. Failure to do so will result in a failure of allowable beam setting.

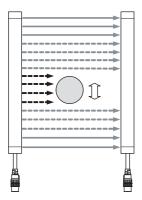

When transitioned to Teach-in mode, the CFG indicator of the F3SG-SR blinks.

(The mode transition to Teach-in mode does not occur if the setting of the DIP Switch is configured as "Unlock", "DIP Switch Disabled" or "Floating Blanking Disabled".)

Indicator status in Teach-in mode

F3SG-SR

LED Indicator	Status
SEQ	OFF
CFG	Blinking -
ABI	Area blocked by blocking object is illuminated in red

(5) Result Check Process

Press the Push Switch (for within 1 s) or turn the muting input A ON (for within 1 s) automatically configures the Floating Blanking setting based on the scan result.*1

The determined setting is processed for valid/invalid judgment process in the sensor.

If the setting is invalid*2, SEQ indicator blinks. In this case, try the steps again from (4).

Indicator status of the F3SG-SR when Teach-in setting is valid or invalid

Teach-in se	tting is valid	Teach-in setting is invalid		
LED Indicator	Status	LED Indicator	Status	
SEQ	OFF	SEQ	Blinking	
CFG	illuminated —	CFG	Blinking -	
ABI	Area blocked by blocking object is illuminated in red	ABI	Area blocked by blocking object is illuminated in red	

^{*1} The number of blanked beams is configured with the maximum number of blocked beams in the Teach-in process (steps (4) to (5)). Allowable beams are is configured with (Maximum blocked beams - Minimum blocked beams) in the teach-in process. The blanking monitoring function is configured as lockout.

*2 If the setting value is not an allowable one, the setting is invalid. The following cases are judged as invalid.

- The number of blanked beams is configured as nine (9) or more.
- The number of allowable beams is configured as three (3) or more.
- The number of blanked beams is the same as that of sensor beams.
- Number of allowable beams >= Number of blanked beams
- · Teach-in is started when an object does not exist.
- Beam-blocked state is detected discontinuously in the Teach-in process.
- The blocking object is removed until the steps (4) to (5) are completed.

(6) Restart

<When operating the F3SG-SR with the Intelligent Tap not connected>

When completing the Teach-in setting, power off the F3SG-SR and remove the Intelligent Tap. Then restart the F3SG-SR.

<When operating the F3SG-SR with the Intelligent Tap connected>

When completing the Teach-in setting, power off the F3SG-SR and set the DIP Switch Position 1 at OFF (Unlock). Then restart the F3SG-SR.

There are two ways to restart.

- Power cycling
- Pressing and holding reset switch (for 1 s or longer): Set the DIP Switch Position 1 at OFF (Unlock). (If restarting the F3SG-SR with the DIP Switch Position 1 set at ON (Lock), the configured zone will be invalid. In this case, try the steps again from (4).)


After the restarting, the F3SG-SR waits for the Backup process of the settings. Perform the Backup process. After the Backup process is complete, the power off the F3SG-SR and set the DIP Switch Position 1 at ON (Lock). Check if the DIP Switch Positions 2 to 8 and other settings are configured as intended, and then restart the F3SG-SR. After the F3SG-SR is restarted, the check if the Floating Blanking zone and other settings are properly configured.



Refer to 3-6-2. Performing Backup for more information on the Backup procedure.

Others

- Be sure to perform the Teach-in setting of the Floating Blanking while moving the interrupting object. If teach-in is performed with all areas receiving light, the Floating Blanking is configured as invalid.
- The Teach-in is available under cascade connection as well.
- If The Teach-in is performed with a cascade connection, Teach-in setting is configured for each channel independently. If sizes of blocking objects are different, settings are configured differently for sensors as well. For example, if only the secondary sensor (Channel 2) of the F3SG-SR is blocked, the blanking setting is configured for the secondary sensor (Channel 2) only. Other sensors than the Channel 2 work as normal detection zone.

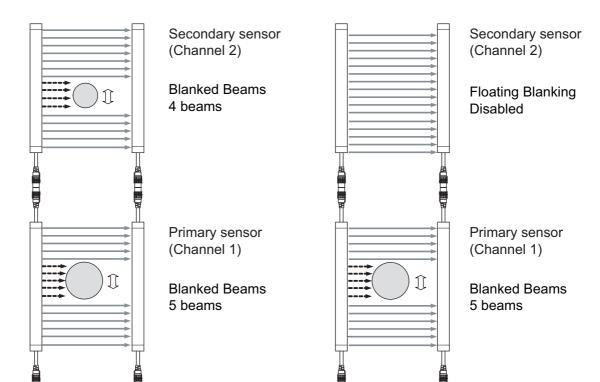

3-8. Connection to SD Manager 3

Follow the steps below to connect to the SD Manager 3.

1) To edit backup/restoration data in the Intelligent Tap

- i. Connect the Intelligent Tap and computer via a USB cable. Make sure that the DIP Switch Position 1 is set at ON (Lock) and DIP Switch Position 2 at OFF (DIP Switch Disabled). The Intelligent Tap can run by USB power supply with no external power supply connected.
- ii. Load the backup/restoration data from the Intelligent Tap, then edit the data with the SD Manager 3, and write the data to the Intelligent Tap.
- iii. When the write is complete, unplug the USB cable from the Intelligent Tap.



- Make sure that the DIP Switch Position 1 is set at ON (Lock) before connecting to F3SG and turning on power. If the DIP Switch Position 1 is set at OFF (Unlock), the Backup is performed and the edited setup data may be overwritten by the sensor setup data in the connected unit.
- Even when the DIP Switch Position 1 is set at ON (Lock), you can edit the configuration by the SD Manager 3.

2) To edit F3SG setup data

- Connect the Intelligent Tap to the F3SG-SR and set the F3SG-SR to the state where the backup has been performed. Make sure that the DIP Switch Position 1 is set at ON (Lock) and DIP Switch Position 2 at OFF (DIP Switch Disabled).
- ii. Connect the Intelligent Tap and computer via a USB cable with the F3SG-SR and the Intelligent Tap powered.
- iii. Load the setup parameters, then edit and write them. The setup parameters are written to both F3SG and Intelligent Tap.
- iv. Before restarting, make sure that the DIP Switch Position 1 is set at ON (Lock) and DIP Switch Position 2 at OFF (DIP Switch Disabled), or that the Intelligent Tap is unplugged from the F3SG-SR/PG.



If the DIP Switch Position 2 is set at ON (DIP Switch Enabled) and if the restoration is performed, settings of interlock, blanking, and Operating Range Selection will be overwritten by the settings of the DIP switch.

3-9. IO-Link

MARNING

Do not use the output signal of the IO-Link output for safety applications. Failure to do so may result in serious injury when the F3SG-SR fails.



3-9-1. Functional Description

The Intelligent Tap, as an IO-Link device, can send information of sensor's setup status and monitoring via the IO-Link master.

Download an IO-Link Device Description file (IODD file) from the website.



For details, refer to your local Omron website.

3-9-2. Communication Specifications

Model	F39-SGIT-IL3
Transmission rate	COM3 (230.4 kbps)
Minimum cycle time	12 ms
Process data length	4 bytes
On-request data length	32 bytes
Message sequence type	TYPE_2_V
Vendor ID	612 (0x0264)
Device ID	262145 (0x040001)

3-9-3. Process Data

Byte 0 (PD0)	Bit7	Bit7	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
	Offset31	Offset30	Offset29	Offset28	Offset27	Offset26	Offset25	Offset24
			Po	wer supply vol	tage (Upper 8l	oit)		
Byte 1 (PD1)	Bit7	Bit7	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
	Offset23	Offset22	Offset21	Offset20	Offset19	Offset18	Offset17	Offset16
		Power supply voltage (Lower 8bit)						
	Bit7	Bit7	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Byte 2 (PD2)	Offset15	Offset14	Offset13	Offset12	Offset11	Offset10	Offset9	Offset8
	Reserved (0)	Instantaneous Block Detection Information (Channel 3)	Instantaneous Block Detection Information (Channel 2)	Instantaneous Block Detection Information (Channel 1)	Light level diagnosis information (Channel 3)	Light level diagnosis information (Channel 2)	Light level diagnosis information (Channel 1)	Sequence error information
	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Byte 3 (PD3)	Offset7	Offset6	Offset5	Offset4	Offset3	Offset2	Offset1	Offset0
	Sensor or Intelligent Tap Lockout information	Intelligent Tap Lockout information	Reserved (0)	RESET/ EDM/ Override input status	Mute B input status	Mute A input status	Auxiliary output status	Safety output status

The table below lists the data size and descriptions of the process data items.

Name	Data size	Description
Power supply voltage	16 bits	Power supply voltage value for Receiver being supplied. (VDC)
Sequence error information	1 bit	Under muting sequence error state or interlock sequence error state The others
Light level diagnosis information (Channel 1)	1 bit	1: When one segment system of the F3SG-SR or the primary sensor is unblocked and light intensity is within a range from 100% to 170% (factory default setting*) of ON-threshold for 10 s or longer. 0: The others
Light level diagnosis information (Channel 2)	1 bit	1: When the 1st secondary sensor in cascade connection is unblocked and light intensity is within a range from 100% to 170% (factory default setting*) of ON-threshold for 10 s or longer. 0: The others
Light level diagnosis information (Channel 3)	1 bit	1: When the 2nd secondary sensor in cascade connection is unblocked and light intensity is within a range from 100% to 170% (factory default setting*) of ON-threshold for 10 s or longer. 0: The others
Instantaneous Block Detection Information (Channel 1)	1 bit	When the Sensor system of one segment system of the F3SG-SR or the primary sensor stops accidentally due to instantaneous blocking. The others
Instantaneous Block Detection Information (Channel 2)	1 bit	When the Sensor system of the 1st secondary sensor in cascade connection stops accidentally due to instantaneous blocking. The others
Instantaneous Block Detection Information (Channel 3)	1 bit	When the Sensor system of the 2nd secondary sensor in cascade connection stops accidentally due to instantaneous blocking. The others
Safety output status	1 bit	1: ON, 0: OFF
Auxiliary output status	1 bit	1: ON, 0: OFF
Mute A input status	1 bit	1: ON, 0: OFF
Mute B input status	1 bit	1: ON, 0: OFF
RESET/EDM/Override input status	1 bit	1: ON, 0: OFF
Intelligent Tap Lockout information	1 bit	Intelligent Tap is in LOCKOUT state The others
Sensor or Intelligent Tap lockout information	1 bit	Sensor or Intelligent Tap is in LOCKOUT state The others
Reserved	4 bytes	0

^{*} It is necessary to change the value in the setting of [Stable Light Threshold Adjustment] of the SD Manager 3. Refer to 2-24. Stable Light Threshold Adjustment and 4-3-5-2. Stable Light Threshold Adjustment for more information on the stable light threshold value.

3-9-4. Service Data

Index	Sub-Index	Name	R/W	Length	Setting contents
16	0	Vendor Name	R	64 bytes	"OMRON Corporation" (17bytes)
17	0	Vendor Text	R	64 bytes	"OMRON Corporation" (17bytes)
18	0	Product Name	R	64 bytes	"F39-SGIT-IL3 " (30bytes)
20	0	Product text	R	64 bytes	"Intelligent Tap" (15bytes)
21	0	Serial Number	R	10 bytes	Intelligent Tap's Serial Number(8 characters and 2 spaces)
22	0	Hardware Version	R	5 bytes	Intelligent Tap's Hardware Version XX.XX (5characters)
23	0	Firmware Version	R	5 bytes	Intelligent Tap's Firmware Version XX.XX (5characters)
24	0	Application Specific Tag	R/W	32 bytes	initial value: ************************************
40	0	Process- DataInput	R	4 bytes	16-31bit: Power supply
					15 bit: Reserved (0)
					14 bit: Instantaneous Block Detection Information (Channel 3)
					13 bit: Instantaneous Block Detection Information (Channel 2)
					12 bit: Instantaneous Block Detection Information (Channel 1)
					11 bit: Light level diagnosis information (Channel 3)
					10 bit: Light level diagnosis information (Channel 2)
					9 bit: Light level diagnosis information (Channel 1)
					8 bit: Sequence error information
					7 bit: Sensor or Intelligent Tap lockout information
					6 bit: Intelligent Tap Lockout Information
					5bit: Reserved (0)
					4 bit: Reset/EDM/Override input status
					3 bit: Mute B input status
					2 bit: Mute A input status
					1 bit: Auxiliary output status
					0 bit: Safety output status
64	1	Supplier	R	17 bytes	OMRON Corporation
(Primary sensor					0 if SLC is not connected
Receiver)	2	Product name	R	30 bytes	F3SG-XXXX
					0 if SLC is not connected
	3	Serial Number	R	10 bytes	Serial Number
					0 if SLC is not connected
	4	Hardware Version	R	5 bytes	Hardware Version XX.XX (5characters)
					0 if SLC is not connected
	5	Firmware Version	R	5 bytes	Firmware Version XX.XX (5characters)
					0 if SLC is not connected
65	1	Supplier	R	17 bytes	OMRON Corporation
(SLC's 2nd					0 if SLC is not connected
Receiver)	2	Product name	R	30 bytes	F3SG-XXXX
					0 if SLC is not connected
	3	Serial Number	R	10 bytes	Serial Number
					0 if SLC is not connected
	4	Product version	R	5 bytes	Hardware Version XX.XX (5characters)
		(Hardware)			0 if SLC is not connected
	5	Product version	R	5 bytes	Firmware Version XX.XX (5characters)
	1	(Firmware)	I	I	

Index	Sub-Index	Name	R/W	Length	Setting contents
66	1	Supplier	R	17 bytes	OMRON Corporation
(Secondary sensor 2					0 if SLC is not connected
Receiver)	2	Product name	R	30 bytes	F3SG-XXXX
,					0 if SLC is not connected
	3	Serial Number	R	10 bytes	Serial Number
					0 if SLC is not connected
	4	Hardware Version	R	5 bytes	Hardware Version XX.XX (5characters)
					0 if SLC is not connected
	5	Firmware Version	R	5 bytes	Firmware Version XX.XX (5characters)
					0 if SLC is not connected
67	1	Supplier	R	17 bytes	OMRON Corporation
(Primary sensor					0 if SLC is not connected
Emitter)	2	Product name	R	30 bytes	F3SG-XXXX
					0 if SLC is not connected
	3	Serial Number	R	10 bytes	Serial Number
					0 if SLC is not connected
	4	Hardware Version	R	5 bytes	Hardware Version XX.XX (5characters)
					0 if SLC is not connected
	5	Firmware Version	R	5 bytes	Firmware Version XX.XX (5characters)
					0 if SLC is not connected
68	1	Supplier	R	17 bytes	OMRON Corporation
(Secondary sensor 1					0 if SLC is not connected
Emitter)	2	Product name	R	30 bytes	F3SG-XXXX
					0 if SLC is not connected
	3	Serial Number	R	10 bytes	Serial Number
					0 if SLC is not connected
	4	Hardware Version	R	5 bytes	Hardware Version XX.XX (5characters)
					0 if SLC is not connected
	5	Firmware Version	R	5 bytes	Firmware Version XX.XX (5characters)
					0 if SLC is not connected
69	1	Supplier	R	17 bytes	OMRON Corporation
(Secondary sensor 2					0 if SLC is not connected
Emitter)	2	Product name	R	30 bytes	F3SG-XXXX
					0 if SLC is not connected
	3	Serial Number	R	10 bytes	Serial Number
					0 if SLC is not connected
	4	Hardware Version	R	5 bytes	Hardware Version XX.XX (5characters)
					0 if SLC is not connected
	5	Firmware Version	R	5 bytes	Firmware Version XX.XX (5characters)
					0 if SLC is not connected

Index	Sub-Index	Name	R/W	Length	Setting contents
70	1	Synchronization	R	1 byte	0: Optical sync. Scan code A
		method setting			1: Optical sync. Scan code B
					2: Wired sync.
					3: Reserved.
	2	External device monitor setting	R	1 byte	1: Enable , 0: Disable
	3	Interlock / Pre-	R	1 byte	0: Auto reset (both start and re-start interlock are disabled)
		Reset / PSDI setting			1: Start interlock is enabled.
		Jocumg			2: Re-start interlock is enabled.
					Manual reset (both start and re-start interlock are enabled)
					4: Pre-Reset is enabled.
					5: PSDI single break
					6: PSDI double break
					The others: Reserved.
	4	Blanking setting	R	1 byte	1: One of Fixed Blanking or Floating Blanking and Warning
					zone setting is enabled.
					Fixed Blanking, Floating Blanking and Warning zone setting are disabled.
	5	PNP / NPN setting	R	1 byte	1: PNP setting
					0: NPN setting
	6	Dip switch setting	R	1 byte	1: Enable
					0: Disable (setting is done by Tool)
	7	Muting status	R	1 byte	1: Under the MUTING state
					0: The other
	8	Override status	R	1 byte	1: Under the OVERRIDE state
					0: The other
	9	Muting sequence	R	1 byte	1: Muting setting is active and sequence error occurs.
		error status			2: The other
	10	Safety output status	R	1 byte	1: ON
					0: OFF
	11	Blanking bream unblocked	R	1 byte	When Fixed-Blanking or Floating Blanking beams are unblocked
		information			0: The other
	12	Push switch status	R	1 byte	1: ON
					0: OFF
71 (Primary sensor Receiver)	0	Receiving light level	R	232 bytes	1byte x 232 beams The incident light level data of each beam is output in 0 to 255 (8 bits) every beam (1 byte). 0 if SLC is not connected
72 (Secondary sensor 1 Receiver)	0	Receiving light level	R	232 bytes	1byte x 232 beams The incident light level data of each beam is output in 0 to 255 (8 bits) every beam (1 byte). 0 if SLC is not connected
73 (Secondary sensor 2 Receiver)	0	Receiving light level	R	232 bytes	1byte x 232 beams The incident light level data of each beam is output in 0 to 255 (8 bits) every beam (1 byte). 0 if SLC is not connected
80	0	Error code of Intelligent Tap	R	48 bytes (8 bytes x 6)	Error code data is output in 8 bytes. In order from upper to lower 1 byte: Error code 4 bytes: Power-ON Time (1 count every 15 minutes) 3 bytes: Data for inquiry* Latest 6 records can be got. * Please use the data for your inquiry.

Index	Sub-Index	Name	R/W	Length	Setting contents
81 (Primary sensor Receiver)	0	Error code	R	32 bytes (8 bytes x 4)	Error code data is output in 8 bytes. In order from upper to lower 1 byte: Error code 4 bytes: Power-ON Time (1 count every 15 minutes) 3 bytes: Data for inquiry* Latest 4 records can be got. * Please use the data for your inquiry. 0 if SLC is not connected
82 (Secondary sensor 1 Receiver)	0	Error code	R	32 bytes (8 bytes x 4)	Error code data is output in 8 bytes. In order from upper to lower 1 byte: Error code 4 bytes: Power-ON Time (1 count every 15 minutes) 3 bytes: Data for inquiry* Latest 4 records can be got. * Please use the data for your inquiry. 0 if SLC is not connected
83 (Secondary sensor 2 Receiver)	0	Error code	R	32 bytes (8 bytes x 4)	Error code data is output in 8 bytes. In order from upper to lower 1 byte: Error code 4 bytes: Power-ON Time (1 count every 15 minutes) 3 bytes: Data for inquiry* Latest 4 records can be got. * Please use the data for your inquiry. 0 if SLC is not connected
84 (Primary sensor Emitter)	0	Error code	R	32 bytes (8 bytes x 4)	Error code data is output in 8 bytes. In order from upper to lower 1 byte: Error code 4 bytes: Power-ON Time (1 count every 15 minutes) 3 bytes: Data for inquiry* Latest 4 records can be got. * Please use the data for your inquiry. 0 if SLC is not connected
85 (Secondary sensor 1 Emitter)	0	Error code	R	32 bytes (8 bytes x 4)	Error code data is output in 8 bytes. In order from upper to lower 1 byte: Error code 4 bytes: Power-ON Time (1 count every 15 minutes) 3 bytes: Data for inquiry* Latest 4 records can be got. * Please use the data for your inquiry. 0 if SLC is not connected
86 (Secondary sensor 2 Emitter)	0	Error code	R	32 bytes (8 bytes x 4)	Error code data is output in 8 bytes. In order from upper to lower 1 byte: Error code 4 bytes: Power-ON Time (1 count every 15 minutes) 3 bytes: Data for inquiry* Latest 4 records can be got. * Please use the data for your inquiry. 0 if SLC is not connected
160	0	Operation Time Operation time period	R	4 bytes	The Power-ON Time of Intelligent Tap (1 count every 1 hours)

Refer to 8-1-2-2. Troubleshooting for more information on error codes and error descriptions.

Chapter 4 Setting with SD Manager 3

4-1	. Overview and Specifications	160
	4-1-1. Overview of Configuration Tool	160
	4-1-2. System Environment	161
	4-1-2-1. PC Environment	161
	4-1-2-2. Smartphone/Tablet Environment	161
	4-1-3. Connection Method to Use Configuration Tools	162
	4-1-3-1. Connection Patterns of F3SG-SR, Intelligent Tap, Each Device	and 162
	4-1-3-2. Connection Procedure When Using USB Connector	164
	4-1-3-3. Connection Procedure When Using Bluetooth® Communication Unit (F39-SGBT)	165
	4-1-4. SETTING State of F3SG-SR with SD Manager 3 Connected	169
4-2	. Basic Operation of SD Manager 3	170
	4-2-1. How to Install/Uninstall SD Manager 3	170
	4-2-1-1. Downloading SD Manager 3	170
	4-2-1-2. Installing SD Manager 3	170
	4-2-1-3. How to Uninstall SD Manager 3	172
	4-2-1-4. Installing Driver of Intelligent Tap	173
	4-2-2. How to Update SD Manager 3	173
	4-2-3. Getting Started, Description on Top Page and Each Buand Shutting Down	utton, 174
	4-2-3-1. Getting Started	174
	4-2-3-2. Description on Top Page and Each Button	175
	4-2-3-3. Displaying/Hiding Docked Windows	177
	4-2-3-4. Shutting Down	177
	4-2-4. Starting SD Manager 3 Offline	178
	4-2-4-1. Creating New Configuration File	178
	4-2-4-2. Reading Configuration from PC	179
	4-2-4-3. Saving New Configuration File to PC	179
	4-2-4-4. Switching Offline to Online	179
	4-2-5. Logging In/Logging Out	180
	4-2-5-1. Logging In	180

4-2-5-2. Logging Out	182
4-2-6. Password Protection	183
4-2-6-1. Access Restriction	183
4-2-6-2. Changing Password	183
4-2-6-3. Forgot the Password?	183
4-2-6-4. Confirming Lot No. of Intelligent Tap	183
4-2-6-5. Resetting the Initial Password to "0000"	184
4-2-7. Reading/Saving/Writing Configuration of Intelligent Tap	185
4-2-7-1. Reading Configuration from Intelligent Tap	185
4-2-7-2. Saving Configuration of Intelligent Tap in PC	185
4-2-7-3. Writing Configuration into Intelligent Tap	186
4-2-8. Viewing Current Configuration	188
4-2-9. Safety Distance Calculation	189
4-3. Changing Settings with SD Manager 3	190
4-3-1. Preparing to Change Settings	190
4-3-2. I/O Settings	191
4-3-2-1. Interlock/External Device Monitoring (EDM)/PSDI	191
4-3-2-2. Reset Input Time	192
4-3-2-3. Teach-in Input	193
4-3-2-4. External Test Input	194
4-3-3. Auxiliary Output/Lamp Setting	195
4-3-3-1. Auxiliary Output	195
4-3-3-2. Designated Beam Output	197
4-3-3-3. Area Beam Indicator (ABI)	200
4-3-4. Safety Function Setting	202
4-3-4-1. Fixed Blanking	202
4-3-4-2. Floating Blanking	205
4-3-4-3. Muting/Override	207
4-3-4-4. Pre-Reset	212
4-3-4-5. Reduced Resolution	213
4-3-4-6. Warning Zone	214
4-3-4-7. PSDI	216
4-3-5. Operating State Setting	217
4-3-5-1. Response Time Change	217
4-3-5-2. Stable Light Threshold Adjustment	218
4-3-5-3. Operating Range Selection	219
4-3-6. Setting Initialization	220
4-4. Monitoring with SD Manager 3	221
4-4-1. Monitoring	221
4-4-1-1. Incident Light/Ambient Light	221
4-4-1-2. Operating Status Monitoring	222
4-4-2. Muting Statistics Information	224
4-4-3. Maintenance Information	228

	4-4-3-1. Error Log Information	228
	4-4-3-2. Warning Log	230
	4-4-3-3. Intelligent Tap Log	231
	4-4-3-4. Power-On Time/Load Switching Frequency	232
	4-4-3-5. Instantaneous Block Detection Information	234
4-	5. Basic Operation of SD Manager 3 Mobile APP	235
	4-5-1. How to Install/Uninstall SD Manager 3 Mobile APP	235
	4-5-1-1. Installing SD Manager 3 Mobile APP	235
	4-5-1-2. Uninstalling SD Manager 3 Mobile APP	235
	4-5-2. How to Update SD Manager 3 Mobile APP	235
	4-5-3. Pairing (Connection Verification)	235
	4-5-4. Getting Started, Main Screen, Version Confirmation Shutting Down	, and 237
	4-5-4-1. Getting Started	237
	4-5-4-2. Main Screen	239
	4-5-4-3. Version Information	240
	4-5-4-4. Shutting Down	241
	4-5-5. Monitoring with SD Manager 3	242
	4-5-5-1. Incident/Ambient Light Level Monitoring	242
	4-5-5-2. Status Monitoring Information	243
	4-5-5-3. Maintenance Information	245

⚠ WARNING

Make sure the Responsible Person test the operation of the F3SG-SR after setting with the SD Manager 3 to verify that the F3SG-SR operates as intended. Make sure to stop the machine until the test is complete. Unintended settings may cause a person to go undetected, resulting in serious injury.



4-1. Overview and Specifications

4-1-1. Overview of Configuration Tool

The user can configure various functions and view operating states of the F3SG-SR Safety Light Curtain, using the following accessories and tools.

- Intelligent Tap (F39-SGIT-IL3)
- Bluetooth® Communication Unit (F39-SGBT)
- Configuration Tools (SD Manager 3 / SD Manager 3 Mobile APP)

4-1-2. System Environment

4-1-2-1. PC Environment

To use SD Manager 3, the following PC environment is necessary.

Operating system (OS)	Windows 7 32-bit or 64-bit edition Windows 8 32-bit or 64-bit edition Windows 10 32-bit or 64-bit edition Language: Japanese, English
CPU	1 GHz or higher
Memory capacity	1 GB or higher for 32-bit OS edition 2 GB or higher for 64-bit OS edition
Operating condition	.NET Framework 3.5 must be installed and activated (Windows 10 requires an activation process.) .NET Framework 4.5.2 or higher is installed. Bluetooth® wireless technology is incorporated (to use Bluetooth® Communication Unit).

4-1-2-2. Smartphone/Tablet Environment

To use SD Manager 3, the following PC environment is necessary.

Operating system (OS)	Android 7.0 (Nougat) Windows 10 Pro
Operating condition	The computer must be equipped with the Bluetooth® wireless technology.

4-1-3. Connection Method to Use Configuration Tools

The compatible communication tools are different among the PC, smartphone, and tablet.

For the respective compatible communication tools, refer to the table below.

The Bluetooth® communication unit (F39-SGBT) is usable for all devices of PC, smartphone, and tablet.

Compatible communication tools for PC, smartphone, and tablet

Communication tool	Windows PC	Android smartphone	Windows tablet
USB cable	Yes	No	No
Bluetooth® communication unit		Yes	


Yes: Communication is usable No: Communication is not usable




When connecting with the configuration tools, do not execute connection using the USB connector and connection by the Bluetooth® communication unit simultaneously. Otherwise, the system might not operate correctly.

4-1-3-1. Connection Patterns of F3SG-SR, Intelligent Tap, and Each Device

The connection patterns of F3SG-SR, Intelligent Tap, and each device are as follows.

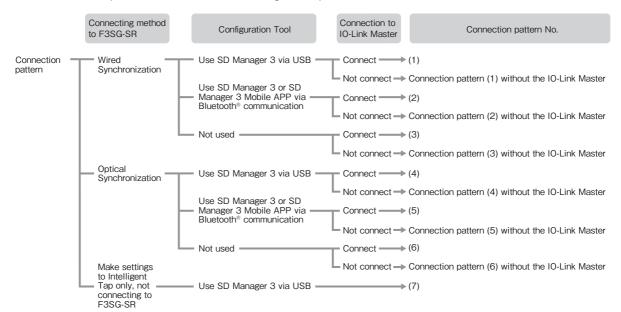

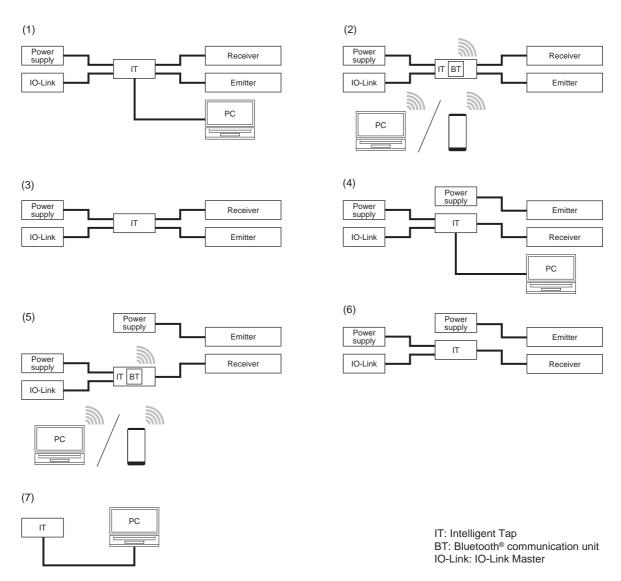

For the patterns (1) and (4), turn the power on and start the SD Manager 3 on the PC. For the pattern (7), the power is supplied from the PC to the Intelligent Tap.

When connecting the emitter and receiver with the Intelligent Tap as shown in the above patterns (2) to (4), it is possible to make settings to the emitter and receiver and perform IO-Link communication, Backup and Restoration.

If the emitter is not connected with the Intelligent Tap like patterns (5) to (7) above, there are the following restrictions.

- As synchronization method, only the optical synchronization is usable.
- It is unable to configure the following function using the DIP Switch on the Intelligent Tap.


Operating range selection

- It is unable to configure the following functions using SD Manager 3. External test, operating range selection, lamp, area beam indicator (ABI), and vibration detection
- It is unable to monitor the emitter using the configuration tools.
- The backup and restoration functions of the emitter are not usable.
- The information of the emitter cannot be obtained via IO-Link.


Before connecting with each device, confirm that the power of the F3SG-SR and Intelligent Tap is OFF. After connection is completed, turn ON the power and start up the F3SG-SR and Intelligent Tap.

4-1-3-2. Connection Procedure When Using USB Connector

1. Connect the USB connector with the Intelligent Tap as follows.

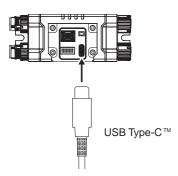


2. When you change the settings by using SD Manager 3, turn Positions 1 and 2 as shown below.

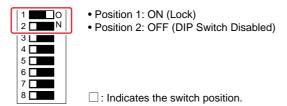

3. Connect the USB connector with the PC's USB terminal.


When the Intelligent Tap is powered up, the OUT indicator of the Intelligent Tap is illuminated in red or green.

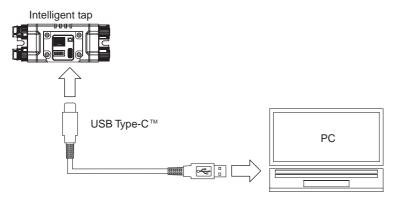

4. To restart the Intelligent Tap, unplug the USB connector from the Intelligent Tap and plug it again.

If the Intelligent Tap is connected with F3SG-SR, turn ON the external power supply connected with the Intelligent Tap again.

After the Intelligent Tap restarts and the power is turned ON, the OUT indicator of the Intelligent Tap is illuminated in red or green.

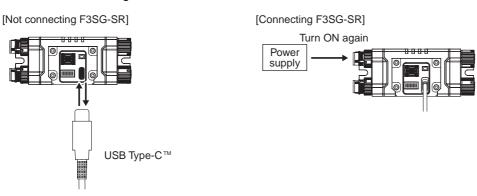

4-1-3-3. Connection Procedure When Using Bluetooth® Communication Unit (F39-SGBT)

∕ WARNING


When pairing your device with the F39-SGBT Bluetooth® Communication Unit, make sure that the model name and serial number of the sensor to be configured match the information on your device.




Do not use the F39-SGBT Bluetooth® Communication Unit in close proximity to medical equipment such as a pacemaker. Radio wave may affect the operation of such equipment.



1. When you change the settings by using SD Manager 3, turn Positions 1 and 2 as shown below.

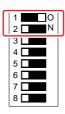

- Position 1: ON (Lock)
- Position 2: OFF (DIP Switch Disabled)
- \square : Indicates the switch position.
- 2. Connect the Bluetooth® communication unit with the Intelligent Tap as follows.

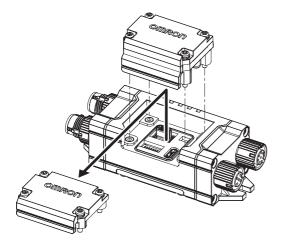

For the details of the Bluetooth® communication unit, refer to "F3SG-SR Series Supported Bluetooth® Communication Unit F39-SGBT Manual."



The configuration changed by SD Manager 3 is saved in the internal memories of the Intelligent Tap and F3SG-SR.



If the Position 2 of the DIP Switch on the Intelligent Tap is turned ON (DIP Switch Enabled) after configuration is changed, the tap operates based on the setting of the DIP Switch. If the Position 2 of the DIP Switch is turned OFF (DIP Switch Disabled) again, the tap operates based on the configuration memorized in its internal memory.



The configuration data of the Intelligent Tap can be read out even if Position 2 of the DIP Switch is ON (DIP Switch Enabled).

■ Pairing (Connection Verification)

Paring is the process required for the Bluetooth® Communication Unit and a device with Bluetooth® wiring technology to recognize and connect with each other.

Indications and operations of the pairing process are different depending on a Bluetooth® device used. Always refer to instruction manuals of such a device when pairing the devices.



When the Bluetooth® Communication Unit and a Bluetooth® device are not paired, it is not possible to connect to the Bluetooth® Communication Unit. These must be paired in advance.




Once the Bluetooth® Communication Unit and a Bluetooth® device are paired, it is not necessary to pair them again.

The following is an example of the pairing process using a Windows-10-based PC.


This example assumes that a Bluetooth® adapter is incorporated or installed in the PC.

[Example]

- **1.** Confirm that the Bluetooth® communication unit is connected with the Intelligent Tap correctly, and turn ON the power to start up the F3SG-SR and Intelligent Tap.
- 2. Right-click the [Start] button of Windows, and click [Devices] on the [Settings] menu.

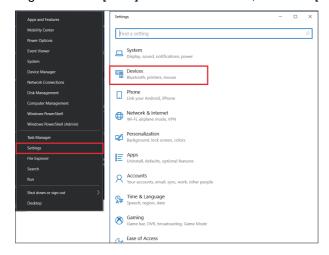

3. Click [Bluetooth & other devices] and click [Add Bluetooth or other device].

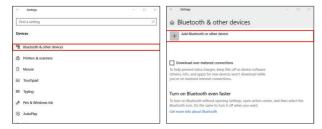


4. On the screen to select the type of the device added, click [Bluetooth].


5. The searched devices are displayed like the screen below, so click the device connected. For the device names of the Intelligent Tap connected with the Bluetooth® communication unit and F3SG-SR, the serial number and model name of the F3SG-SR are displayed. For the F3SG-SR in cascade connection, the serial number and model name of the primary sensor are displayed.




When pairing with more than one device, adding a device must be carried out one by one.

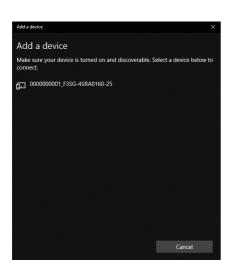

6. The screen below is displayed and a necessary device driver is installed.

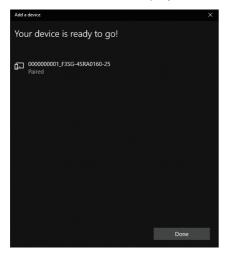


7. Confirm that the installation of the device driver is fully completed. When the installation is complete, the message shown below is displayed.

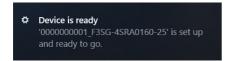

Now the pairing is complete.


- How to check a COM port when connected to a Bluetooth® Communication Unit
- 1 Right-click the Windows [Start] button and click [Devices] on the [Settings] menu.
- 2. Click [Bluetooth and other devices] and click [Devices and Printers] below [Related Settings].

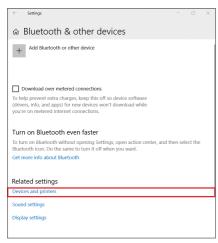

3. When the screen below is displayed, right click the icon of a target device to check a COM port number, and then click [Properties]. If there are more than one connectable Bluetooth® Communication Unit, select a serial number and model name of a target device.



4. When selecting the [Hardware] tab, the screen below is displayed that indicates a COM port. In this example, the device "0000000001 F3SG-4SRA0160-25" is set to COM7.

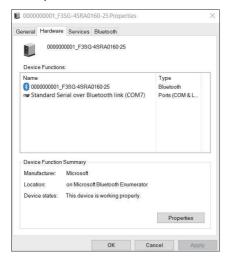

4-1-4. SETTING State of F3SG-SR with SD Manager 3 Connected

The F3SG-SR connected with the Intelligent Tap can be transitioned to the SETTING state by the SD Manager 3. In the SETTING state, two types of access levels called operator level and administrator level can be selected. \nearrow For operator and administrator levels, refer to 4-2-5-1. Logging In

In the SETTING state, the F3SG-SR operates as follows.

- The safety outputs are in the OFF state.
- The LED indicator blinks in a cycle corresponding to the access level.

[Operation of LED indicator]

Consor	Indicator		Access Level	
Sensor	indicator		Operator Level	Administrator Level
	C or CODE	Code A	Blinking once *	Blinking twice *
	C or CODE	Code B	Off	Off
-	E or ERR		Off	Off
Emitter	L or LONG		Blinking once	Blinking twice
	T or TEST		Blinking once	Blinking twice
	TOP		Off	Off
	BTM		Off	Off
		Code A	Blinking once *	Blinking twice *
	C or CODE	Code B	Off	Off
	E or ERR		Off	Off
	O or OSSD]	Off	Off
Receiver	M or MAIN	f]	Off	Off
	P or PNP		Blinking once *	Blinking twice *
	F or CFG		Blinking once *	Blinking twice *
	S or SEQ		Off	Off
	TOP		Off	Off
	BTM		Off	Off


^{*} Refer to [LED indicator blinking patterns] below for more information on the blinking patterns.

The LED indicator of the emitter does not operate in the case the Optical Synchronization is enabled as the emitter is not connected to the Intelligent Tap.

CHECK!

[LED indicator blinking patterns]

CHECK!

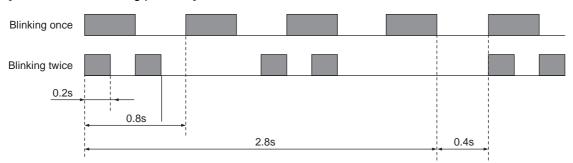

For the access levels, refer to 4-2-5-1. Logging In.

When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] button.

CHECK!

4-2. Basic Operation of SD Manager 3

4-2-1. How to Install/Uninstall SD Manager 3

The following is an example when using a PC that runs on Windows 10 Pro.


4-2-1-1. Downloading SD Manager 3

Download SDManager3_Setup.exe from the website and save it to a desired location on a PC.

For detail, refer to your local Omron website. (v)

4-2-1-2. Installing SD Manager 3


- $oldsymbol{1}$. Confirm that the PC is not connected with the Intelligent Tap using the USB connector or the Bluetooth® communication unit.
- **2.** Double-click on SDManager3_Setup.exe.
- **3.** Select a desired language and click [Next].

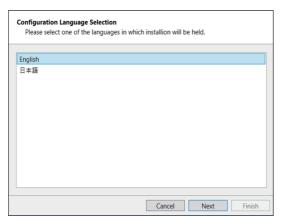

4. The Installation wizard is displayed. Click [Next].




5. Read the software license agreement. If accepting, select [I accept the terms of the license agreement] and click [Next].

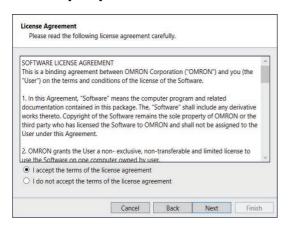


6. Click [Next].


When changing the location to install, click [Change] and select a desired location.

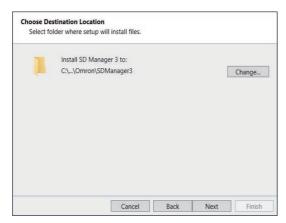

7. The prompt window shown below is displayed. Click [Install] to start the installation.

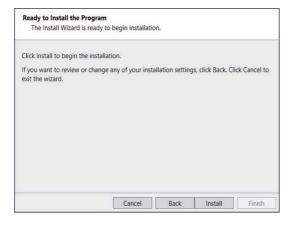


8. Click [Finish]. Now the installation is complete.

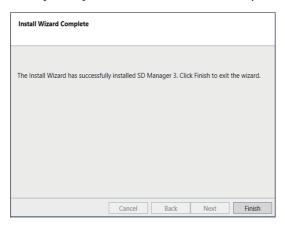

4-2-1-3. How to Uninstall SD Manager 3


You can uninstall SD Manager 3 using the SDManager3_Setup.exe file or Control Panel. The following is an example when using a PC that runs on Windows 10 Pro.

1. Double-click on SDManager3_Setup.exe. Confirm [Remove] is selected in the window shown below and click [Next].

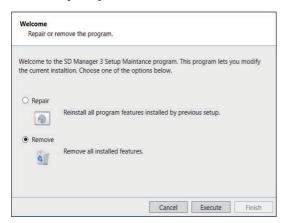

Or from the Start menu, select [Windows System], [Control Panel] and [Uninstall a program]. From the list shown, select [SD Manager 3] and click [Uninstall].

2. The window shown below is displayed when the uninstallation is complete. Click [Finish].

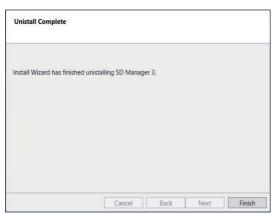

4-2-1-4. Installing Driver of Intelligent Tap

When the installation of SD Manager 3 is complete, the driver of the Intelligent Tap is also completed.

4-2-2. How to Update SD Manager 3

To update an SD Manager 3 installed in a PC to a new version, follow the steps below.


- 1. Uninstall SD Manager 3 according to the procedure of 4-2-1-3. How to Uninstall SD Manager 3.
- **2.** Install a new version of SD Manager 3 according to the procedure of 4-2-1-2. Installing SD Manager 3.

4-2-3. Getting Started, Description on Top Page and Each Button, and Shutting Down

4-2-3-1. Getting Started

To get started, select [OMRON] and [SD Manager 3] from the Start menu.

SD Manager 3 starts up, and the following dialog is displayed.

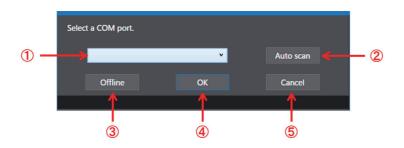

No.	Function	Description
1	Select COM port	Select the COM port with which the USB connector or Bluetooth® Communication Unit is connected.
2	Auto scan	Obtains an available COM port.
3	Offline	Starts the SD Manager 3 in the offline mode.
4	ОК	Starts the combination of the SD Manager 3 and Intelligent Tap, or the combination of the SD Manager 3, Intelligent Tap and the F3SG-SR in the online mode.
5	Cancel	Cancels the start of SD Manager 3.



The COM port with which the Intelligent Tap (F39-SGIT-IL3) is connected can be confirmed by Device Manager. To start Device Manager, right-click the Windows [Start] button and click [Device Manager]. In the [Port (COM & LPT)] category of Device Manager, confirm the COM port assigned to F39-SGIT-IL3.

In the example below, it is confirmed that the COM port connected with interface unit F39-SGIT-IL3 is COM7.





If there are more than one connectable Bluetooth® Communication Unit, perform the [2: Auto scan] step first, select a COM port of a target device in the [1: Select COM port] step, and then press the [4: OK] button.


Refer to ■ How to check a COM port when connected to a Bluetooth® Communication Unit under 4-1-3-3. Connection Procedure When Using Bluetooth® Communication Unit (F39-SGBT) for more information on how to check the COM port of the F3SG-SR connected.



In the offline mode, the configuration file can be edited without connecting with the Intelligent Tap.

4-2-3-2. Description on Top Page and Each Button

This section hereafter describes each function taking the top page displayed when F3SG-SR is connected as an example.

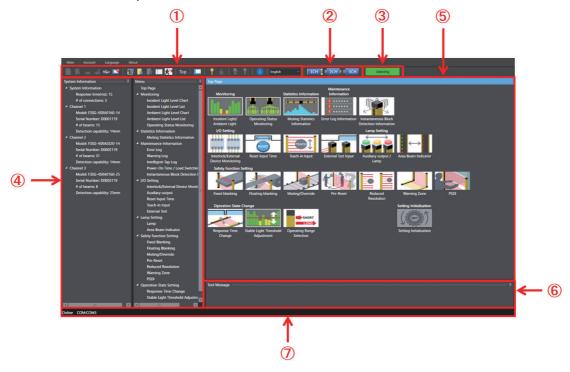

No.	Function	Description
1	Tool Menu	The menu can be selected using the buttons.
2	Target sensor	Select a target sensor segment to write information to or read information from. The view changes according to actual cascade connection of the F3SG-SR. The example above shows the F3SG-SR system with three sensor segments in cascade connection is connected to the PC.
3	Operating state	Shows the operating state of the F3SG-SR or the connecting state of the Intelligent Tap.
		■F3SG-SR operating states
		Detecting Operating: The F3SG-SR keeps normal operation.
		Setting state: It is possible to read configuration from the F3SG-SR. The safety outputs of the F3SG-SR are in the OFF state.
		Lockout state: The F3SG-SR is in the LOCKOUT State.
		No connection: The SD Manager 3 is running offline or disconnected from or not properly connected to the F3SG-SR.
		■Intelligent Tap connecting state
		Only Intelligent Tap connected: Only the Intelligent Tap is connected with SD Manager 3. You can check or change the configuration data in the Intelligent Tap in this state.
4	System Information	Shows information on the F3SG-SR connected.
5	Settings	Configurable or other functions are displayed.
6	View message	Shows messages according to operations and settings of SD Manager 3.
7	Communication setting indicator	The communication setting of the connected F3SG-SR is displayed.

[Descriptions of buttons]

Button	Function	Description
	New	Creates a new configuration file. This is available only when running offline.
	Open	Opens a configuration file.
*	Save	Saves or overrites configuration file.
ૐ	Save As	Saves configuration file as another file name.
6	Print muting configuration	Prints muting settings.
*	Exit	Exits SD Manager 3.
	Monitor	Switches the operating state from [Setting state] to [Operating].
	Read configuration	Reads the configuration data of the Intelligent Tap. Pressing this button switches the safety outputs to the OFF state and the operating state to [Setting state].
	Write configuration	Writes the configuration data into the Intelligent Tap.
*	Configuration List	Shows a list of parameters.
<u>الْمُ</u>	Safety distance calculation	Starts the safety distance calculation screen.
Тор	Top Page	Returns to the top page from each screen.
	Load Default Layout	Brings the changed layout back to the initial state.
•	Login	Starts the login screen.
	Logout	Logs out. Changes the access level from administrator to operator
%	Change Password	Starts the change password screen.
-	Clear Password	Starts the clear password screen.
()	About	Starts the version information confirmation screen of SD Manager 3.
English +	Select Language	The operator selects a language. Select a language used from the dropdown list.

4-2-3-3. Displaying/Hiding Docked Windows

You can hide and display the [System Information], [Menu] and [Tool Message] windows. Click the Pin button on the [System Information], [Menu] or [Tool Message] window.

The window is hidden a Show/Hide Tab is displayed on the left side of the screen.

To display the window again, click the Show/Hide Tab and then click the horizontal Pin button.

4-2-3-4. Shutting Down

To shut down SD Manager 3, click the x mark in the top right corner of the top page or click the [Exit] witton of the tool menu.




4-2-4. Starting SD Manager 3 Offline

4-2-4-1. Creating New Configuration File

You can create a configuration file when the F3SG-SR is not connected to the PC (or offline). Start SD Manager 3 offline and click the [New] button on the tool menu.



The following dialog is displayed.

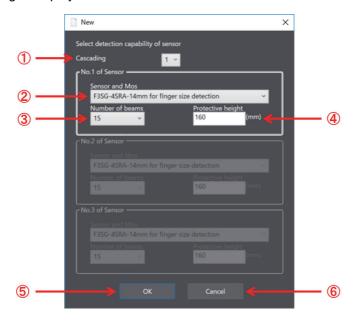

No.	Function	Description
1	Cascading	Select the number of cascaded sensors.
2	Sensor and Mos	For F3SG-SR, select the sensor model and detection capability.
3	Number of beams	Select the desired number of beams from the drop-down list. The protective height is changed automatically according to the number of beams selected.
4	Protective height	Displays the protective height of the sensor.
5	ОК	Enables SD Manager 3 to create a configuration file according to the settings made.
6	Cancel	Cancels the creation of a new file.

4-2-4-2. Reading Configuration from PC

You can read a configuration file saved on a PC into SD Manager 3.

Start SD Manager 3 offline and click the [Open] button from the tool menu.

Select a desired configuration file (with extension .sdm3) saved on your PC.

4-2-4-3. Saving New Configuration File to PC

On the tool menu, click the [Save] button or the [Save As] button to save the file in an arbitrary location on the PC.



4-2-4-4. Switching Offline to Online

When you want to switch the offline state to the state where the F3SG-SR is connected to the PC (or online state), shut down the SD Manager 3 and start it again. Select a COM port and click the [OK] button in the startup dialog window.

4-2-3-1. Getting Started

4-2-5. Logging In/Logging Out

4-2-5-1. Logging In

When reading or changing the configuration of the Intelligent Tap or F3SG-SR using SD Manager 3, one of the following two access levels can be selected. Select the access level at which SD Manager 3 is used when logging in.

- Operator level: Only reading configuration information is available. (Only changing a power-on time and load switching frequency thresholds is available.)
- Administrator level: Reading and changing configuration information is available.

When an Intelligent Tap is connected with F3SG-SR, if logging in, the F3SG-SR shifts to the setting state and the safety output enters the OFF state.




The login operation can be executed even if position 2 of the DIP Switch on the Intelligent Tap is ON (DIP Switch Enabled).



Select the [Login] button promption from the [Account] menu on the tool bar.

Or, click the [Login] button directly from the tool menu.

The following dialog is displayed.

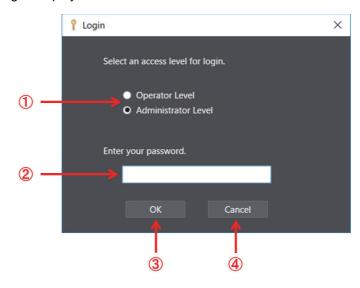


N	١٥.	Function	Description
	1	Access level	Select either operator level or administrator level.
	2	Enter your password	Enter a password if you want to log in with the administrator level.
	3	ОК	Enables the login at the selected level.
	4	Cancel	Cancels the login.

- When logging in at the administrator level Select the administrator level, enter the password, and click [OK].
 - The initial password is "0000".
- When logging in at the operator level

Select the operator level, and click [OK].

When connecting the Intelligent Tap to F3SG-SR, and when login succeeds, the [Operating state] indication in the top right corner of the Top page is changed from [Detecting] to [Setting state].

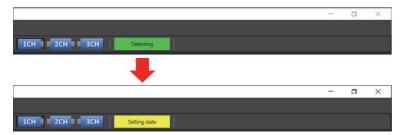



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] button.

4-2-5-2. Logging Out

In the login state at the administrator level, select the [Logout] button [4] from the [Account] menu on the tool bar or click



Access level is changed from the administrator level to the operator level.



It is not possible to log out using the operator level.



To bring F3SG-SR back to the [Detecting] state, restart the F3SG-SR and Intelligent Tap according to procedure 4 of 4-1-3-2. Connection Procedure When Using USB Connector or press the [Monitor] button $\[\]$.

4-2-6. Password Protection

4-2-6-1. Access Restriction

The administrator level requires a password to log in. The initial password for administrator login is "0000".


4-2-6-2. Changing Password

To prevent unintended configurations by an unauthorized user, the administrator must change the password. The password must contain no more than 6 alphanumeric characters. The password is case-sensitive.

To switch the password, restating the Intelligent Tap is necessary. Restart the Intelligent Tap according to procedure 4 of 4-1-3-2. Connection Procedure When Using USB Connector. The new password is enabled after the Intelligent Tap is restarted.

4-2-6-3. Forgot the Password?

If you forget the new password, let the Omron sales representative know the lot number printed on the Intelligent Tap. A clearing password to set the initial password "0000" again is issued.

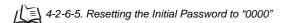


4-2-6-4. Confirming Lot No. of Intelligent Tap

■ Confirming with SD Manager 3

With the Intelligent Tap connected with the PC, start SD Manager 3.


You can check the lot number of the intelligent Tap on the [System Information] list on the left side of the top page.

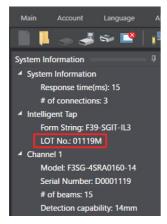

You can also check the lot number from the [Clear Password] window described in Step 3 below.

■ Confirming with Intelligent Tap

You can check the lot number of the Intelligent Tap from the marking on the Intelligent Tap body. See the figure below for the location of the marking.

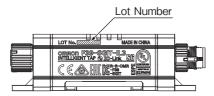

4-2-6-5. Resetting the Initial Password to "0000"

- 1 Log in at the operator level. (No password is needed to log in at the operator level.)
 - For login at the operator level, refer to 4-2-5-1. Logging In.
- 2. Select the [Clear Password] button from the [Account] menu at the screen top of SD Manager 3. Or, click the [Clear Password] button \P directly from the tool menu.
- 3. Fill in the clear password window with the clearing password provided by Omron and press OK. (A message saying that password initialization has succeeded is displayed on the [Tool Message] field at the screen bottom of SD Manager 3.)
- 4. It is necessary to restart the Intelligent Tap to switch the password. Restart the Intelligent Tap according to procedure 4 of 4-1-3-2. Connection Procedure When Using USB Connector. After the Intelligent Tap is restarted, the administrator password is brought back to "0000."

4-2-7. Reading/Saving/Writing Configuration of Intelligent Tap

4-2-7-1. Reading Configuration from Intelligent Tap

Check that the Intelligent Tap is correctly connected and click the [Read configuration] button





The configuration data are read by clicking this button. The read data can be confirmed on the setting screen of each function or using the [Configuration List] button

It is able to move to a setting screen by clicking an icon of a function on the Top page.



For the display of each setting screen, refer to 4-3. Changing Settings with SD Manager 3.



When the F3SG-SR is in the [Detecting] state, a dialog to confirm if it is OK to change mode is displayed. When OK is selected, the F3SG-SR enters the Setting state (at the operator level). The safety outputs of the F3SG-SR are turned to the OFF state.

4-2-7-2. Saving Configuration of Intelligent Tap in PC

Confirm that the Intelligent Tap is connected correctly.

Read the configuration saved in the Intelligent Tap according to the procedure of 4-2-7-1. Reading Configuration from Intelligent Tap.

Select the [Save] button or the [Save As] button from the [Main] menu on the tool bar to save the configuration in an arbitrary location on the PC.

Or, click the [Save] button or the [Save As] button directly from the tool menu to save the configuration in an arbitrary location on the PC.

4-2-7-3. Writing Configuration into Intelligent Tap

■ Writing Data Edited by SD Manager 3 into Intelligent Tap

Check that the Intelligent Tap is correctly connected and log in with the administrator level. Change the configuration of each function and click the [Write] button .



A Configuration List is displayed. The user can confirm the configuration information to be written to the F3SG-SR.

When clicking the [Write] button son the configuration list window:


F3SG-SR Not Connected:

Configuration data can be written to the Intelligent Tap.

To write the configuration data written to the Intelligent Tap to the F3SG-SR, refer to 3-6-3. *Performing Restoration* to perform restoration.

F3SG-SR Connected:

Configuration data can be written to the Intelligent Tap and F3SG-SR.

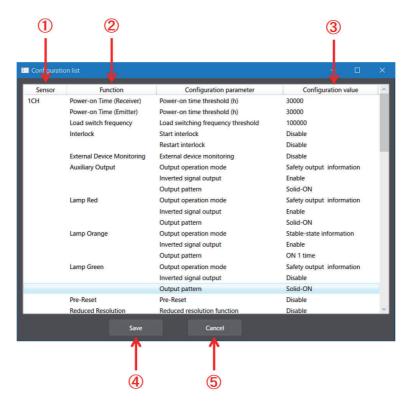

No.	Function	Description
1	Light Curtain	The target sensor segment to write the settings to is displayed.
2	Function	The function name is displayed.
3	Parameter	The parameters to be to be written to in the F3SG-SR are displayed.
4	Save	Saves the parameters as a .csv file.
5	Cancel	Cancels the writing.



For operator and administrator levels, refer to 4-2-5. Logging In/Logging Out.



For reading of the configuration data saved in the Intelligent Tap, refer to 4-2-7-1. Reading Configuration from Intelligent



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the CHECK! [Monitor] button.

■ Writing Configuration File Saved in PC into Intelligent Tap

Check that the Intelligent Tap is correctly connected and log in with the administrator level.

By selecting the [Open] button from the [Main] menu on the tool bar or clicking the [Open] directly from the tool menu, and select the configuration file (with extension sdm3) saved in an arbitrary location.

Click the [Write] button to write the configuration.

F3SG-SR Not Connected:

Configuration data can be written to the Intelligent Tap.

To write the configuration data written to the Intelligent Tap to the F3SG-SR, refer to 3-6-3. Performing Restoration to perform restoration.

F3SG-SR Connected:

Configuration data can be written to the Intelligent Tap and F3SG-SR.



For operator and administrator levels, refer to 4-2-5-1. Logging In.



For the target sensor in the cascaded configuration, refer to 4-2-3-2. Description on Top Page and Each Button.



/[] For reading of the configuration file saved in the PC, refer to 4-2-4-2. Reading Configuration from PC.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] **putton**.

4-2-8. Viewing Current Configuration

The current configuration list can be confirmed by clicking the [Configuration List] button






The configuration list can be confirmed even if position 2 of the DIP Switch on the Intelligent Tap is ON (DIP Switch

4-2-9. Safety Distance Calculation

Click the [Safety Distance Calculation] button from the [Main] menu on the tool bar or directly from the tool menu.

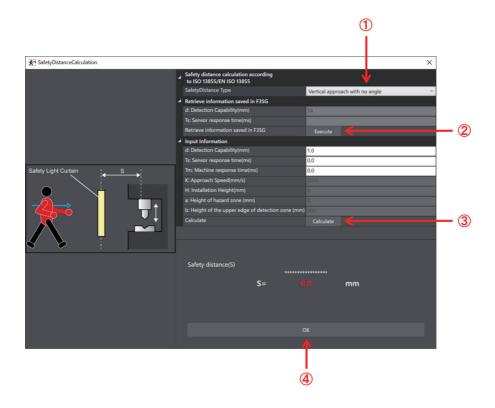

No.	Function	Description			
1	Types of safety distance	Select a type of safety distance to be calculated.			
2	Retrieve information from sensor	Update the data in [Input Information] to reflect the information in [Retrieve information stored in sensor].			
3	Calculate	Calculates safety distance according to the specified condition.			
4	ОК	Closes the [Safety Distance Calculation] window.			



For safety distance, refer to 5-1-2. Safety Distance. The calculation is based on values entered in the screen.




 $To \ calculate \ on \ the \ actually \ connected \ F3SG-SR, \ execute \ [Retrieve \ information \ saved \ in \ F3SG] \ to \ update \ the \ numerical$ values.

4-3. Changing Settings with SD Manager 3

4-3-1. Preparing to Change Settings

To change settings, log in SD Manager 3 with the administrator level.

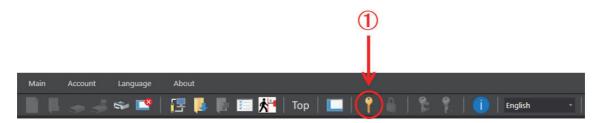

Select a target sensor segment to be configured.



No.	Function	Description	
1	Login	Shows the login screen.	
2	Target sensor	Select a sensor to be configured. The selected target sensor is displayed in yellow.	



For operator and administrator levels, refer to 4-2-5-1. Logging In.



For reading of configuration, refer to 4-2-7-1. Reading Configuration from Intelligent Tap.



To reflect each function setting described later to the Intelligent Tap, refer to 4-2-7-3. Writing Configuration into Intelligent




When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the

4-3-2. I/O Settings


4-3-2-1. Interlock/External Device Monitoring (EDM)/PSDI

First, carry out 4-3-1. Preparing to Change Settings.

Next, click the icon below on the Top page.

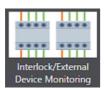


The setting screen below is displayed.

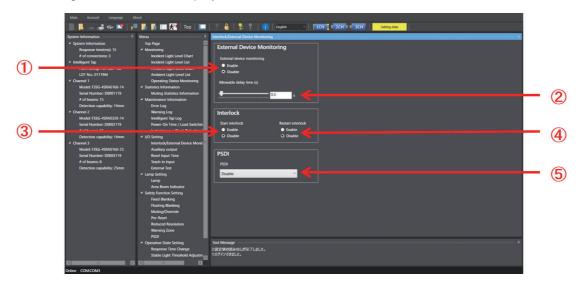

			Initial	value	Configurable value or
No.	Function name	Description	Muting enabled *	Muting disabled *	numerical range
1	External device monitoring	Select Enable or Disable for the External Device Monitoring function.	Disable	Disable	Enable/Disable
2	Allowable delay time	Select desired delay time for the External Device Monitoring function.	0.3 s	0.3 s	0.1 to 4 s (in 0.1 s increments)
3	Start interlock	Select Enable or Disable for the Start Interlock function.	Disable	Disable	Enable/Disable
4	Restart interlock	Select Enable or Disable for the Restart Interlock function.	Disable	Disable	Enable/Disable
5	PSDI	Select Enable or Disable for PSDI function.	Disable	Disable	Disable/Single break /Double break

^{*} For this function, setting parameters are kept individually in each case that the muting function is set enabled or disabled. When changing of the muting state from enabled to disabled or vice versa, confirm the setting of this function again.

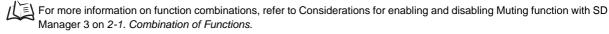

• For more information on external relay monitoring, refer to 2-11. External Device Monitoring (EDM). • For more information on start interlock and restart interlock, refer to to 2-8. Interlock.



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.




When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] when the state of the


4-3-2-2. Reset Input Time

First, carry out 4-3-1. Preparing to Change Settings.

Next, on the Top page, click the icon below.

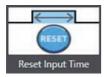

The setting screen below is displayed.

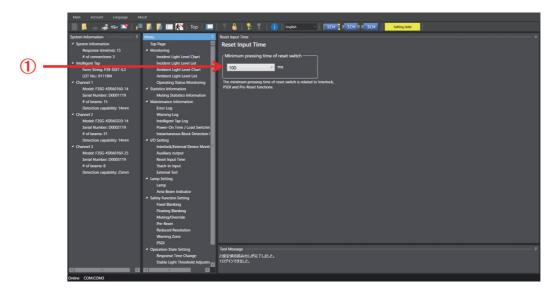

No.	Function name	Description	Initial value	Configurable value or numerical range
1	Minimum pressing time of reset switch	When using the manual reset function, set the minimum pressing time of reset switch. When using the pre-reset function, set the minimum pressing time of the reset switch and pre-reset switch. The same value is set on the pressing time of the reset switch and pre-reset switch. When using the PSDI function, set the minimum pressing time of the reset switch.	100 ms	100 to 500 ms (in 100 ms increments)



- For more information on manual reset, refer to 2-8. Interlock. For more information on pre-reset, refer to 2-9. Pre-Reset.

 - For more information on PSDI, refer to 2-10. PSDI.



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor]


4-3-2-3. Teach-in Input

First, carry out 4-3-1. Preparing to Change Settings.

Next, on the Top page, click the icon below.



The setting screen below is displayed.

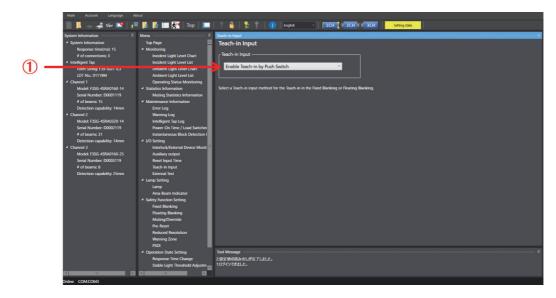

No.	Function name	Description	Initial value	Configurable value or numerical range
1	Teach-in Input	Select the method of the teach-in input when	Enable	Disable/Enable Teach-in by
		conducting teach-in of fixed blanking or floating	Teach-in by	Push Switch/Enable Teach-
		blanking.	Push Switch	in by Push Switch or wiring



For more information on teach-in, refer to 3-7. Teach-in (Fix Blanking / Floating Blanking).



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.




When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] button.


4-3-2-4. External Test Input

First, carry out 4-3-1. Preparing to Change Settings.

Next, on the Top page, click the icon below.

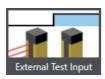

The setting screen below is displayed.

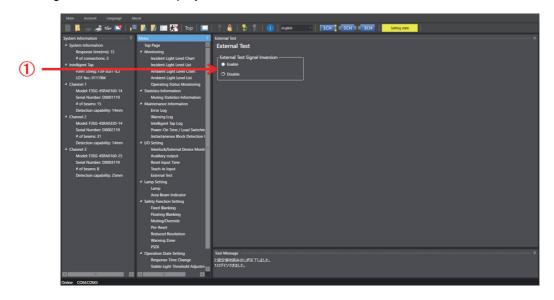

No.	Function name	Description		Configurable value or numerical range
1	External Test Signal Inversion	Set either enable or disable of the external test signal inversion.	Disable	Enable/Disable

By setting either enable or disable of the external test signal inversion to PNP/NPN selection, the condition to stop emission can be selected. Refer to the table below.

External Test Signal Inversion *1	Input voltage			
External rest digital inversion	PNP setting *2	NPN setting *2		
Disable (factory default setting)	Emission stops by connecting with 24 V connection.	Emission stops by connecting with 0 V connection.		
Enable	Emission stops by connecting with 0 V connection.	Emission stops by connecting with 24 V connection.		

^{*1.} This can be set using SD Manager 3.

For more information on external test signal inversion, refer to 2-6. External Test.

CHECK!

When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.




When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] **putton**.

^{*2.} This can be set by wiring.


4-3-3. Auxiliary Output/Lamp Setting

4-3-3-1. Auxiliary Output

First, carry out 4-3-1. Preparing to Change Settings. Next, click the icon below on the Top page.

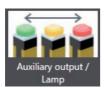

The setting screen below is displayed.

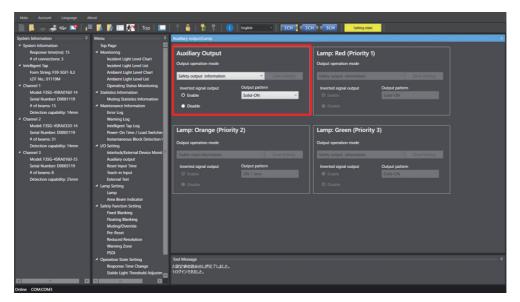

			Initial	value	Configurable value or
No.	Function name	me Description		Muting disabled *2	numerical range Muting enabled *2
1	Output operation mode of auxiliary output	Select the information or signal output by the auxiliary output.	Safety output information	Safety output information	■ Information (Output operation mode) assigned to Auxiliary output
2	Inverted signal output of auxiliary output	Select Enable or Disable for inverted signal of the auxiliary output.	Enable	Enable	Enable/Disable
3	Output pattern of auxiliary output	Select a desired output pattern of the auxiliary output.	Solid-ON	Solid-ON	Solid-ON/ON 1 time *2
4	Zone setting	Opens a zone setting screen for the Designated Beam Output function. The [Zone setting] button is only active when the [Designated beam output information] option is selected for the [Output operation mode].			on on settings, refer to d Beam Output.

^{*1} For this function, setting parameters are kept individually in each case that the muting function is set enabled or disabled. When changing of the muting state from enabled to disabled or vice versa, confirm the setting of this function again.

For more information on function combinations, refer to Considerations for enabling and disabling Muting function with SD Manager 3 on 2-1. Combination of Functions.

^{*2} The auxiliary output is in the pattern described on ■ Timing chart in 2-12. Auxiliary Output.



For more information on auxiliary output, refer to 2-12. Auxiliary Output.



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] putton.

■ Information (Output operation mode) assigned to Auxiliary output


Information Name	Description
Safety output information	When Safety output is in the ON state
Interlock information	Under INTERLOCK state
Lockout information	Under error/ LOCKOUT state
Excess power-on time information	When power-on time exceeds power-on time threshold
Excess load switching frequency information	When load switching frequency exceeds load switching frequency threshold
Stable-state information	When light intensity, which is constantly monitored, is 170% or higher (changeable *1) of ON-threshold
Muting information	Under Muting state
Override information	Under Override state
Muting/Override information	Under either Muting or Override state
Light level diagnosis information	When the F3SG-SR is unblocked and light intensity is within a range from 100% to 170% of ON-threshold for 10 s or longer
Warning zone information	When warning zone is blocked
Blanking bream unblocked information	When Fixed-Blanking or Floating Blanking beams are unblocked
PSDI Information	When the F3SG-SR is ready to be blocked for feeding or removing parts
Troubleshooting support signal	When one of the signals of Sequence error information, Interference/vibration information and Light level diagnosis information is in the ON state.
Designated beam output information	When a designated beam is blocked or unblocked
Sequence error information	Under Muting sequence error state or Interlock sequence error state
Reset-input information	When Reset/EDM/Override input is in the ON state
Mute A input information	When muting input A is in the ON state
Mute B input information	When muting input B is in the ON state
EDM input information	When EDM signal input is in the ON state
Individual cascaded sensor output (Channel 1)	When Safety output of Primary sensor in cascade connection is the ON state
Individual cascaded sensor output (Channel 2) *2	When Safety output of 1st Secondary sensor in cascade connection is the ON state
Individual cascaded sensor output (Channel 3) *2	When Safety output of the 2nd Secondary sensor in cascade connection is the ON state
Blanking/Warning-zone information	When Fixed Blanking, Floating Blanking, Reduced Resolution or Warning Zone function is enabled
Instantaneous block information	When the F3SG system stops accidentally due to interference or vibration. (In case of cascade connection, when any of cascaded segments comes under this condition.)
Pre-reset Information	Under Pre-reset state
Communication quality diagnosis information	Under communication retry state due to noise or communication cable short-circuit
Recoverable error information	Under recoverable error state
Replacement-recommended error information	Under replacement-recommended error state
None (OFF)	Disables the function.

^{*1.} This parameter can be changed using SD Manager 3. For details, refer to 4-3-5-2. Stable Light Threshold Adjustment.

^{*2.} The function can be configured even when no secondary sensor (Channel 2 or Channel 3) is connected. In that case, the safety outputs of the secondary sensor (Channel 2 or Channel 3) are regarded as the OFF state.


4-3-3-2. Designated Beam Output

First, carry out 4-3-1. Preparing to Change Settings. Next, click the icon below on the Top page.

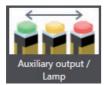

The setting screen below is displayed.


Select [Designated beam output information] for the output operation mode of the auxiliary output. In the following example, the designated beam output information is assigned to the output operation mode of the auxiliary output.

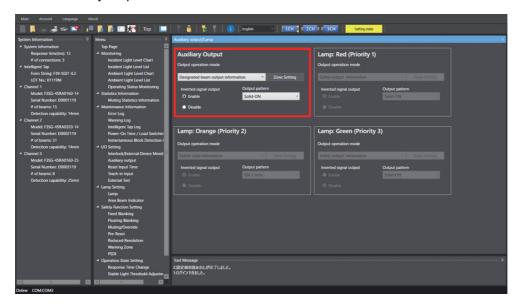



When [Designated beam output information] is selected for Auxiliary Output at the same time, the area configured is the same for all these outputs.

Click the [Zone Setting] button to configure the designated beam output.

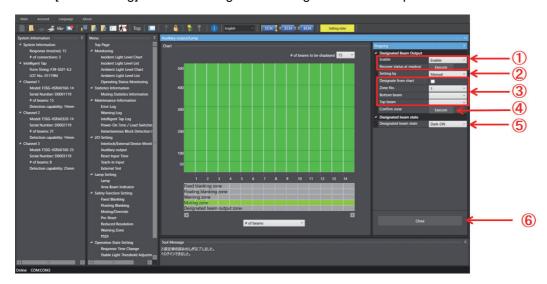

No.	Function name	Description	Initial value	Configurable item
1	Designated Beam Output	Select Enable or Disable for the Designated Beam Output function. When you want to restore the settings received from the F3SG, execute [Recover status at readout].	Disable	Enable/Disable
2	Setting by	Select manual setting using this software or setting by teach-in.		Manual/Teach-in
3	Zone setting	Select a desired zone number. To configure zone settings, specify desired bottom and top beam numbers from the drop-down list, or directly on the chart. When you check the [Designate from chart] box, you can specify a zone range by dragging red lines shown on the chart.	Bottom beam: Not specified Top beam: Not specified	Desired beam (in 1-beam increments)
4	Confirm zone	To confirm the setting of the specified zone, execute [Confirm Zone].	-	-
5	Designated beam state	Select either Dark-ON or Light-ON.	Dark-ON	Dark-ON/Light-ON
6	Close	Returns to Auxiliary Output/Lamp setting.	-	-

CHECK

Zone setting is possible for desired channel and beam (in 1-beam increments). The settings after the zone is determined are displayed in the zone information area under the chart.



For more information on designated beam output, refer to 2-23. Designated Beam Output.



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] putton.

■ Designated Beam Output Setup Procedure

- 1. Set the output operation mode of the auxiliary output in [Designated beam output information], and press the [Zone Setting] button.
- **2.** Enable the designated beam output function (No.1).
- 3. Set up the zone (Refer to Designated Beam Output Zone Setup Procedure below.) (No. 2, 3, and 4).
- **4.** Set up the designated beam unblocked state (No. 5).
- 5. Click the [Write configuration] button. On the settings list which will appear, confirm that the changed settings are correct, and click the OK button.

■ Designated Beam Output Zone Setup Procedure

Select a setup method (No. 2)

[Setting by Manual] (No. 3)

Select a zone No., and set up the bottom and top beam numbers.

Click the [Execute] button in [Confirm zone] to determine the designated beam output zone between the bottom and top beams configured above. (No. 4)


[Setting by Teach-in]

Selecting [Teach-in] switches the state to the Teach-in mode.

Block the F3SG-SR in the zone that you wish to set up as the designated beam output zone.


Click the [Execute] button in [Confirm zone] to determine the designated beam output zone between the bottom and top beams blocked. (No. 4)

Select [Manual] in [Setting by] after the zone is determined (No. 2).

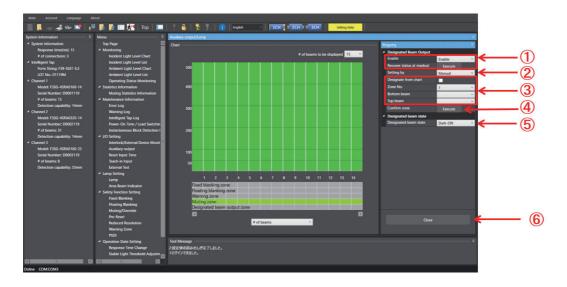


4-3-3. Area Beam Indicator (ABI)

First, carry out 4-3-1. Preparing to Change Settings. Next, on the Top page, click the icon below.

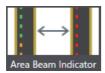

The setting screen below is displayed.

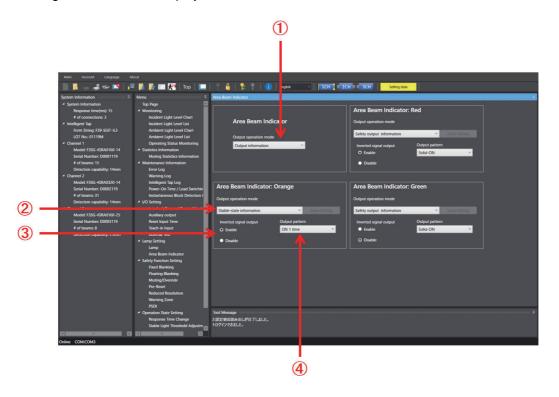

No.	Function name	Description		Initial value	Configurable value or numerical range
1	Output operation mode of ABI	Select the operation mode of the beam indicator (ABI). Items 2 to 4 below can be when [Output Information selected.	set only	Block/Unblock Information	Disable/Block/Unblock Information/ Input signal linkage/Output information
2	Output operation mode	Select the information/signal output by ABI.	Red	Safety output information	For the information assigned to ABI, refer to Information (Output
	of ABI		Orange	Stable-state information	operation mode) assigned to Auxiliary output of 4-3-3-1. Auxiliary Output.
			Green	Safety output information	
3	Inverted signal	Select Enable or Disable for the	Red	Enable	Enable/Disable
	output of ABI	inverted setting of ABI patterns.	Orange	Enable	
	pattern		Green	Disable	
4	ABI output	Select an ABI output pattern.	Red	Solid-ON	Illuminate/ON once/ON twice/ON three
	pattern		Orange	ON 1 time	times
			Green	Solid-ON	



Out of the three-color ABI patterns, if more than one type of signal information of the configured output operation mode occur simultaneously, the ABI illuminates in the ABI pattern color of the highest priority. (Priority high: red > orange > green: low)



For more information on area beam indicator (ABI), refer to 2-22. Area Beam Indicator (ABI).



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.




When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the

4-3-4. Safety Function Setting


4-3-4-1. Fixed Blanking

First, carry out 4-3-1. Preparing to Change Settings.

Next, click the icon below on the Top page.

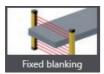

The setting screen below is displayed.

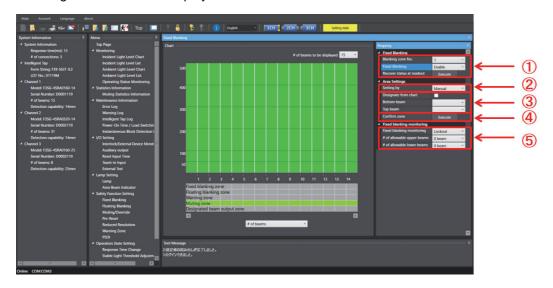

No.	Function name	Description		Initial value	Configurable value or numerical range
1	Blanking zone No.	This is the number for a target zoo Blanking. Up to three fixed blanking configured for each channel.	1	1 to 3	
	Fixed Blanking	Select Enable or Disable for the F for each fixed blanking zone. When you want to restore the rea from the F3SG-SR, click [Recove	dout settings received	Disable	Disable/Enable
2	Setting by	Select manual setting using SD M teach-in.	lanager 3 or setting by	Manual/	Manual/Teach-in
3	Zone setting	To configure zone settings, specify beam numbers from the drop-down chart. When you check the [Design can specify a zone range by dragg the chart.	n list, or directly on the ate from chart] box, you	Bottom beam: Not specified Top beam: Not specified	Desired beam (in 1-beam increments)
4	Confirm zone	To confirm the setting of the specified zone, execute [Confirm Zone].		-	-
5	Fixed blanking monitoring	Select a desired monitoring method and number of allowable beams. Fixed blanking monitoring		Lockout	Disable monitoring/ Lockout/Cancel blanking zone/Quick blanking
			Number of allowable upper/lower beams	0	0 to 5 beams (in 1-beam increments)



For more information on the Fixed Blanking, refer to 2-15. Fixed Blanking.



If using this function together with other functions, make settings taking the condition of adjacent zones into account.



For more information on zone adjacency conditions, refer to 2-19. Setting Zone Adjacency Conditions.



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] button.

■ Fixed Blanking Setup Procedure (Setting by Manual)

- 1 Select a Fixed Blanking zone, and enable the function (No. 1).
- 2. Set up the zone.

Select [Manual] in [Setting by]. (No. 2)

Set up the bottom and top beam numbers. (No. 3)

Click the [Execute] button in [Confirm zone] to determine the Fixed Blanking zone between the bottom and top beams configured above. (No.4)

- 3. Select a Fixed Blanking Monitoring function. (No. 5)
- **4.** Set up the number of allowable beams. (No. 5)

The allowable beams are configurable inside the Fixed Blanking zone. The set allowable beams will be indicated in the chart as shown below.

Fixed blanking zone	
Floating blanking zone	
Warning zone	
Muting zone	
Designated beam output zone	

In this example, one upper and two lower beams are set as allowable beams.

The table below describes the number of allowable beams configurable for a Fixed Blanking zone.

Number of allowable beams available for fixed blanking beams

	Number of fixed blanking beams	Maximum number of allowable beams
1		Setting not possible
2		1
3		2
4		3
n		n-1

5. Click the [Write configuration] button. On the settings list which will appear, confirm that the changed settings are correct, and click the [OK] button.

- Fixed Blanking Setup Procedure (Setting by Teach-in)
- 1. Select a Fixed Blanking zone, and enable the function (No. 1).
- 2. Set up the zone.

Select [Teach-in] in [Setting by]. (No. 2)

Selecting [Teach-in] switches the state to the Teach-in mode.

Block the F3SG-SR in the zone that you wish to set up as the Fixed Blanking zone.

Click the [Execute] button in [Confirm zone] to determine the Fixed Blanking zone between the bottom and top beams blocked. (No.4)

Select [Manual] in [Setting by] after the zone is determined (No. 2).

- **3.** Select a Fixed Blanking Monitoring function. (No. 5)
- **4.** Set up the number of allowable beams. (No. 5)

The allowable beams are configurable inside the Fixed Blanking zone. The set allowable beams will be indicated in the chart as shown below.

Fixed blanking zone		
Floating blanking zone		
Warning zone		
Muting zone		
Designated beam output	zone	

In this example, one upper and two lower beams are set as allowable beams.

The table below describes the number of allowable beams configurable for a Fixed Blanking zone.

Number of allowable beams available for fixed blanking beams


	Number of fixed blanking beams	Maximum number of allowable beams
1		Setting not possible
2		1
3		2
4		3
n		n-1

When you wish to set allowable beams outside the blocked zone in Step 2, add a Fixed Blanking zone outside the zone determined in Step 2 and then set up allowable beams.


5. Click the [Write configuration] button. On the settings list which will appear, confirm that the changed settings are correct, and click the [OK] button.

4-3-4-2. Floating Blanking

First, carry out 4-3-1. Preparing to Change Settings. Next, click the icon below on the Top page.

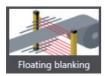

The setting screen below is displayed.

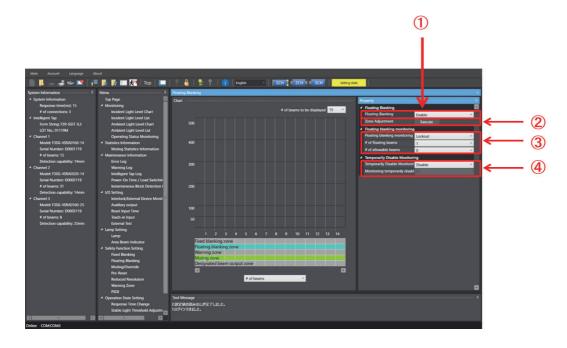

No.	Function name	Description			Configurable value or numerical range
1	Floating Blanking Setting	Select Enable or Disable for the Floating Blanking function.		Disable	Disable/Enable
2	Zone Adjustment	Automatically adjusts a floating blanking zone setting when the setting is not correct.			-
3	Floating blanking monitoring	Set the floating blanking monitoring, number of floating beams, and number of allowable Floating blanking monitoring		Lockout	Disable monitoring / Lockout/ Cancel blanking Zone
		beams.	Number of floating beams	1	1 to 15 beams (in 1-beam increments)
			Number of allowable beams		0 to 5 beams (in 1-beam increments)
4	Temporarily Disable	Select Enable or Disable for the Temporarily Disable Monitoring	Temporarily disable monitoring	Disable	Disable/Enable
	Monitoring	function and configure the Monitoring-temporarily-disabled time limit.	Monitoring temporarily disabled time limit	10 s	0 to 200 s (in 1-s increments) (Infinite when 0 is set)



For more information on the Floating Blanking, refer to 2-16. Floating Blanking.



If using this function together with other functions, make settings taking the condition of adjacent zones into account.



For more information on zone adjacency conditions, refer to 2-19. Setting Zone Adjacency Conditions.




When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] **[Monitor]** button.

■ Floating Blanking Setup Procedure


- 1. Enable the Floating Blanking function (No. 1).
- 2. Set up the Floating Blanking function (No. 3).
- 3. Set up the number of floating beams (No. 3).
- **4.** Set up the number of allowable beams (No. 3).
- **5.** Set up the Temporarily Disable Monitoring function (No. 4). When Enable is selected, also set up the monitoring-temporarily-disabled time limit (No. 4).

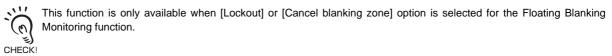


6. Click the [Write configuration] button. On the settings list which will appear, confirm that the changed settings are correct, and click the [OK] button.

4-3-4-3. Muting/Override

First, carry out 4-3-1. Preparing to Change Settings. Next, click the icon below on the Top page.

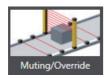

The setting screen below is displayed.

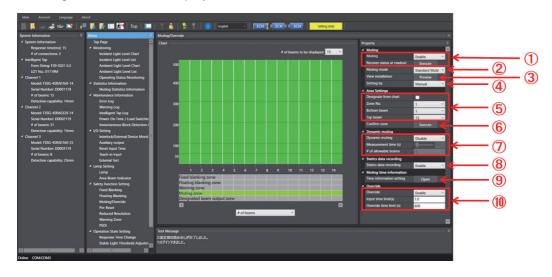

No.	Function name	Description		Initial value	Configurable value or numerical range
1	Muting	When you want to restore the rea	Select Enable or Disable for the Muting function. When you want to restore the readout settings received from the F3SG-SR, execute [Recover status at readout].		Disable/Enable
2	Muting mode	The state of the s		Standard Muting	Standard muting (Installation example 1)/Standard muting (Installation example 2)/Exit-only muting/Position detection muting
3	View installation	Shows installation conditions.		-	-
4	Setting by	Select manual setting using SD Manger 3 or setting by teach-in.		Manual	Manual/Teach-in
5	Zone setting	settings, specify desired bottom a numbers from the drop-down list chart. When you check the [Desi box, you can specify a zone rang lines shown on the chart. In both	elect a desired zone number. To configure zone ettings, specify desired bottom and top beam numbers from the drop-down list, or directly on the nart. When you check the [Designate from chart] by, you can specify a zone range by dragging red nes shown on the chart. In both cases above, secute [Confirm zone] to confirm the settings.		Desired beam (in 1-beam increments)
6	Confirm zone	Confirm the settings of the zone.	T	-	-
7	Dynamic muting	Select Enable or Disable, measurement time and the	Dynamic muting	Disable	Disable/Enable
	number of allowable beams for the Dynamic Muting function. Set the measurement time by moving the pointer of the bar.	Measurement time	3 s	1 to 25 s (in 0.1 s increments)	
		Number of allowable beams	1	0 to 5 beams (in 1-beam increments)	
8	Statistics data recording	Select Enable or Disable for reconstatistic data.	ording of muting	Enable	Disable/Enable

No.	Function name	Description		Initial value	Configurable value or numerical range
9	Time information setting	Moves to the setting screen of m information.	screen of muting time		-
10	Override	Set Enable or Disable and time	Override	Enable	Disable/Enable
		limit for overriding.	Override input time limit	1 s	0.1 to 5 s (in 0.1 s increments)
				600 s	0 to 600 s (in 1-s increments)/ (Infinite when 0 is set)

Zone setting is possible for desired channel and beam (in 1-beam increments).

The settings after the zone is determined are displayed in the zone information area under the chart.

CHECK!

- For more information on muting, refer to 2-13. Muting.
 - For more information on override, refer to 2-14. Override.

For the following functions, the setting parameters are kept individually in each case that the muting function is set enabled or disabled. After changing the Muting function from Enable to Disable or from Disable to Enable, check the settings of these functions again. CHECK! Affected functions: External Device Monitoring (EDM), Start Interlock, Restart Interlock, Auxiliary Output

/(三) For more information on the setting parameters, refer to:

- 2-8. Interlock
- 2-11. External Device Monitoring (EDM)
- 2-12. Auxiliary Output



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] button.

■ Muting Setup Procedure

- **1.** Enable the Muting function (No. 1).
- 2. Select a muting type (No. 2).
- 3. Set up a zone (Refer to *Muting Zone Setup Procedure* below.) (Nos. 4, 5, and 6).
- **4.** As needed, set up the Dynamic Muting function (No. 7).
- **5.** As needed, set up the Statistics Data Recording function (No. 8).
- **6.** Set up muting time information (Refer to Setting of Muting Time Information below.) (No. 9).
- **7.** As needed, set up the Override function (No. 10).
- 8. Click the [Write configuration] button. On the settings list which will appear, confirm that the changed settings are correct, and click the [OK] button.

■ Muting Zone Setup Procedure

Select a setup method (No. 4)

[Setting by Manual] (No. 5)

Select a zone No., and set up the bottom and top beam numbers.

Click the [Execute] button in [Confirm zone] to determine the muting zone between the bottom and top beams configured above. (No. 6)

[Setting by Teach-in]


Selecting [Teach-in] switches the state to the Teach-in mode.

Block the F3SG-SR in the zone that you wish to set up as the muting zone.

Click the [Execute] button in [Confirm zone] to determine the muting zone between the bottom and top beams blocked. (No. 6)

Select [Manual] in [Setting by] after the zone is determined (No. 4).

■ Setting of Muting Time Information

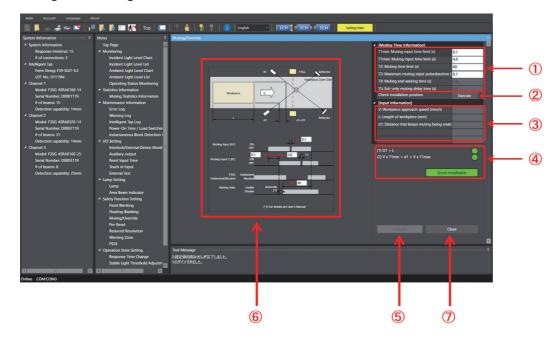

No.	Function name	Desc	cription	Initial value	Configurable value or numerical range
1	Muting Time Information	Enter values of Muting-related time limits. For the Muting time input time limit and the Muting time limit, setting the value to zero means the time limit is infinite.			-
		Standard muting	T1min: Muting input time limit (Min. value)	0.1 s	0.1 to 3.9 s (in 0.1 s increments)
			T1max: Muting input time limit (Max. value)	4 s	0.2 to 60 s (in 0.1 s increments)/infinite
			T2: Muting time limit	60 s	1 to 600 s (in 1 s increments)/infinite
			T3: Maximum allowable muting signal interruption	0.1 s	0.1 to 20 s (in 0.1 s increments)
		Exit-only muting	T1min: Muting input time limit (Min. value)	0.1 s	0.1 to 3.9 s (in 0.1 s increments)
			T1max: Muting input time limit (Max. value)	4 s	0.2 to 600 s (in 0.1 s increments)/infinite
			T2: Muting time limit	60 s	1 to 600 s (in 1 s increments)/infinite
			T3: Maximum allowable muting signal interruption	0.1 s	0.1 to 4 s (in 0.1 s increments)
			T4: Muting end waiting time	1 s	0.1 to 20 s (in 0.1 s increments)
			T5: Exit-only muting delay time	4 s	4 to 20 s (in 0.1 s increments)
		Position detection muting	T1max: Muting input time limit (Max. value)	4 s	0.2 to 60 s (in 0.1 s increments)/infinite
			T2: Muting time limit	60 s	1 to 600 s (in 1 s increments)/infinite
			T3: Maximum allowable muting signal interruption	0.1 s	0.1 to 4 s (in 0.1 s increments)
2	Check installation position	Reflects the Muting Time Inforchart shown in the left side of to the Input Information fields.	mation settings to the timing he screen, and allows data entry	-	-
3	Input Information	Enter information about the wo	ork-piece.	-	-
4	Diagnosis of installation condition	It is diagnosed and displayed if the setting condition is appropriate.		-	-
5	Evaluate	Checks if the muting with the	entered settings is possible.	-	-
6	Installation diagram and Timing chart	Shows the positions and timing chart of a work-piece, the F3SG-SR and muting sensors. You can also make settings to the muting time information by editing the values in the timing chart directly.		-	-
7	Close	Finishes the setting process o returns to muting setting.	f muting time information, and	-	-



If using this function together with other functions, make settings taking the condition of adjacent zones into account.



For more information on zone adjacency conditions, refer to 2-19. Setting Zone Adjacency Conditions.



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] button.

■ Muting Time Information Setup Procedure

- Enter [Muting Time Information] according to the setup state (No. 1).
- Click [Installation Position Check] button (No. 2).
- $\textbf{6-3} \quad \text{Enter [Input Information] according to the setup state (No. 3)}.$
- **6-4** Click [Evaluation] to confirm the integrity of the entered condition (No. 5). The result is displayed in area 4.
 - If the result is Installation NG, review the entered condition above.
- **6-5** Click [Close] button (No. 7).
 - For more information on Muting Time Information (how to optimize T1), refer to 4-4-2. Muting Statistics Information.


4-3-4-4. Pre-Reset

First, carry out 4-3-1. Preparing to Change Settings.

Next, click the icon below on the Top page.



The setting screen below is displayed.

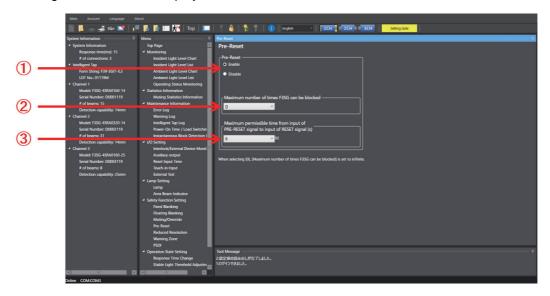

No.	Function name	Description	Initial value	Configurable value or numerical range
1	Pre-Reset function	Select Enable or Disable for the Pre-Reset function.	Disable	Enable/Disable *1
2	Maximum number of times F3SG-SR is blocked *2	Select desired maximum number the F3SG-SR can be blocked in the Pre-Reset process. The minimum number of times is 1. If you want to set this item to infinite, select zero.	0 (infinite)	0 to 9 times (in 1-time increments)
3	Maximum period of time from input of PRE-RESET signal to input of RESET signal	Select desired maximum time from inputting the PRE-RESET signal to inputting the RESET signal.	8 s	1 to 60 s (in 1s increments)

^{*1.} When pre-reset is enabled, the pre-reset function takes priority, so the parameters of start interlock and restart interlock are ianored.

^{*2.} The minimum number of times is fixed to one.



For more information on pre-reset, refer to.



It is not possible to configure the Pre-Reset function together with the Muting function. To enable settings of the Pre-Reset function, disable the Muting function. The setting parameters are kept individually in each case that the muting function is set enabled or disabled.

After changing the Muting function from Enable to Disable or from Disable to Enable, check the settings of these functions again.

Affected functions: External Device Monitoring (EDM), Start Interlock, Restart Interlock, Auxiliary Output



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.


When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] putton.




4-3-4-5. Reduced Resolution

First, carry out 4-3-1. Preparing to Change Settings.

Next, click the icon below on the Top page.

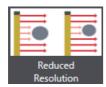

The setting screen below is displayed.

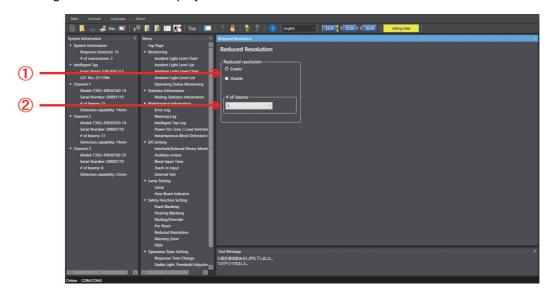

No.	Function name	Description	Initial value	Configurable value or numerical range
1	Reduced resolution	Select Enable or Disable for the Reduced Resolution function.	Disable	Enable/Disable
2	No. of beams	Select desired number of beams to be ignored. Up to three beams can be configured.	1	1 to 3 beams (in 1-beam increments)



For more information on reduced resolution, refer to 2-17. Reduced Resolution.

For more information on reduced resolution, refer to ■ Detection capability on 2-17. Reduced Resolution



It is not possible to configure the Reduced Resolution function together with the Muting function. To enable settings of the Reduced Resolution function, disable the Muting function.

After changing the Muting function from Enable to Disable or from Disable to Enable, check the settings of these functions again.

Affected functions: External Device Monitoring (EDM), Start Interlock, Restart Interlock, Auxiliary Output



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR.

To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] **[Monitor]** button.


4-3-4-6. Warning Zone

First, carry out 4-3-1. Preparing to Change Settings.

Next, click the icon below on the Top page.



The setting screen below is displayed.

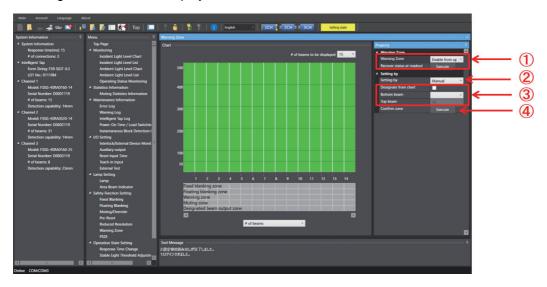

No.	Function name	Description	Initial value	Configurable value or numerical range
1	Warning Zone	Select Enable or Disable for the Warning Zone function. When you want to restore the readout settings received from the F3SG-SR, click [Recover status at readout].	Disable	Disable/Enable from upper/Enable from lower
2	Setting by	Select either manual setup using SD Manager 3 or setup by teach-in.	Manual	Manual/Teach-in
3	Zone setting	To configure zone settings, specify desired bottom and top beam numbers from the drop-down list, or directly on the chart. When you check the [Designate from chart] box, you can specify a zone range by dragging red lines shown on the chart. In both cases above, execute [Confirm zone] to confirm the settings.	-	Desired beam (in 1- beam increments)
4	Confirm zone	Confirm the settings of the zone.	-	-

For more information on warning zone, refer to 2-18. Warning Zone.

CHECK

If using this function together with other functions, make settings taking the condition of adjacent zones into account.

For more information on zone adjacency conditions, refer to 2-19. Setting Zone Adjacency Conditions.

(0)

When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.

CHECK!



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] putton.

■ Warning Zone Setup Procedure

- 1 Enable the Warning Zone function (Details are described later) (No. 1).
- **2.** Set up a zone (Details are described later) (Nos. 2, 3, and 4).
- 3. Click the [Write configuration] button. On the settings list which will appear, confirm that the changed settings are correct, and click the OK button.

■ Setup Procedure of the Function

1-1 The warning zone must include either a top or bottom beam of the F3SG.

Enable from upper: The warning zone is enabled from the upper end.

Enable from lower: The warning zone is enabled from the bottom end.

Disable: The warning zone is disabled.

■ Setup Procedure of the Zone

2-1 Select a setup method (No. 2).

[Manual setting] (No. 3)

When selecting [Enable from upper], set up the top beam.

When selecting [Enable from lower], set up the bottom beam.

[Teach-in]

When teach-in is selected, the software enters the teach-in mode.

When selecting [Enable from upper], block the lowest beam in the zone that you wish to specify as the warning zone.

When selecting [Enable from lower], block the top beam in the zone that you wish to specify as the warning zone.

2-2 Determine the zone (No. 4).

When the zone has been selected by teach-in, select the Manual button again after the zone is determined (No. 3)


4-3-4-7. PSDI

First, carry out 4-3-1. Preparing to Change Settings.

Next, click the icon below on the Top page.



The setting screen below is displayed.

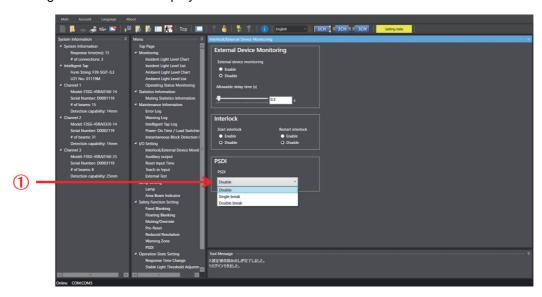

No.	Function name	Description	Initial value	Configurable value or numerical range
1	PSDI	Select disable, single break, or double break for the PSDI function.	Disable	Disable/Single break/ Double break



For more information on PSDI, refer to 2-10. PSDI.



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] button.

4-3-5. Operating State Setting


4-3-5-1. Response Time Change

First, carry out 4-3-1. Preparing to Change Settings.

Next, click the icon below on the Top page.



The setting screen below is displayed.

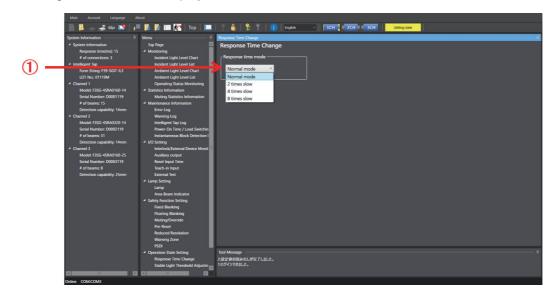

	No.	Function name	Description	Initial value	Configurable value or numerical range
Ī	1	Response time	Select a desired mode of the response	Normal	Normal mode/2 times slow/4 times slow/
		mode	time.	mode	8 times slow



For more information on response time adjustment, refer to 2-21. Response Time Adjustment.



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. For more information on safety distance calculation, refer to 5-1-2. Safety Distance.



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] lead button.


4-3-5-2. Stable Light Threshold Adjustment

First, carry out 4-3-1. Preparing to Change Settings.

Next, on the Top page, click the icon below.



The setting screen below is displayed.

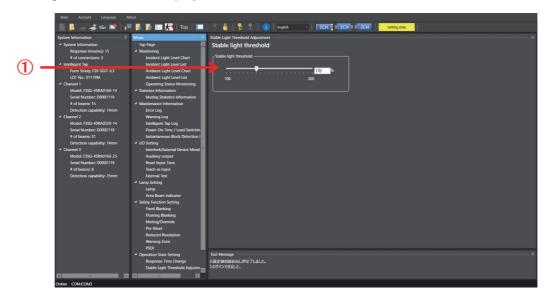

No.	Function name	Description	Initial value	Configurable value or numerical range
1	Stable light threshold Set stable light threshold. Set the parameter by moving the pointer of the bar.		170%	100 to 300%



/ E For more information on stable light threshold adjustment, refer to 2-24. Stable Light Threshold Adjustment.



When the stable light threshold value is changed, the following threshold values of the output information are also changed.

- · Auxiliary Output: Stable-state information and Light level diagnosis information (upper limit)
- CHECK! · Area Beam Indicator: Stable-state information and Light level diagnosis information (upper limit)
 - · IO-Link Process Data: Light level diagnosis information (upper limit)



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.




When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] when the state of the

4-3-5-3. Operating Range Selection

First, carry out 4-3-1. Preparing to Change Settings. Next, on the Top page, click the icon below.



The setting screen below is displayed.

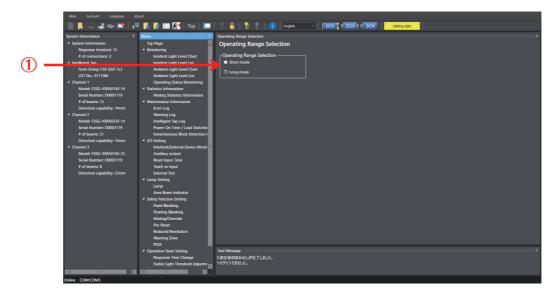

No.	Function name	Description	Initial value	Configurable value or numerical range
1	Operating Range Selection	Select the operating range.	Long mode	Short mode/Long mode



For more information on operating range selection, refer to 2-20. Operating Range Selection.



When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.



When connecting the Intelligent Tap to a F3SG-SR and trying to return the F3SG-SR to [Detecting], follow step 4 of 4-1-3-2. Connection Procedure When Using USB Connector to restart the F3SG-SR and Intelligent Tap, or click the [Monitor] putton.


4-3-6. Setting Initialization

This function is usable to bring the settings of each function back to the factory default settings. Log in at the administrator level and click the icon below on the top page.



The setting screen below is displayed.

In order to execute setting initialization, click [Reset to factory default settings].

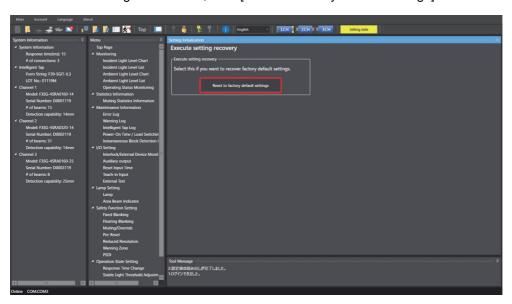

In a cascade connection

Select the channel of the F3SF-SR sensor you wish to bring back to the factory default settings using factory default settings].

To bring all the cascaded channels back to the factory default settings, execute setting initialization for each channel.

■ With F3SG-SR connected, updating the backup settings of F3SG-SR saved in the Intelligent Tap to the factory default settings

Initialize the settings of all the initialization target channels according to the procedure above. Then, click the [Write] button



Unless clicking the [Write] button [], the backup settings of F3SG-SR saved in the Intelligent Tap are not updated. In this state, if restarting the F3SG-SR with the Position 1 of the DIP Switch set at ON (Lock), the F3SG-SR is restored by the settings before initialization.



Even after the settings are returned to the factory default settings, the password which has already been changed is not returned to initial password "0000." For the password, refer to 4-2-6. Password Protection.

4-4. Monitoring with SD Manager 3

4-4-1. Monitoring


Logging in is not needed to perform the monitoring functions described in this section.

4-4-1-1. Incident Light/Ambient Light

This function can be used only when the F3SG-SR is connected to the Intelligent Tap and a PC. On the Top page, click the icon below.



The screen below is displayed.

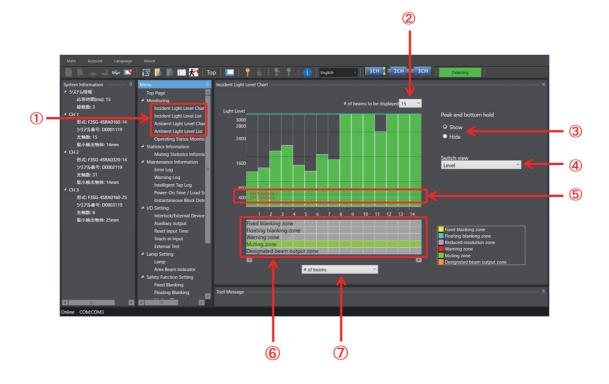

No.	Function	Description
1	Select light level monitoring function	Select incident light level or ambient light level to be monitored and chart or list view.
2	No. of beams to be displayed	Select the number of F3SG-SR beams to be displayed.
3	Show/hide held peak and bottom hold	Shows the maximum and minimum values of a selected light level by light blue and pink lines, respectively when [Show] is selected.
4	Select unit of vertical axis	Switch the unit of the vertical axis on the chart between Percent and Level. When [Percent] is selected, the light level is shown in percentage based on the ON threshold value as 100%. When [Level] is selected, the light level is converted to voltage.
5	ON/OFF threshold values	Shows the ON and OFF threshold values of the F3SG-SR. This information is only shown when the [Level] view is selected for the unit of vertical axis.

No.	Function	Description
6	Information assigned	Shows a function assigned to the beams. The following five functions can be assigned. -Fixed blanking zone -Floating blanking zone or Reduced resolution zone -Warning zone -Muting zone Designated beam output zone
7	Select unit of horizontal axis	Switch the unit of the horizontal axis on the chart between the number of beams and sensor length.



Reduced resolution zone is displayed in the Information assigned section only when the reduced resolution is enabled.

4-4-1-2. Operating Status Monitoring


This function can be used only when the F3SG-SR is connected to the Intelligent Tap and a PC. On the Top page, click the icon below.





The F3SG-SR enters detecting state, and the safety outputs are turned ON/OFF according to the beam state and settings.

The screen below is displayed.

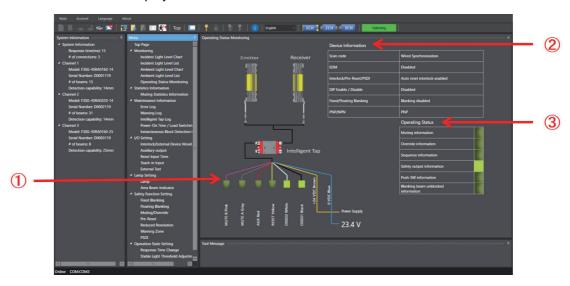

No.	Function	Description
1	External wiring status	Shows ON or OFF state of signal lines.
2	Sensor Information	When DIP Switch Enabled is selected, it shows a state of DIP Switch settings. When Configuration Tool Enabled is selected, it shows setting parameters saved in the F3SG-SR.
3	Operating Status Monitoring Shows the ON/OFF state of inputs and outputs of the F3SG-SR. Shows Muting information, Override information, Sequence information, Safety output information, Push-SW, and Blanking beam unblocked information.	

■ Readout Information

The user can view the following information related to a receiver or emitter.

If more than one sensor is cascaded in series, information on all the cascaded sensors is viewed together.


	Information	Description
External wiring	Power Supply	The power supply voltage in the power-on status is displayed.
	OSSD 1 (Black)	Linked with safety output 1
	OSSD 2 (White)	Linked with safety output 2
	RESET (Yellow)	Linked with Reset/EDM/Override input
	AUX (Red)	Linked with auxiliary output
	MUTE A (Gray)	Linked with MUTE A/Pre-Reset input/PSDI input
	MUTE B (Pink)	Linked with MUTE B input
Sensor	Scan code	Displays Scan Code configured
	EDM	Displays EDM configuration
	Interlock/Pre-Reset/PSDI	Displays Interlock/Pre-Reset/PSDI mode configured
	Fixed/Floating Blanking	Displays Fixed/Floating Blanking configured
	PNP/NPN	Displays output mode (PNP/NPN) configured
	DIP Enable/Disable	Displays whether the settings by the DIP Switches are enabled or disabled.
Operating Status	Muting information	Linked with muting status
	Override information	Linked with override status
	Sequence error information	Linked with muting sequence error status or interlock sequence error status
	Safety output information	Linked with safety output
	Push-SW information	Linked with the input signal of Push Switch
	Blanking beam unblocked information	Linked with the state where the blanking beam is unblocked

4-4-2. Muting Statistics Information


This function can be used only when the F3SG-SR is connected to the Intelligent Tap and a PC.

This function logs and visualizes conditions of F3SG-SR muting operations to help the user adjust settings of muting input time difference. Also, its statistic calculation allows for optimal settings with reduced test runs.

On the Top page, click the icon below.

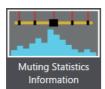

The screen below is displayed.

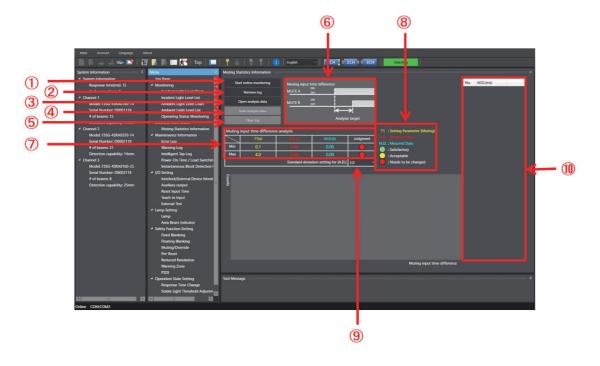


No.	Function	Description
1	Start (stop) online monitoring	Retrieves muting input time difference information from the F3SG-SR in real time and displays it in the analysis data area (No. 10).
Analysis Data (No. 10) and di		Obtains the muting input time difference information saved in F3SG-SR and displays it as Analysis Data (No. 10) and displays the graph as Graph (No. 11). Pressing this button switches the safety outputs to the OFF state and the operating state to [Setting state].
3	Open analysis data	Opens a .cvs file saved by the operation (No. 4).
4	Save analysis data	Saves data displayed in the analysis data area (No. 10) as a .csv file. The data saved also includes other muting input time difference information and sensor information.
5	Clear log	Clears muting time logs saved in the F3SG-SR.
6	Timing chart	Displays a timing chart of time analyzed.
7	Muting input time difference analysis table	Displays minimum and maximum values of muting setting parameter, assumed data and measured data, and judgment results on these values.
8	Description on muting input time difference analysis table	Displays meanings of abbreviations and judgment results in the table. A.D.: Assumed Data (the value calculated from M.D. using the standard deviation setting. The value of zero or less is handled as zero.) M.D.: Measured Data (the measured value of the time difference from muting input A to muting input B)
9	Standard deviation setting	The range of variation of assumed data can be selected from 2.6 , 3.0 and 6.0 .

No.	Function	Description
10	Analysis data	Displays measured data of muting input time difference (to be analyzed).
11	Chart	Displays a setting parameters and assumed data of the chart (No. 7) and analyzed data (No. 10) in graph form.


■ Data Description

For the time data obtained, refer to the timing charts below.

Standard/ Position Detection Muting

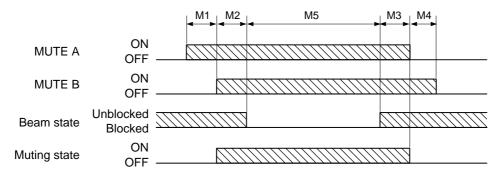

Exit Only Muting

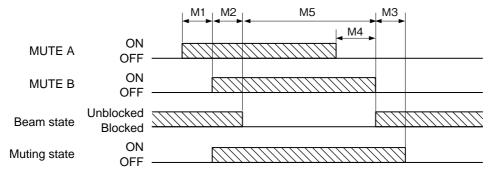



M1 (input time difference) is the data to be analyzed for Muting Statistics Information.

All M1 to M5 data and internal data will be saved in a .cvs file when saving the analysis data.

■ How to use muting statistics information

1. Carry out test runs including the muting in an actual installation environment. Performing the muting allows the F3SG-SR to log muting information.



If the F3SG-SR used is secondhand, there may be logs of previous settings left in the F3SG-SR.

If you do not need such logs, delete them by the [Clear log] button before enabling the muting.


Once the muting statistics log is cleared, log information in the sensor cannot be restored. Save logs in advance, if

Logs can be saved as a .csv file by selecting [Retrieve log] and [Save analysis data].



- It is necessary to perform the muting at least five times in order to obtain assumed data.
- 2. Connect SD Manager 3 to the F3SG-SR and display the muting statistics information screen above.
- 3. Clicking the [Retrieve log] button to obtain logs saved in the F3SG-SR during the test runs in Step 1. Obtained data (table, chart and analysis data) is displayed in the screen.

- **4.** Check the analysis data (10) to see if there is any unnecessary data. It is possible to delete unnecessary data by selecting the data on the screen and pressing the [Delete] key. The table (7) and chart (11) will be updated each time analysis data is deleted. If you have deleted analysis data accidentally, click the [Retrieve log] button again to recall it.
- **5.** Select a desired standard deviation range (9) from the pull-down menu.
- 6. The flowchart below shows an example to optimize setting parameters of muting input time difference based on analysis data.

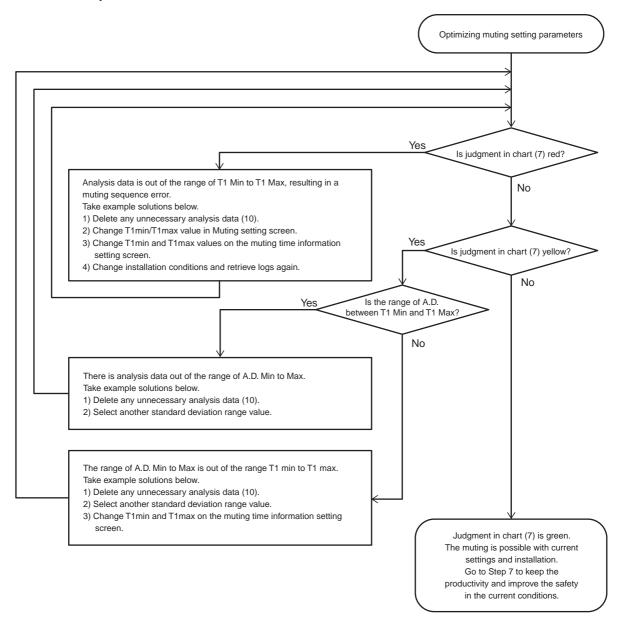

7. Adjusting the T1 Min and T1 Max closer to the A.D. Min and Max allows the user to keep the productivity and improve the safety.




The following operations in Step 7 are unnecessary if the T1 Min and T1 Max are fairly close to the A.D. Min and Max.




If you change T1 Min and T1 Max, make sure that these values satisfies "T1 Min < A.D. Min < A.D. Max < T1 Max".

When the optimization result below is obtained as a result of the flowchart above, there is a big difference between T1 Max and A.D. Max, and between T1 Min and A.D. Min.shown in the chart below.

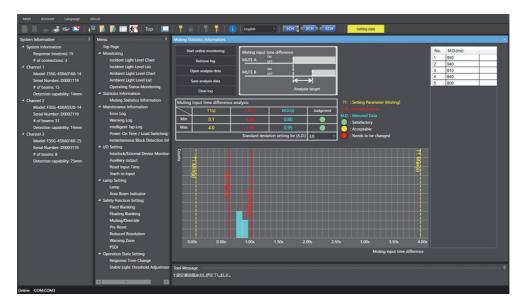

Now, change the T1 Min and T1 Max settings to 0.5 s and 1.0-1.2 s on the muting time information setting

 $oldsymbol{8}_{ullet}$ When setup is completed, execute writing into F3SG-SR. The deviation of T1 Min and Max from the A.D. Min and Max has been reduced, resulting in improved safety, as shown below.

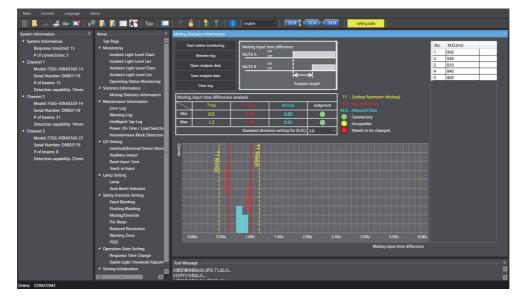


For more information on muting time information settings, refer to 4-3-4-3. Muting/Override.

4-4-3. Maintenance Information


Log in with the operator or administrator level to perform the monitoring functions described in this section.

4-4-3-1. Error Log Information


This function can be used only when the F3SG-SR is connected to the Intelligent Tap and a PC. On the Top page, click the icon below.

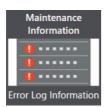

Alternatively, select [Error Log] from the [Maintenance Information] list in the [Menu] window.

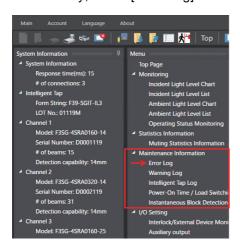

The screen below is displayed. Click an error item you want to view and the cause and measures of the error is displayed.

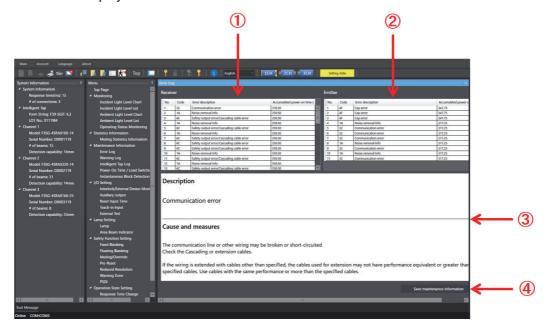

No.	Function	Description	
1	Error Log Information (Receiver)	Shows error logs including error codes, error descriptions and accumulated power-on time at the time when errors occurred, with the most recent errors first for the receiver.	
2	Error Log (Emitter) *	Shows error logs including error codes, error descriptions and accumulated power-on time at the time when errors occurred, with the most recent errors first for the emitter.	
3	Show error descriptions	Click an error to show details, cause and measures of the event.	
4	Save maintenance information	Saves error and warning logs, Intelligent Tap log, power-on time, accumulated power-on time, load switching frequency and accumulated load switching frequency as a .csv file.	

^{*} The error log information of the emitter is displayed only when the sensor is connected in the Wired Synchronization.



- Refer to 8-1-2. LOCKOUT State for more information on the error codes and descriptions. Refer to 2-26-4. Power-ON Time for more information on the accumulated power-on time.




- Error logs are only displayed for a sensor segment selected in the Target sensor section.
- Up to 50 past errors can be recorded. Up to last five logs are displayed without logging in.
- When the F3SG-SR is in a cascade connection, select a desired sensor segment from the [Target sensor] CHECK! in the top right corner of the screen. button

4-4-3-2. Warning Log

This function can be used only when the F3SG-SR is connected to the Intelligent Tap and a PC. Select [Warning Log] from the [Maintenance Information] list in the [Menu] window.



The screen below is displayed. Click a warning item you want to view and the cause and measures of the warning item is displayed.

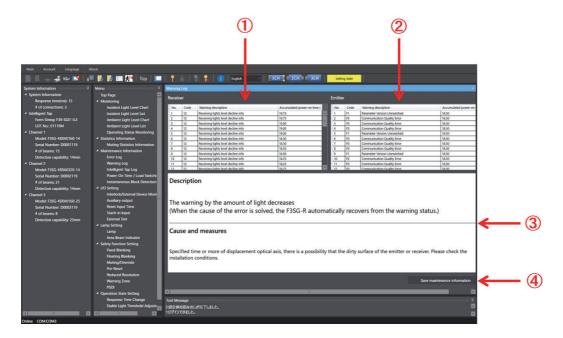

No.	Function	Description
1	Warning Log Information (Receiver)	Shows warning logs including warning codes, warning descriptions and accumulated power-on time at the time when warnings occurred, with the most recent warnings first for the receiver.
2	Warning Log Information (Emitter) *	Shows warning logs including warning codes, warning descriptions and accumulated power-on time at the time when warnings occurred, with the most recent warnings first for the emitter.
3	Show error descriptions	Click an error or warning log to show details, cause and measures of the event.
4	Save maintenance information	Saves error and warning logs, Intelligent Tap log, power-on time, accumulated power-on time, load switching frequency and accumulated load switching frequency as a .csv file.

^{*} The warning log information of the emitter is displayed only when the sensor is connected in the Wired Synchronization.




- Refer to 8-1-3. Warning for more information on the warning codes and descriptions.
- Refer to 2-26-4. Power-ON Time for more information on the accumulated power-on time.
- Warning logs are only displayed for a sensor segment selected in the Target sensor section. • Up to 50 past warnings can be recorded. Up to last five logs are displayed without logging in.
- When the F3SG-SR is in a cascade connection, select a desired sensor segment from the [Target sensor] button | in the top right corner of the screen.

(0)


4-4-3-3. Intelligent Tap Log

This function can be used only when the Intelligent Tap is connected to a PC. This function can be used regardless of whether or not the F3SG-SR is connected with the Intelligent Tap.

Select [Intelligent Tap Log] from the [Maintenance Information] list in the [Menu] window.

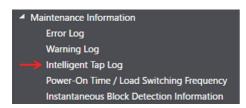

The screen below is displayed. Click an error item you want to view and the cause and measures of the error is displayed.

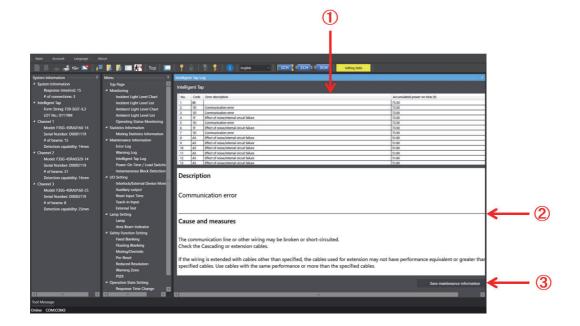

No.	Function	Description
1	Intelligent tap log	Error code, error details, and the accumulated power-on time when the error occurred are displayed in order from the newest log.
2	Error details indication	By clicking each log, the details, cause, and countermeasures about the log are displayed.
3	Maintenance information saving	Saves error and warning logs, Intelligent Tap log, power-on time, accumulated power-on time, load switching frequency and accumulated load switching frequency as a .csv file.



- Refer to 8-1-4. Troubleshooting for Intelligent Tap for more information on the error codes and descriptions of the Intelligent Tap.
 - Refer to 2-26-7. Intelligent Tap Log for more information on the accumulated power-on time.




Logs of past 50 errors are saved in the Intelligent Tap log.

4-4-3-4. Power-On Time/Load Switching Frequency

This function can be used only when the F3SG-SR is connected to the Intelligent Tap and a PC. Select [Power-On Time/Load Switching Frequency from the [Maintenance Information] list in the [Menu] window.



Then, the screen below is displayed.

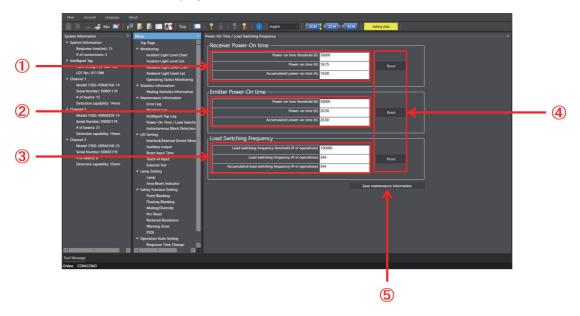

No.	Function name	Description	Initial value	Configurable item
1	Receiver power-on time	Shows power-on time threshold, power-on time and accumulated power-on time for the receiver. Only power-on time threshold is configurable.	Power-on time threshold: 30,000 h	Power-on time threshold: 30,000 to 1,000,000 h (in 1-h increments)/Disable
2	Emitter power-on time *	Shows power-on time threshold, power-on time and accumulated power-on time for the emitter. Only power-on time threshold is configurable.	Power-on time threshold: 30,000 h	Power-on time threshold: 30,000 to 1,000,000 h (in 1-h increments)/ Disable
3	Load switching frequency	Shows load switching frequency threshold, load switching frequency and accumulated load switching frequency. Only load switching frequency threshold is configurable.	Load switching frequency threshold: 100,000 h	100,000 to 4,000,000 times (in 1-time increments/ Disable)
4	Reset	Resets power-on time and load switching frequency to zero. Resetting is only possible when you are logged in with the administrator level.	-	-
5	Save maintenance information	Saves error and warning logs, Intelligent Tap log, power-on time, accumulated power-on time, load switching frequency and accumulated load switching frequency as a .csv file.	-	-

^{*} The emitter power-on time is displayed only when the sensor is connected in the Wired Synchronization.




- Refer to 2-26-4. Power-ON Time for more information on the accumulated power-on time.
 Refer to 2-26-5. Load Switching Frequency for more information on the load switching frequency.
- Writing the configurations of power-on time threshold and load switching frequency threshold to the F3SG-SR is also possible with the operator level.
 - The power-on time information is recorded in the F3SG-SR main unit every 15 minutes.
- The power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the power-on time information is recorded in the 1995 of the 1995 o button in the top right corner of the screen. 1CH 2CH 3CH
 - When changing the settings is complete, confirm the settings and write the configuration to the F3SG-SR. To enable the written configuration, refer to 4-2-7-3. Writing Configuration into Intelligent Tap.

4-4-3-5. Instantaneous Block Detection Information


This function can be used only when the F3SG-SR is connected to the Intelligent Tap and a PC. On the top page, click the icon below.



Alternatively, select [Instantaneous Block Detection Information] from the [Maintenance Information] list in the [Menu] window.

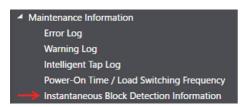

The screen below is displayed.

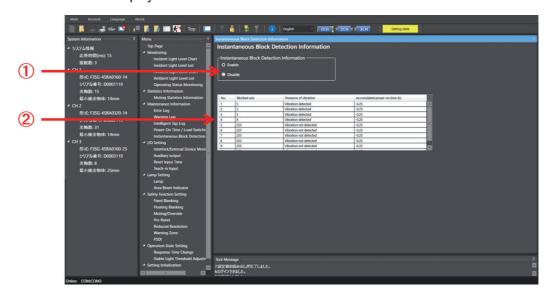

No	. Function name	Description	Initial value	Configurable item
1	Instantaneous Block Detection Information	Select Enable or Disable for the instantaneous block detection information display function.	Enable	Enable/Disable
2	Instantaneous Block Detection Log Information	Displays blocked beams, presence of vibration, and accumulated power-on time at the time when instantaneous block occurred in order from the newest instantaneous block detection log.	-	-



/ Eler to 2-28. Instantaneous Block Detection for more information on the Instantaneous Block Detection function.



When the F3SG-SR is in a cascade connection, select a desired sensor segment from the [Target sensor] button in the top right corner of the screen.

4-5. Basic Operation of SD Manager 3 Mobile APP

4-5-1. How to Install/Uninstall SD Manager 3 Mobile APP

4-5-1-1. Installing SD Manager 3 Mobile APP

■ Installation in Smartphone

Download SD Manager 3 Mobile APP from the following website and install it. URL: https://www.fa.omron.co.jp/f3sg-srpg_tool/

■ Installation in Tablet

Download SD Manager 3 Mobile APP from the following website and install it. URL: https://www.fa.omron.co.jp/f3sg-srpg_tool/

4-5-1-2. Uninstalling SD Manager 3 Mobile APP

■ Uninstallation in Smartphone

Delete SD Manager 3 Mobile APP according to the procedure of your smartphone.

■ Uninstallation in Tablet

Delete SD Manager 3 Mobile APP according to the procedure of your tablet.

4-5-2. How to Update SD Manager 3 Mobile APP

Version Upgrade in Smartphone

Download the new SD Manager 3 Mobile APP from the following website and install it. URL: https://www.fa.omron.co.jp/f3sg-srpg_tool/

■ Version Upgrade in Tablet

Download the new SD Manager 3 Mobile APP from the following website and install it.

URL: https://www.fa.omron.co.jp/f3sg-srpg_tool/

4-5-3. Pairing (Connection Verification)

Paring is the process required for the Bluetooth® Communication Unit and a device with Bluetooth® wiring technology to recognize and connect with each other.

Indications and operations of the pairing process are different depending on a Bluetooth® device used. Always refer to instruction manuals of such a device when pairing the devices.



When the Bluetooth® Communication Unit and a Bluetooth® device are not paired, it is not possible to connect to the Bluetooth® Communication Unit. These must be paired in advance.



Once the Bluetooth® Communication Unit and a Bluetooth® device are paired, it is not necessary to pair them again.

■ Compatible Products (Smartphones and Windows tablets)

[Verification steps conducted by OMRON]

- (1) Pair a smartphone or tablet with the Bluetooth® Communication Unit and confirm on its setting window that the pairing is complete.
- (2) After confirming the step (1), verify by the SD Manager 3 Mobile APP that the communication with the F3SG-SR is established.

[Verification results]

Smartphones and Windows tablets verified by OMRON are listed in the table below.

Note: The verification conducted by OMRON does not guarantee all performance of the devices.

[List of compatible smartphones and Windows tablets (as of May 1, 2019)]

Device	Maker	Model (Model name)
Smartphone	HUAWEI	P20 lite
	Samsung Electronics	Galaxy S8 Dual-SIM SM-G950FD
SHARP AQUOS sen		AQUOS sense lite SH-M05
Sony Mobile Communications Xperia		Xperia X Dual F5122
	XIAOMI	Mi A2 Lite
Windows Tablet	ASUS	R105HA
	Microsoft	Surface Pro 5

4-5-4. Getting Started, Main Screen, Version Confirmation, and **Shutting Down**


4-5-4-1. Getting Started

To start SD Manager 3 Mobile APP, tap the SD Manager 3 Mobile APP icon added to the home screen when the APP is installed.

The SD Manager 3 Mobile APP starts and the screen below is displayed.

■ If the device is connected


If the device is connected, a pop-up message indicating that connection is established is displayed. In addition, a dialog message indicating that sensor information is read completely is displayed.

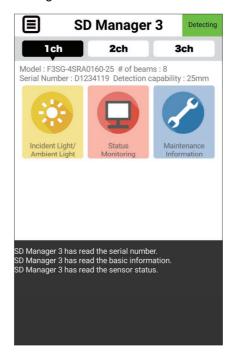

■ If the device is not connected

If the device is not connected, no dialog message is displayed.

In addition, a pop-up message saying "Not connected with the sensor" is displayed when tapping each icon.

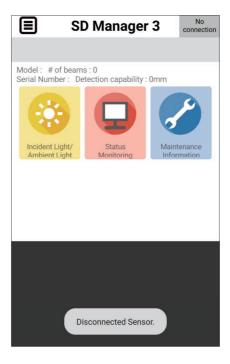




If pairing is has not been done yet, refer to 4-5-3. Pairing (Connection Verification).



If unable to connect with the sensor although pairing is already completed, confirm again that the Bluetooth® communication function of the smartphone or tablet is ON.

4-5-4-2. Main Screen

This section describes each icon of the main screen.

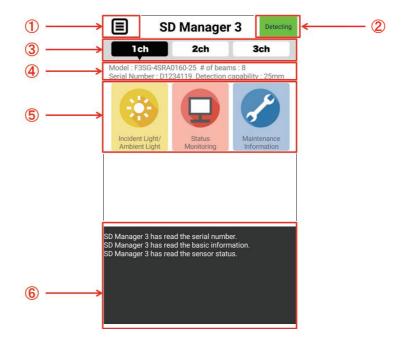

No.	Function name	Description	
1	Menu button	Displays the menu screen. From this menu screen, you can confirm the app version or shut down the app. For details, refer to 4-5-4-3. Version Information and 4-5-4-4. Shutting Down.	
2	Sensor operating	Shows the following statuses of the F3SG-SR.	
	state display	Detecting Operating: The F3SG-SR keeps normal operation.	
		Setting State Setting state: It is possible to read configuration from the F3SG-SR. The safety outputs of the F3SG-SR are in the OFF state.	
		Lockout State: The F3SG-SR is in the LOCKOUT State.	
		No connection: The F3SG-SR and SD Manager 3 Mobile APP are disconnected or not properly connected.	
3	Channel switching	Select the channel monitored.	
		The display changes according to the cascade connection of the F3SG-SR.	
4	Sensor basic information display	Shows information on the F3SG-SR connected.	
5	Function icon display	Displays the function capable of displaying the monitored information on the screen.	
6	Log display	Displays messages according to the user operations and connection states.	


4-5-4-3. Version Information

The version of SD Manager 3 can be confirmed by the following method.

1. Select [About] from the [Menu] button



2. The pop-up screen below is displayed, and the version is displayed in the red frame.

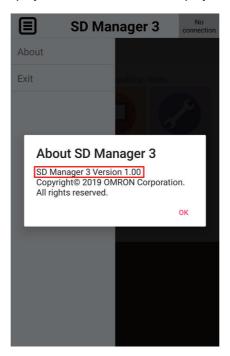


4-5-4-4. Shutting Down

To shut down SD Manager 3, kill the task according to the specification of the smartphone/tablet, or execute the method below.

1. Select [Exit] from the [Menu] button



2. The pop-up screen below is displayed, so select [Yes] to exit SD Manager 3.

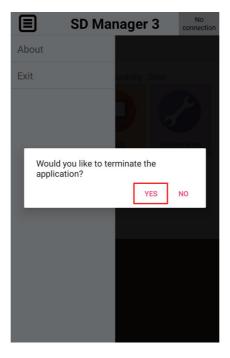


4-5-5. Monitoring with SD Manager 3

4-5-5-1. Incident/Ambient Light Level Monitoring

Tap the following icons on the main screen.



The screen below is displayed.

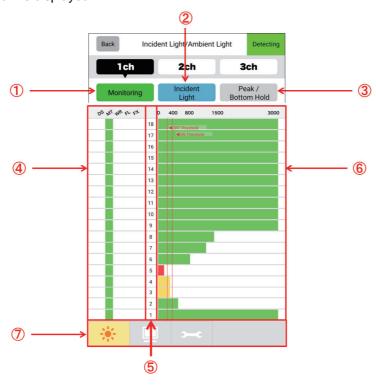

No.	Function name	Description
1	Light level monitoring operation	Starts or stops monitoring of the selected function.
2	Incident light/ambient light switching	Select either incident light or ambient light as the monitoring target.
3	Peak and bottom holding operation	When setting the display, the maximum and minimum values of incident light are displayed with a water-color and pink lines, respectively.
4	Zone display	Displays the function assigned to the beam. Each display means the following function. • DS: Designated beam output zone • MT: Muting zone • WR: Warning zone • FL: Floating blanking zone or RR: Reduced resolution zone • FX: Fixed blanking zone
5	Beam display	Displays the beams of the F3SG-SR being monitored.
6	Light level display	Displays the light level and ON/OFF threshold of the selected function.
7	Function switching	The icon of the function which is being monitored is highlighted. Tapping the icon of the other function switches to the display of the corresponding function.



By the zone display, the reduced resolution zone is displayed only when the applicable function is enabled.


4-5-5-2. Status Monitoring Information

■ Sensor Status Information

Tap the following icons on the main screen.



The screen below is displayed.

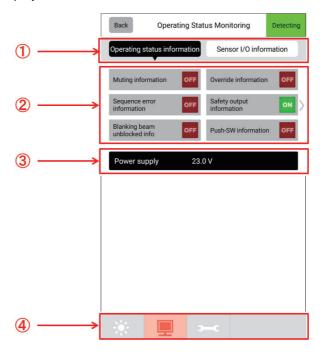

No.	Function name	Description	
1	Status switching	As the monitoring target, select either sensor status information or sensor I/O information.	
2	Sensor status display	Displays the status of the sensor being monitored.	
3	Power supply voltage display	Displays the power supply voltage of the sensor being monitored.	
4	Function switching	The icon of the function which is being monitored is highlighted. Tapping the icon of the other function switches to the display of the corresponding function.	

■ Sensor I/O Information

Sensor I/O information can be displayed by the following method.


1. Tap the following icons on the main screen.



2. On the status monitoring screen, tap [Sensor I/O information] from the [Status Switching] button.



3. The screen below is displayed.

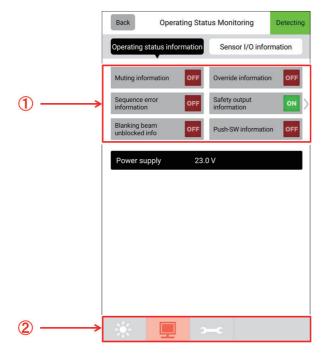

No	. Function name	Description
1	Sensor I/O information display	Displays the I/O information of the sensor being monitored.
2	Function switching	The icon of the function which is being monitored is highlighted. Tapping the icon of the other function switches to the display of the corresponding function.


4-5-5-3. Maintenance Information

■ Maintenance Information

Tap the following icons on the main screen.



The screen below is displayed.

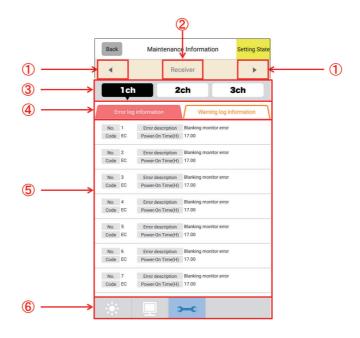


No.	Function name	Description	
1	Device switching	Switches the device monitored.	
2	Device display	Displays the device being monitored.	
3	Channel switching	Select the channel monitored. The display changes according to the cascade connection of the F3SG-SR.	
4	Error/warning log switching	Select the type of the log monitored from error log or warning log.	
5	Log list	Displays the codes, descriptions, and accumulated power-on time of the errors/warnings in order from the newest log.	
6	Function switching	The icon of the function which is being monitored is highlighted. Tapping the icon of the other function switches to the display of the corresponding function.	



- The error/waning log function displays the information on the channel selected as the setting target.
- The error/warning log function records logs for the past 50 errors/warnings.
- Selecting the Maintenance Information switches the F3SG-SR to the SETTING state. Refer to 4-1-4. SETTING State of F3SG-SR with SD Manager 3 Connected for more information on the SETTING state.
- Tapping an icon of another function returns the F3SG-SR to the [Detecting] state.

■ Maintenance Information

By tapping each error/warning log on the maintenance information screen, the screen moves to the maintenance information details screen and the following screen is displayed.

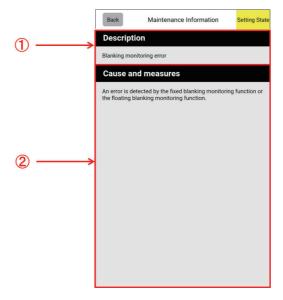

	No.	Function name	Description
1 Error /warning		Error /warning description	Displays the details of each error/warning.
2 Cause and measures Display		Cause and measures	Displays the cause and measures of the error/warning.

Chapter 5 Wiring and Installation

5-1	Installation Considerations	250
	5-1-1. Detection Zone and Approach	250
	5-1-2. Safety Distance	252
	5-1-2-1. Safety Distance Formulas according to ISO 13855	5/EN 252
	5-1-2-2. Safety Distance Formulas according to ANSI B11.19	256
	5-1-3. Distance from Reflective Surfaces	257
	5-1-3-1. F3SG-SR (Type 2 ESPE)	257
	5-1-4. Mutual Interference Prevention	258
5-2	2. Dimensions	259
	5-2-1. F3SG-SR Series	259
	5-2-1-1. Mounted with Side-Mount Brackets (Intermed Brackets) (F39-LSGF)	diate 259
	•	kets 261
	5-2-1-3. Mounted with Adjustable Top/Bottom Brackets (FF3SN Adapter) (F39-LSGTB-SJ) and Side-Mount Brackets) (F39-LSGF)	
	5-2-1-4. Mounted with Adjustable Top/Bottom Brackets (FF3SN Adapter) (F39-LSGTB-SJ) and Adjustable Side-MBrackets (Intermediate Brackets) (F39-LSGA)	
	5-2-2. Bracket	267
	5-2-2-1. Side-Mount Bracket (Intermediate Bracket) (LSGF)	F39- 267
	5-2-2-2. Adjustable Side-Mount Bracket (Intermediate BrackF39-LSGA, sold separately)	cket) 267
	5-2-2-3. Adjustable Top/Bottom Bracket (F3SJ, F3SN Ada (F39-LSGTB-SJ, sold separately)	pter) 267
	5-2-2-4. Adjustable Top/Bottom Bracket (F3SG-RA Adapter) (F39-LSGTB-RE, sold separately)	V/RE 268
	5-2-2-5. Adjustable Top/Bottom Bracket (MS4800, FAdapter) (F39-LSGTB-MS, sold separately)	3SR 268

	5-2-3. Intelligent Tap	269
	5-2-4. Intelligent Tap Bracket	269
	5-2-5. Bluetooth® Communication Unit	271
	5-2-6. Spatter Protection Cover	272
5-3	. Mounting	273
	5-3-1. Mounting Method	273
	5-3-2. Number of Brackets Required	273
	5-3-3. Proper Mounting	274
	5-3-3-1. Proper Mounting Orientation	274
	5-3-4. Mounting Procedure	276
	5-3-4-1. Mounting with Side-Mount Brackets (Interm Brackets) (F39-LSGF)	ediate 276
	5-3-4-2. Mounting with Adjustable Side-Mount Bra (Intermediate Brackets) (F39-LSGA)	ackets 277
	5-3-4-3. Mounting with Adjustable Top/Bottom Brackets (F3SN Adapter) (F39-LSGTB-SJ) and Side-Mount Bra (Intermediate Brackets) (F39-LSGF)	
	5-3-4-4. Mounting with Adjustable Top/Bottom Brackets (F3SN Adapter) (F39-LSGTB-SJ) and Adjustable Side-Brackets (Intermediate Brackets) (F39-LSGA)	
	5-3-5. Beam Alignment Procedure	289
5-4	. Wiring	290
	5-4-1. Wiring Precautions	290
	5-4-2. Power Supply Unit	291
	5-4-3. Cable Connections	292
	5-4-3-1. Root-Straight Cable	292
	5-4-3-2. Root-Plug Cable for Extended	293
	5-4-3-3. Extended Socket-Straight Cable	294
	5-4-3-4. Extended Plug-Socket Cable	295
	5-4-3-5. Cascading Cable for Extended	297
	5-4-3-6. Side-by-side Cascading Cable	298
	5-4-3-7. F3SJ-B/A Conversion Cable	299
	5-4-3-8. F3SG-RE Conversion Cable	301
	5-4-3-9. MS48 Conversion Cable	302
	5-4-3-10. Extending Cable Length with Commercially Ava	ailable 303
	5-4-3-11. Reduced Wiring Connector System with Y-Joint Socket Connector	Plug/ 304
	5-4-3-12. Easy Wiring Connector System with Reset S	Switch 305

Wiring and Installation

5-4-4. Functional Earth Connection	307
5-5. Cascade Connection	308
5-5-1. Overview	308
5-5-2. Connection Procedure	310

5-1. Installation Considerations

5-1-1. Detection Zone and Approach

∕!\ WARNING

Install a protective structure so that the hazardous part of a machine can only be reached by passing through the sensor's detection zone. If access to the hazardous part by reaching over the detection zone of a vertically mounted F3SG-SR cannot be excluded, the height of the detection zone and the safety distance shall be determined in consideration of such a risk. Install the sensors so that part of the person is always present in the detection zone when working in a machine's hazardous zones. If a person is able to step into the hazardous zone of a machine and remain behind the F3SG-SR's detection zone, configure the system with Restart Interlock function. Failure to do so may result in serious injury due to unexpected startup.



Do not use this sensor for machines that cannot be stopped quickly by electrical control. For example, do not use it for a pressing machine that uses full-rotation clutch. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.



To use the F3SG-SR in PSDI mode (initiation of cyclic operation by a presence sensing device), you must configure an appropriate circuit between the F3SG-SR and the machine. For details about PSDI, refer to OSHA 1910.217, IEC 61496-1, and other relevant standards and regulations.



Install the reset switch in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone.



Install the pre-reset switch always in the hazardous zone and where it cannot be activated from outside the hazardous zone.



Do not use the product in environments where flammable or explosive gases are present. Doing so may result in explosion.



The F3SG-SR cannot protect a person from an object flying from the hazardous zone. Install protective cover(s) or fence(s).



Correct installation

The hazardous zone of a machine can be reached only by passing through the sensor's detection zone.



Incorrect installation

It is possible to reach the hazardous zone of a machine without passing through the sensor's detection zone.



While working, a person is inside the sensor's detection zone.



A person is between the sensor's detection zone and the hazardous zone of a machine.



Safety distance reflects the possible access to the hazardous zone by reaching over the detection zone.



It is possible to access the hazardous zone by reaching over the detection zone.



5-1-2. Safety Distance

The safety distance is the distance that must be set between the F3SG-SR and a machine's hazardous part to stop the hazardous part before a person or object reaches it. The safety distance varies according to the standards of each country and the individual specifications of each machine. Always refer to the relevant standards.

. ∴ WARNING

Make sure to install the F3SG-SR at the safety distance from the hazardous part of the machine. Otherwise, the machine may not stop before a person reaches the hazardous part, resulting in serious injury.





The response time of a machine is the time period from when the machine receives a stop signal to when the machine's hazardous part stops. Measure the response time on the actual system. Also, periodically check that the response time of the machine has not changed.

5-1-2-1. Safety Distance Formulas according to ISO 13855/EN ISO 13855

■ Detection Zone Orthogonal to Direction of Approach

 $S = K \times T + C \dots$ Formula (1)

- S: Safety distance
- K: Approach speed to the detection zone
- T: Total response time of the machine and the F3SG-SR
- C: Additional distance calculated by the detection capability (or object resolution) of the F3SG-SR

Calculation Example for Systems with a Detection Capability of 40 mm or Less

Use K = 2,000 mm/s and $C = 8 \times (d - 14 \text{ mm})$ in formula (1) for the calculation.

S = 2,000 mm/s x (Tm + Ts) + 8 x (d - 14 mm)

- S = Safety distance (mm)
- Tm = Machine's response time (s)
- Ts = Response time of the F3SG-SR from ON to OFF (s)
- d = Detection capability (or object resolution) of the F3SG-SR (mm)

[Calculation example]

When Tm = 0.05 s, Ts = 0.008 s, and d = 14 mm:

 $S=2,000 \text{ mm/s} \times (0.05 \text{ s} + 0.008 \text{ s}) + 8 \times (14 \text{ mm} - 14 \text{ mm})$


= 116 mm . . . Formula (2)

If the result < 100 mm, use S = 100 mm.

If the result exceeds 500 mm, use the following expression where K = 1,600 mm/s.

S=1,600 mm/s x (Tm + Ts) + 8 x (d - 14 mm) . . . Formula (3)

If the result of this formula (3) < 500 mm, use S = 500 mm.

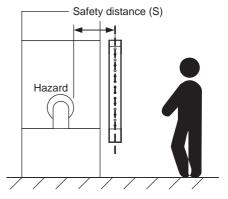

Calculation Example for Systems with Larger Detection Capability than 40mm

Use K = 1,600 mm/s and C = 850 mm in formula (1) for calculation.

 $S = 1,600 \text{ mm/s } x (Tm + Ts) + 850 \dots Formula (4)$

- S = Safety distance (mm)
- Tm = Machine's response time (s)
- Ts = Response time of the F3SG-SR from ON to OFF (s)

[Calculation example] When Tm = 0.05 s and Ts = 0.008 s:

 $S = 1,600 \text{mm/s} \times (0.05 \text{ s} + 0.008 \text{ s}) + 850 \text{ mm}$


= 942.8 mm

■ Possible Circumventing by Reaching Over the Detection Zone

If access to the hazardous zone by reaching over the detection zone of vertically mounted F3SG-SR cannot be excluded, the height and the safety distance, S, of the F3SG-SR shall be determined. S shall be determined by comparison of the calculated values in ■ Detection Zone Orthogonal to Direction of Approach. The greater value resulting from this comparison shall be applied.

 $S=(K \times T) + Cro \dots Formula (5)$

- S: Safety distance
- K: Approach speed to the detection zone
- T: Total response time of the machine and the F3SG-SR
- Cro: Approach distance based on the distance which personnel can move towards the hazardous zone of a machine by reaching over the detection zone. The distance is determined in the table below based on the height of the hazardous zone, a, and the height of the upper edge of the detection zone, b.

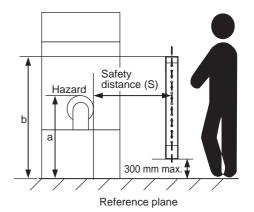

Note: Lower edge of the detection zone above 300 mm in relation to the reference plane does not offer sufficient protection against crawling below.

First, use K = 2,000 mm/s in formula (5) for the calculation. If the result of this calculation is less than 100 mm, use S = 100 mm.

If the result exceeds 500 mm, use K = 1,600 mm/s to recalculate it. If the result of the recalculation is less than 500 mm, use S = 500 mm.

Height of	Height of upper edge of detection zone, b											
hazardou	900	1000	1100	1200	1300	1400	1600	1800	2000	2200	2400	2600
s zone, a				Ac	ditional d	istance to	hazardou	is zone, C	ro			
2600	0	0	0	0	0	0	0	0	0	0	0	0
2500	400	400	350	300	300	300	300	300	250	150	100	0
2400	550	550	550	500	450	450	400	400	300	250	100	0
2200	800	750	750	700	650	650	600	550	400	250	0	0
2000	950	950	850	850	800	750	700	550	400	0	0	0
1800	1100	1100	950	950	850	800	750	550	0	0	0	0
1600	1150	1150	1100	1000	900	850	750	450	0	0	0	0
1400	1200	1200	1100	1000	900	850	650	0	0	0	0	0
1200	1200	1200	1100	1000	850	800	0	0	0	0	0	0
1000	1200	1150	1050	950	750	700	0	0	0	0	0	0
800	1150	1050	950	800	500	450	0	0	0	0	0	0
600	1050	950	750	550	0	0	0	0	0	0	0	0
400	900	700	0	0	0	0	0	0	0	0	0	0
200	600	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0	0

Note 1. Upper edge of the detection zone below 900 mm is not included since they do not offer sufficient protection against circumventing or stepping over.

Note 2. When determining the values of this table, it shall not be interpolated. If the known values a, b or Cro are between two values of this table, the greater safety distance shall be used.

[Calculation example]

- T: Tm + Ts (s)
- Tm: Machine's response time (s)
- Ts: Response time of the F3SG-SR from ON to OFF (s)
- a: Height of machine hazardous zone (mm)
- b: Height of upper edge of detection zone (mm)

When Tm = 0.05 s, Ts = 0.008 s, a = 1,400 mm, b = 1,500 m:

From the table above, Cro = 850 mm. Since b is between 1,400 mm and 1,600 mm, b = 1,400 mm which has the greater Cro value, shall be used.

 $S = 2,000 \text{ mm/s} \times (0.05 \text{ s} + 0.008 \text{ s}) + 850 \text{ mm}$

= 966 mm

Since 966 mm is greater than 500 mm, use K = 1,600 mm/s and recalculate it.

 $S = 1,600 \text{ m/s} \times (0.05 \text{ s} + 0.008 \text{ s}) + 850 \text{ mm}$

= 942.8 mm

Compare S = 942.8 mm with the calculation for Detection Zone Orthogonal to Direction of Approach, and choose the larger value as the safety distance.

For the system with a detection capability of 40 mm max., the safety distance S is 942.8 mm since this is larger than S = 116 mm calculated in the calculation example of n Detection Zone Orthogonal to Direction of Approach.

For the system with a detection capability larger than 40 mm, the safety distance S is 942.8 mm since this is the same value as S = 942.8 mm calculated in the calculation example of Detection Zone Orthogonal to Direction of Approach.



Refer to Detection Zone Orthogonal to Direction of Approach under 5-1-2-1. Safety Distance Formulas according

■ Detection Zone Parallel to Direction of Approach


Use K = 1,600 mm/s and C = (1200 - 0.4 x H) in formula (1) for calculation. Note that C must not be less than 850 mm.

 $S = 1,600 \text{ mm/s} \times (Tm + Ts) + 1200 - 0.4 \times H$

- S = Safety distance (mm)
- Tm = Machine's response time (s)
- Ts = Response time of the F3SG-SR from ON to OFF (s)
- H = Installation height (mm)

Note that H must satisfy:

 $1000 \ge H \ge 15 (d - 50 mm) \ge 0mm$

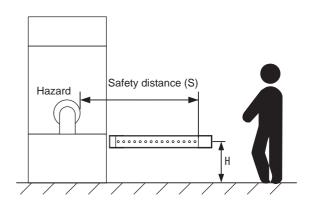

Also, you must include a hazardous condition under which a person may go through under a detection zone if H exceeds 300 mm (200 mm for other purpose than industrial use) into risk assessment.

[Calculation example]

When Tm = 0.05 s, Ts = 0.008 s, and d = 14 mm:

 $S = 1,600 \text{ mm/s} \times (0.05 \text{ s} + 0.008 \text{ s}) + 1200 - 0.4 \times 500 \text{ mm}$

 $= 1092.8 \, \text{mm}$

When a warning zone is configured as in the figure, you must calculate L, a distance from an end of casing to a detection zone, using a formula below:


L = (Total number of F3SG-SR beams - number of warning zone beams - 1) x P + 10

• P: Beam Gap (mm)

Refer to 1-6-1. List of Models and Response Times for total number of F3SG-SR beams.



/[国 Refer to 1-5. Ratings and Specifications for beam gap.

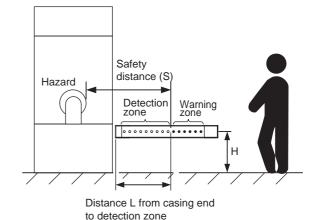

5-1-2-2. Safety Distance Formulas according to ANSI B11.19

If a person approaches the detection zone of the F3SG-SR orthogonally, calculate the safety distance as shown below.

$$S = K \times (Ts + Tc + Tr + Tbm) + Dpf$$

- · S: Safety distance
- K: Approach speed to the detection zone (the value recommended by OSHA standard is 1,600 mm/ s)

Approach speed K is not specified in the ANSI B.11.19 standard. To determine the value of K to apply, consider all factors, including the operator's physical ability.

- Ts = Machine's stopping time (s)
- Tr = Response time of the F3SG-SR from ON to OFF (s)
- Tc = Machine control circuit's maximum response time required to activate its brake (s)
- Tbm = Additional time (s)

If a machine has a brake monitor, "Tbm= Brake monitor setting time - (Ts + Tc)". If it has no brake monitor, we recommend using 20% or more of (Ts + Tc) as additional time.

Dpf = Additional distance

According to ANSI's formula, Dpf is calculated as shown below:

Dpf = 3.4 x (d - 7.0): Where d is the detection capability (or object resolution) of the F3SG-SR (unit: mm)

[Calculation example]

When K = 1,600 mm/s, Ts + Tc = 0.06 s, brake monitor setting time = 0.1 s,

Tr = 0.008 s, and d = 14 mm:

Tbm = 0.1 - 0.06 = 0.04 s

 $Dpf = 3.4 \times (14 - 7.0) = 23.8 \text{ mm}$

 $S = 1,600 \times (0.06 + 0.008 + 0.04) + 23.8 = 196.6 \text{ mm}$

5-1-3. Distance from Reflective Surfaces


∕ MARNING

Install the F3SG-SR so that it is not affected by reflective surfaces. Failure to do so may hinder detection, resulting in serious injury.




Install the sensor system at distance D or further from highly reflective surfaces such as metallic walls, floors, ceilings, or workpieces, as shown below.

F3SG-SR (Type 4 ESPE)

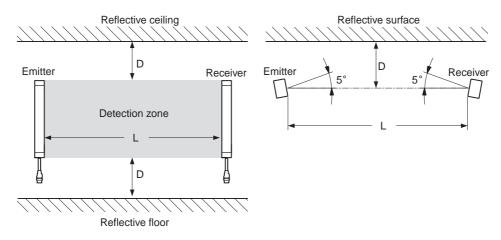

Distance between an emitter and a	Allowable installation distance	
receiver (operating range L)	D	
0.3 to less than 3 m	0.13 m	
3 m or more	L/2 x tan5 ° = L x 0.044 m	

5-1-3-1. F3SG-SR (Type 2 ESPE)

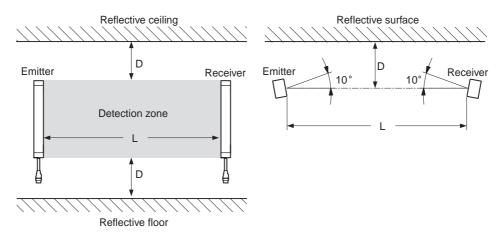

Distance between an emitter and a	Allowable installation distance		
receiver (operating range L)	D		
0.3 to less than 3 m	0.26 m		
3 m or more	L/2 x tan10 ° = L x 0.089 m		

5-1-4. Mutual Interference Prevention

! WARNING

Do not use the F3SG-SR with mirrors in a retro-reflective configuration. Doing so may hinder detection. It is possible to use mirrors to alter the detection zone to a 90-degree angle.




When using more than one set of F3SG-SR's in adjacent areas, the emitter of one F3SG-SR may interfere with the receiver of the other, causing the safety functions to stop working properly. Install, configure and maintain them so that mutual interference does not occur.




When two or more F3SG-SR systems are mounted in close proximity to each other, precautions should be taken to avoid one system interfering with another, such as by beam alignment, back-to-back configuration, physical barrier, Scan Code Selection, Operating Range Selection or adjusting the distances from adjacent safety light curtains.


■ Example

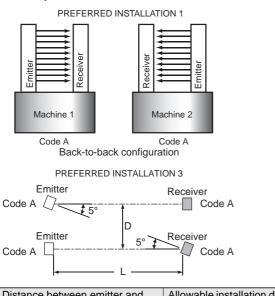

↓ L	→
Distance between emitter and	Allowable installation distance
receiver (operating range L)	D
For 0.2 to 3m	0.26m
For 3m or more	L x tan5 ° = L x 0.088 (m)

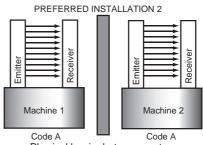


Physical barrier between systems

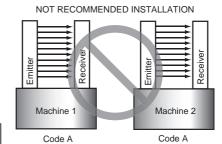

In the Wired Synchronization, mutual interference is prevented in up to 3 sets, using interference light avoidance algorithm.

In the Optical Synchronization, the scan code feature allows for placement of up to 2 sets of the F3SG-SR in close proximity and in line with each other. The distinctive coding of the beams provide for unique operation of a system while in view of another system with a different scan code. Two unique codes are available.

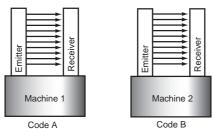

Scan code setting when two or more systems are mounted

The emitter and receiver units must be set to the same scan code for the receiver to enter the MACHINE RUN state. The scan code is selectable by the End Caps on the emitter and receiver units.


Refer to Scan Code Selection under 2-3-1-1. Optical Synchronization for more information on the scan code feature.

5-2. Dimensions

5-2-1. F3SG-SR Series

5-2-1-1. Mounted with Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)

■ Backside Mounting

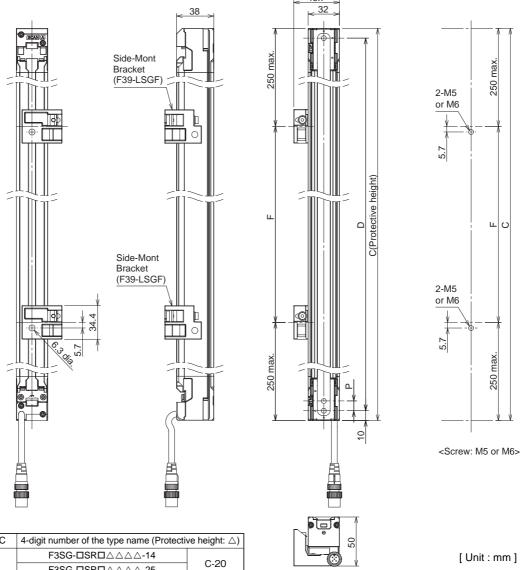

Dimension C	4-digit number of the type name (Protecti	ve height: △)	
	F3SG-□SR□△△△△-14	0.00	
Dimension D	F3SG-□SR□△△△△-25	C-20	
Dimension D	F3SG-□SR□△△△△-45	0.40	
	F3SG-□SR□△△△△-85	C-40	
	F3SG-□SR□△△△△-14	10	
Dimension P	F3SG-□SR□△△△△-25	20	
Difficusion F	F3SG-□SR□△△△△-45	40	
	F3SG-□SR□△△△△-85	80	

Protective height (Dimension C)	Number of Side-Mount Bracket *	Dimension F
0160 to 1440	2	1000 mm max.
1520 to 2480	3	1000 mm max.


^{*} The number of brackets required to mount either one of emitter and receiver. The side-mount brackets (intermediate brackets) are included with the light curtain.



5-3-4-1. Mounting with Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)

- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
 - When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.
- $\ensuremath{^{\text{CHECK!}}}$ Beam alignment cannot be performed with Side-Mount Brackets.

■ Side Mounting

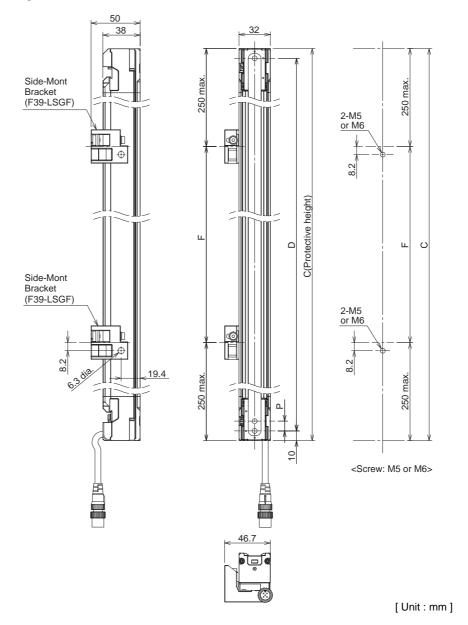

Dimension C	Dimension C 4-digit number of the type name (Protecti		
	F3SG-□SR□△△△△-14	0.00	
Dimension D	F3SG-□SR□△△△△-25	- C-20	
Dimension D	F3SG-□SR□△△△△-45	0.40	
	F3SG-□SR□△△△△-85	C-40	
Dimension P	F3SG-□SR□△△△△-14	10	
	F3SG-□SR□△△△△-25	20	
Dimension	F3SG-□SR□△△△-45	40	
	F3SG-□SR□△△△△-85	80	

Protective height (Dimension C)	Number of Side-Mount Bracket *	Dimension F
0160 to 1440	2	1000 mm max.
1520 to 2480	3	1000 mm max.

^{*} The number of brackets required to mount either one of emitter and receiver. The side-mount brackets (intermediate brackets) are included with the light curtain.



5-3-4-1. Mounting with Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)


- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.

- When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.

CHECK! - Beam alignment cannot be performed with Side-Mount Brackets.

5-2-1-2. Mounted with Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)

■ Backside Mounting

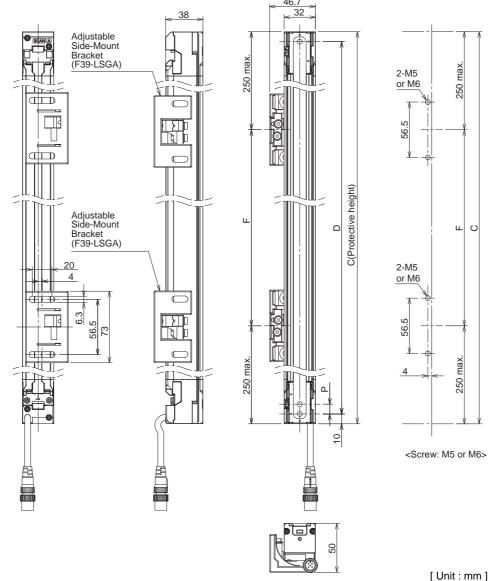

Dimension C	4-digit number of the type name (Protective height: \triangle)		
	F3SG-□SR□△△△△-14	0.00	
Dimension D	F3SG-□SR□△△△△-25	C-20	
Dimension D	F3SG-□SR□△△△△-45	0.40	
	F3SG-□SR□△△△-85	C-40	
Dimension P	F3SG-□SR□△△△△-14	10	
	F3SG-□SR□△△△△-25	20	
	F3SG-□SR□△△△-45	40	
	F3SG-□SR□△△△△-85	80	

Protective height (Dimension C)	Number of Adjustable Side-Mount Bracket *	Dimension F
0160 to 0280	1	1000 mm max.
0320 to 1440	2	1000 mm max.
1520 to 2480	3	1000 mm max.


^{*}The number of brackets required to mount either one of emitter and receiver.



5-3-4-2. Mounting with Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)

- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
 - When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.
- CHECK! The Adjustable Side-Mount Bracket allows beam alignment after fixing the bracket to a wall surface. The angle adjustment range of the Adjustable Side-Mount Brackets is ±15°.

■ Side Mounting

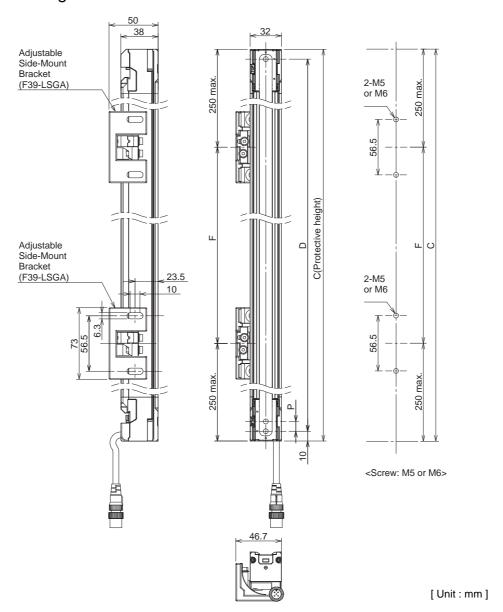

Dimension C	4-digit number of the type name (Protective height: \triangle)		
	F3SG-□SR□△△△△-14	0.00	
Dimension D	F3SG-□SR□△△△△-25	C-20	
Dimension D	F3SG-□SR□△△△△-45	C-40	
	F3SG-□SR□△△△△-85		
Dimension P	F3SG-□SR□△△△△-14	10	
	F3SG-□SR□△△△△-25	20	
	F3SG-□SR□△△△△-45	40	
	F3SG-□SR□△△△△-85	80	

Protective height (Dimension C)	Number of Adjustable Side-Mount Bracket *	Dimension F
0160 to 0280	1	1000 mm max.
0320 to 1440	2	1000 mm max.
1520 to 2480	3	1000 mm max.

^{*}The number of brackets required to mount either one of emitter and receiver.




5-3-4-2. Mounting with Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)



- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
- When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.
- CHECK! The Adjustable Side-Mount Bracket allows beam alignment after fixing the bracket to a wall surface. The angle adjustment range of the Adjustable Side-Mount Brackets is ±15°.

5-2-1-3. Mounted with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)

■ Backside Mounting

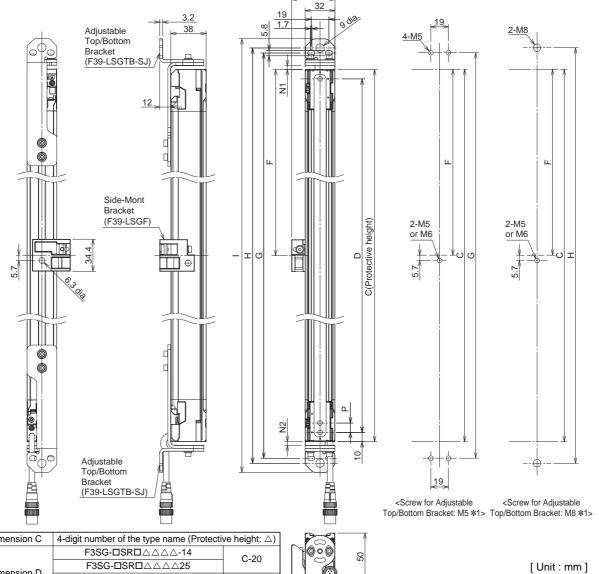

Dimension C	4-digit number of the type name (Protective height: △)		
	F3SG-□SR□△△△△-14 C-20		
Dimension D	F3SG-□SR□△△△△25		
Dimension	F3SG-□SR□△△△△-45	C-40	
	F3SG-□SR□△△△△-85	0-40	
Dimension G	C+27.2+N1+N2		
Dimension H	C+38+N1+N2		
Dimension I	C+58+N1+N2		
Dimension N1	0 to 30 *2		
Dimension N2	0 to 30 *2		
	F3SG-□SR□△△△-14		
Dimension P	F3SG-□SR□△△△-25 20		
	F3SG-□SR□△△△-45	40	
	F3SG-□SR□△△△△-85	80	

Protective height (Dimension C)	Number of Adjustable Top/Bottom Bracket *3	Number of Intermediate Bracket *4	Dimension F
0160 to 0840	2	0	-
0880 to1680	2	1	1000 mm max.
1760 to 2480	2	2	1000 mm max.

(0

5-3-4-3. Mounting with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)

^{*1.} Side-Mount Bracket: M5 or M6

^{*2.} For the model of protective height of 0160, the numbers corresponding to dimensions N1 and N2 are 20 to 30.

^{*3.} The number of brackets required to mount either one of emitter and receiver.


^{*4.} The side-mount brackets (intermediate brackets) are included with the light curtain.

⁻ Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.

⁻ When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.

CHECK! - Beam alignment cannot be performed in combination with Adjustable Top/Bottom Brackets and Side-Mount Brackets with the Brackets fixed to the wall surface.

■ Side Mounting

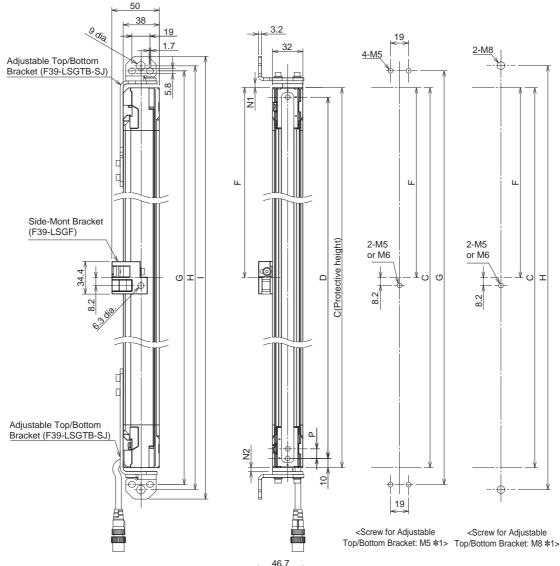

Dimension C	4-digit number of the type name (Protective height: \triangle)		
	F3SG-□SR□△△△-14 C-20		
Dimension D	F3SG-□SR□△△△△25		
Dimension	F3SG-□SR□△△△-45	C-40	
	F3SG-□SR□△△△-85	C-40	
Dimension G	C+27.2+N1+N2		
Dimension H	C+38+N1+N2		
Dimension I	C+58+N1+N2		
Dimension N1	0 to 30 *2		
Dimension N2	0 to 30 *2		
	F3SG-□SR□△△△-14		
Dimension P	F3SG-□SR□△△△-25 2		
	F3SG-□SR□△△△-45 4		
	F3SG-□SR□△△△-85	80	

Protective height (Dimension C)	Number of Adjustable Top/Bottom Bracket *3	Number of Intermediate Bracket *4	Dimension F
0160 to 0840	2	0	-
0880 to1680	2	1	1000 mm max.
1760 to 2480	2	2	1000 mm max.

[Unit : mm]

^{*4.} The side-mount brackets (intermediate brackets) are included with the light curtain.



5-3-4-3. Mounting with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)

- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance. When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.

CHECK! - Beam alignment cannot be performed in combination with Adjustable Top/Bottom Brackets and Side-Mount Brackets with the Brackets fixed to the wall surface.


^{*1.} Side-Mount Bracket: M5 or M6

^{*2.} For the model of protective height of 0160, the numbers corresponding to dimensions N1 and N2 are 20 to 30.

^{*3.} The number of brackets required to mount either one of emitter and receiver.

5-2-1-4. Mounted with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)

■ Backside Mounting

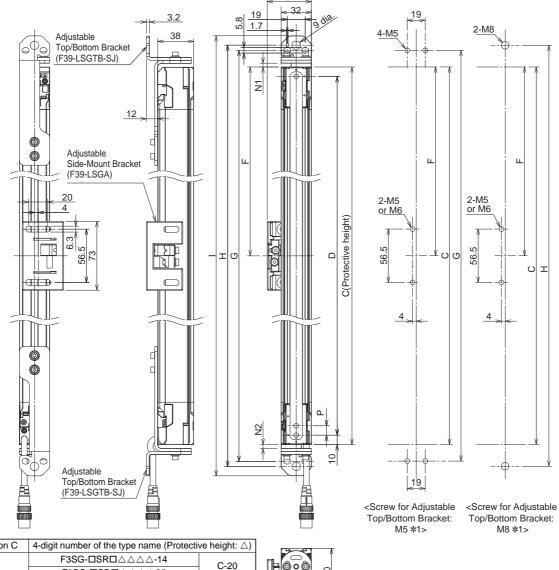


Dimension C	4-digit number of the type name (Protective height: \triangle)		
	F3SG-□SR□△△△△-14 C-2		
Dimension D	F3SG-□SR□△△△△25		
Dilliension	F3SG-□SR□△△△-45		
	F3SG-□SR□△△△△-85	C-40	
Dimension G	C+27.2+N1+N2		
Dimension H	C+38+N1+N2		
Dimension I	C+58+N1+N2		
Dimension N1	0 to 30 *2		
Dimension N2	0 to 30 *2		
	F3SG-□SR□△△△△-14	10	
Dimension P	F3SG-□SR□△△△-25		
Difficusion	F3SG-□SR□△△△-45	40	
	F3SG-□SR□△△△△-85	80	

Protective height (Dimension C)	Number of Adjustable Top/Bottom Bracket *3	Number of Intermediate Bracket *3	Dimension F
0160 to 0840	2	0	-
0880 to1680	2	1	1000 mm max.
1760 to 2480	2	2	1000 mm max.

(n

^{*3.} The number of brackets required to mount either one of emitter and receiver.

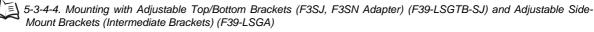

Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.


[Unit : mm]

^{*1.} Adjustable Side-Mount Bracket: M5 or M6

^{*2.} For the model of protective height of 0160, the numbers corresponding to dimensions N1 and N2 are 20 to 30.

CHECK! - The Adjustable Top/Bottom Bracket and Adjustable Side-Mount Bracket allow beam alignment after fixing the bracket to a wall surface. The angle adjustment range of the Adjustable Top/Bottom Brackets is ±22.5°. The angle adjustment range of the Adjustable Side-Mount Brackets is ±15°.

■ Side Mounting

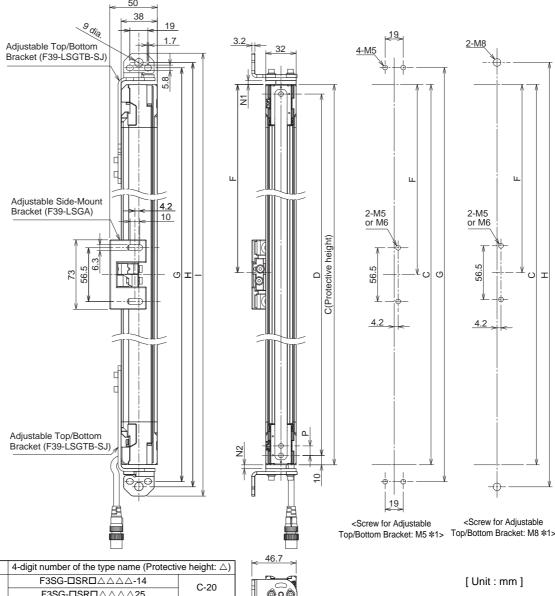

Dimension C	4-digit number of the type name (Protective height: \triangle)		
	F3SG-□SR□△△△△-14		
Dimension D	F3SG-□SR□△△△△25	C-20	
Difficusion D	F3SG-□SR□△△△△-45	C-40	
	F3SG-□SR□△△△△-85	C-40	
Dimension G	C+27.2+N1+N2		
Dimension H	C+38+N1+N2		
Dimension I	C+58+N1+N2		
Dimension N1	0 to 30 *2		
Dimension N2	0 to 30 *2		
	F3SG-□SR□△△△-14	10	
Dimension P	F3SG-□SR□△△△-25	20	
	F3SG-□SR□△△△-45		
	F3SG-□SR□△△△-85	80	

Number of Adjustable Top/Bottom Bracket *3	Number of Intermediate Bracket *3	Dimension F
2	0	-
2	1	1000 mm max.
2	2	1000 mm max.
	Adjustable Top/Bottom	Adjustable Top/Bottom Number of Intermediate

^{*3.} The number of brackets required to mount either one of emitter and receiver.



5-3-4-4. Mounting with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)




- Use the brackets of specified quantities and locations according to the dimensions. The other brackets than described above may not meet the specified ratings and performance.
- When you use the sensor in a situation where the sensor is under a load, increase the number of the brackets used.
- CHECK! The Adjustable Top/Bottom Bracket and Adjustable Side-Mount Bracket allow beam alignment after fixing the bracket to a wall surface. The angle adjustment range of the Adjustable Top/Bottom Brackets is ±22.5°. The angle adjustment range of the Adjustable Side-Mount Brackets is ±15°.

^{*1.} Adjustable Side-Mount Bracket: M5 or M6


^{*2.} For the model of protective height of 0160, the numbers corresponding to dimensions N1 and N2 are 20 to 30.

5-2-2. Bracket


5-2-2-1. Side-Mount Bracket (Intermediate Bracket) (F39-LSGF)

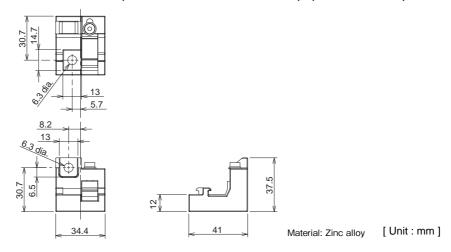


5-2-2. Adjustable Side-Mount Bracket (Intermediate Bracket) (F39-LSGA, sold separately)

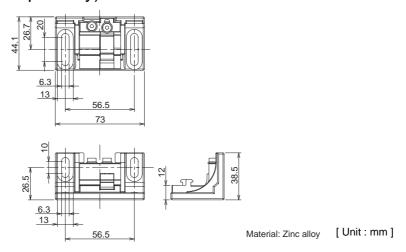


5-2-2-3. Adjustable Top/Bottom Bracket (F3SJ, F3SN Adapter) (F39-LSGTB-SJ, sold separately)

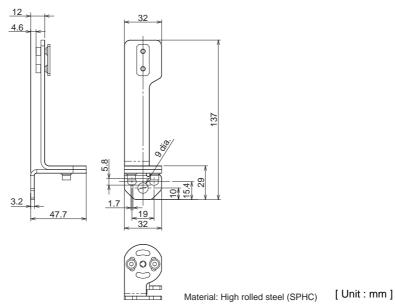

5-2-2-4. Adjustable Top/Bottom Bracket (F3SG-RA/RE Adapter) (F39-LSGTB-RE, sold separately)

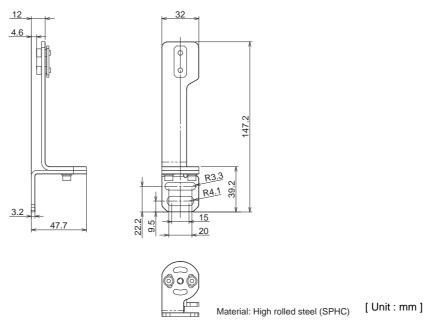


5-2-2-5. Adjustable Top/Bottom Bracket (MS4800, F3SR Adapter) (F39-LSGTB-MS, sold separately)

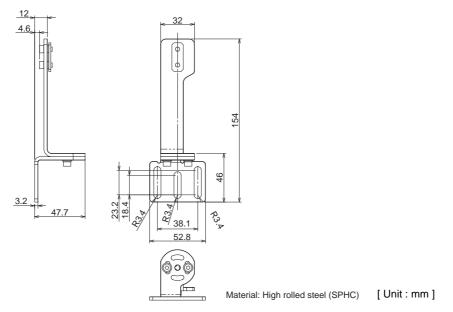


5-2-3. Intelligent Tap

■ Intelligent Tap (F39-SGIT-IL3, sold separately)



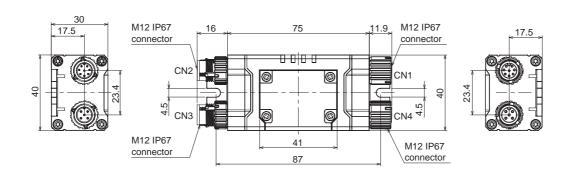


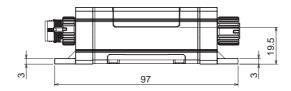


Material: PBT resin (Body parts)
[Unit: mm]

5-2-4. Intelligent Tap Bracket


■ Intelligent Tap Bracket (F39- LITF1, sold separately)

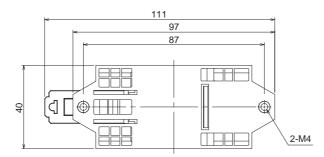

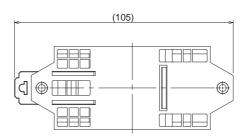

Mounting dimensions to DIN track



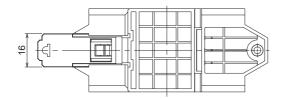


Material: PBT resin (Body parts)
[Unit: mm]

Chapter 5 Dimensions

Assembly Dimensions (Intelligent Tap/ Intelligent Tap Bracket)




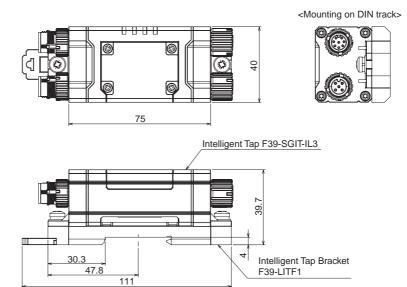


Material: PBT resin (Body parts) [Unit: mm]

5-2-5. Bluetooth® Communication Unit

■ Bluetooth® Communication Unit (F39-SGBT, sold separately)

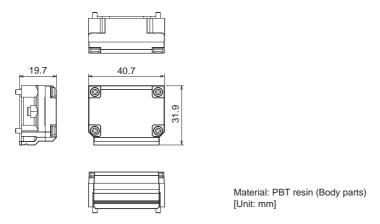


 Assembly Dimensions (Intelligent Tap/Bluetooth® Communication Unit/Intelligent Tap Bracket, sold separately)

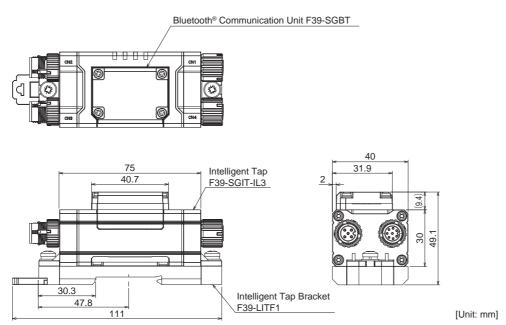



5-2-6. Spatter Protection Cover

■ Spatter Protection Cover (F39-HSG□□□□, sold separately)

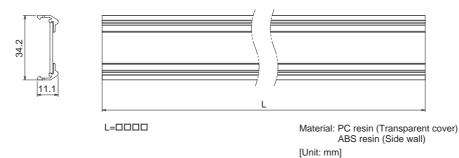

Assembly Dimensions

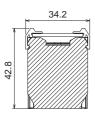

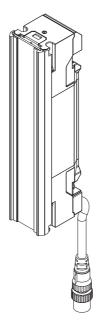

[Unit: mm]

5-3. Mounting

5-3-1. Mounting Method

You can mount the F3SG-SR in the following four ways.

- · Mounting with Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)
- Mounting with Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)
- Mounting with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)
- Mounting with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)



5-3-2. Number of Brackets Required

The numbers of brackets required according to the protective heights of the sensor are as follows:

Mounting with Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)

Protective height	Number of Side-Mount Brackets *
0160 to 1440	2
1520 to 2480	3

^{*} The number of brackets required to mount either one of emitter and receiver. The Side-Mount Brackets (Intermediate Brackets) are included with the sensor.

Mounting with Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)

Protective height	Number of Adjustable Side-Mount Brackets *
0160 to 0280	1
0320 to 1440	2
1520 to 2480	3

^{*} The number of brackets required to mount either one of emitter and receiver.

 Mounting with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)

Protective height	Number of Adjustable Top/Bottom Brackets *1	Number of Side-Mount Brackets *1*2
0160 to 0840	2	0
0880 to 1680	2	1
1760 to 2480	2	2


^{*1.} The number of brackets required to mount either one of emitter and receiver.

 Mounting with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)

	Protective height	Number of Adjustable Top/Bottom Brackets *	Number of Adjustable Side-Mount Brackets *
	0160 to 0840	2	0
Ī	0880 to 1680	2	1
İ	1760 to 2480	2	2

^{*} The number of brackets required to mount either one of emitter and receiver.

CHECK!

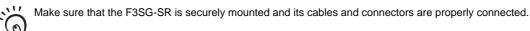


^{*2.} The Side-Mount Brackets (Intermediate Brackets) are included with the sensor.

5-3-3. Proper Mounting


5-3-3-1. Proper Mounting Orientation

Mount the emitter and receiver so that the detection surfaces of the emitter and receiver face in parallel to each other as shown below. The detection surfaces of the emitter and receiver not in parallel to each other or misaligned may fail to operate properly.


Proper orientation:

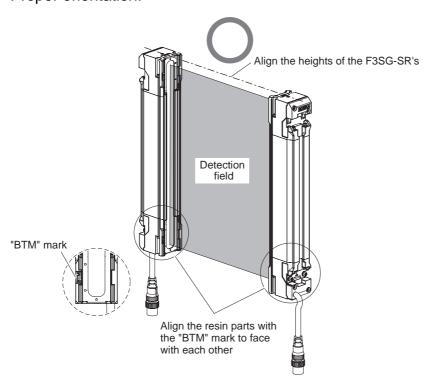

Wrong orientation:

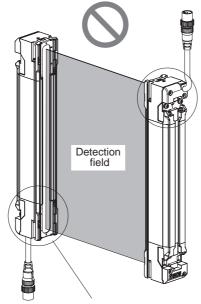


The positions of the "BTM" marks are misaligned.

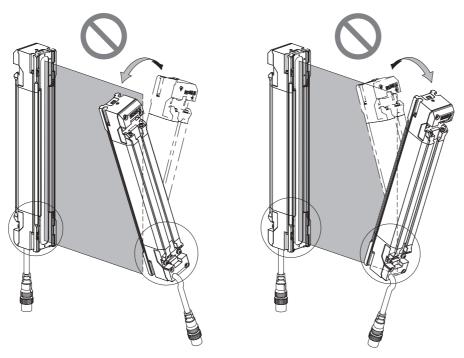

The detection surfaces of the emitter and receiver are not in parallel to each other.

Mount the F3SG-SR on a flat surface. Mounting it on an inclined surface cause the orientation of the beams to tilt with respect to the floor, resulting in misalignment of the beams of the emitter and receiver. Mount the emitter and receiver on a level surface by checking the lean by a level.

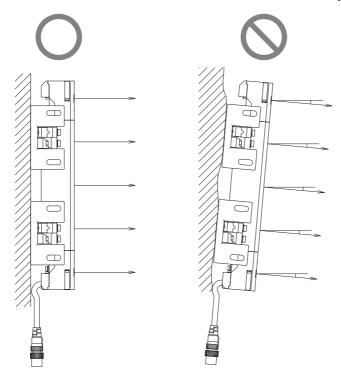


Mounted on a level, flat surface.

Mounted on an inclined, uneven surface.

5-3-4. Mounting Procedure

5-3-4-1. Mounting with Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)


1. Securely tighten the screws to fix the Side-Mount Bracket to the mounting position of the wall surface. When using more than one Side-Mount Brackets, align them in the same line using the sides of the brackets that do not face the wall, before attaching the brackets to the sensor. (Fig. 1)

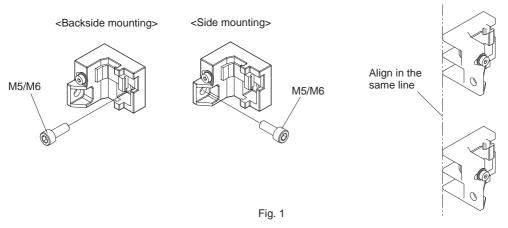




Screws to mount the brackets to the wall are not included.

2. Fully loosen the Mounting Screws (hexagon socket head cap screw (M4×22)). Fit the Brackets (1) and (2) to the backside of the sensor housing so that the groove of the backside of the housing receives the hooks of the Brackets (1) and (2). (Fig. 2)

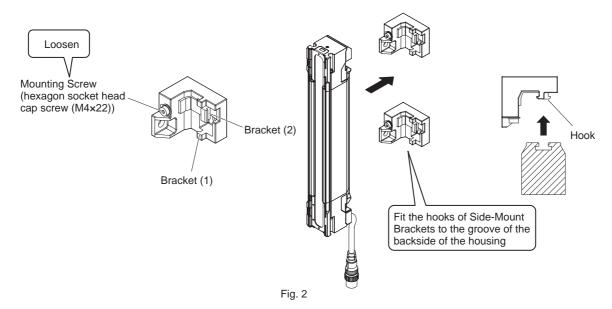

3. Securely tighten the Mounting Screws to fix the Side-Mount Bracket to the sensor housing. The recommended torque to tighten the Mounting Screws is 3.0 N•m. Then loosen the Alignment Screws (hexagon socket head cap screws (M4×22)). (Fig. 3)

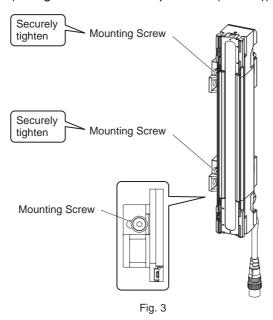




Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.

5-3-4-2. Mounting with Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)


1. Securely tighten the screws to fix the Adjustable Side-Mount Bracket to the mounting position of the wall surface. When using more than one Adjustable Side-Mount Brackets, align them in the same line using the sides of the brackets that do not face the wall, before attaching the bracket to the sensor. (Fig. 1)

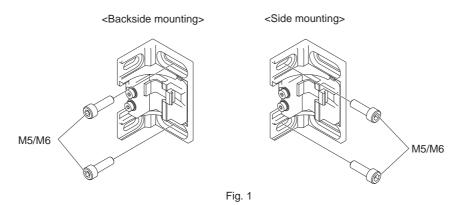




Screws to mount the brackets to the wall are not included.

2. Fully loosen the Mounting Screws (hexagon socket head cap screw (M4x22)). Fit the Brackets (1) and (2) to the backside of the sensor housing so that the groove of the backside of the housing receives the hooks of the Brackets (1) and (2). (Fig. 2)

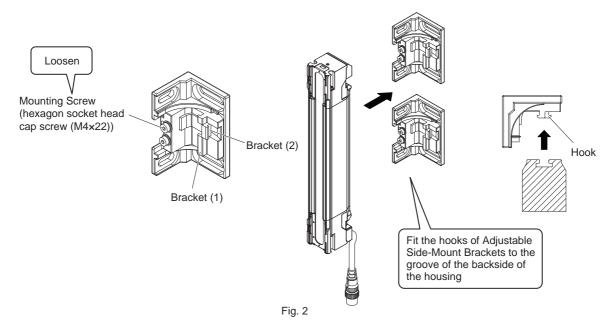


3. Securely tighten the Mounting Screws to fix the Adjustable Side-Mount Bracket to the sensor housing. The recommended torque to tighten the Mounting Screws is 3.0 N•m. Then loosen the Alignment Screws (hexagon socket head cap screws (M4×22)). (Fig. 3)

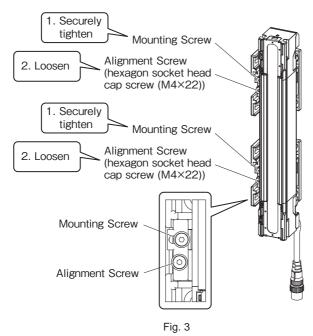




Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.


4. Power the emitter and receiver on to perform beam alignment. For more information on the beam alignment procedure, refer to 5-3-5. Beam Alignment Procedure.

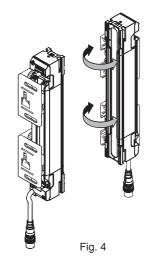


<EMITTER>

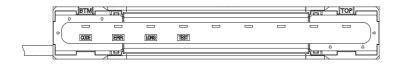

Marking on the side (Emitter)

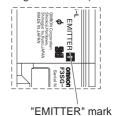

<RECEIVER>

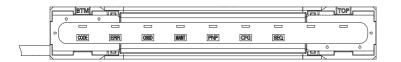

Marking on the side (Receiver)



Fig. 5



- The angle adjustment range of the Adjustable Side-Mount Brackets is ±15°.
- The ABI indicators are for the F3SG-SRA only. The TOP and BTM indicators are for the F3SG-SRB only.
- The ABI indicators of both emitter and receiver are illuminated in the case the Wired Synchronization is enabled. Only the ABI indicators of the receiver are illuminated in the case the Optical Synchronization is enabled.
- It is recommended to use the Light Level Monitoring with the SD Manager 3 for beam alignment. Refer to Chapter 4 Setting with SD Manager 3 for more information.
- The ABI indicators (green) will not be illuminated if the blanking function is used and there is a blocking object in the detection zone. Perform beam alignment according to the step No. 4 after setting the blanking function.

5. Securely tighten the Alignment Screws to fix the Adjustable Side-Mount Bracket to the sensor housing. The recommended torque to tighten the Alignment Screws is 3.0 Nem. (Fig. 6)

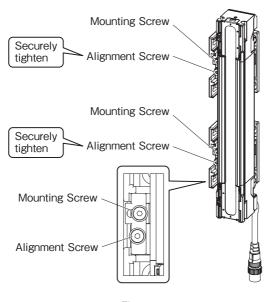


Fig. 6




Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.


5-3-4-3. Mounting with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Side-Mount Brackets (Intermediate Brackets) (F39-LSGF)

The mounting method of the Adjustable Top/Bottom Bracket (F3SG-RA/RE Adapter) (F39-LSGTB-RE) or the Adjustable Top/Bottom Bracket (MS4800, F3SR Adapter) (F39-LSGTB-MS) are the same as that of the Adjustable Top/Bottom Bracket (F3SJ, F3SN Adapter) (F39-LSGTBSJ).

1 Loosen the Alignment Screws (hexagon socket head cap screw (M4x7)) of the Top/Bottom Bracket (3) and change the angle of the Top/Bottom Bracket (3) according to its mounting direction. Then loosen the Mounting Screws (low head hexagon socket head cap screw (M4x7)) of Top/Bottom Bracket (2). (Fig. 1)

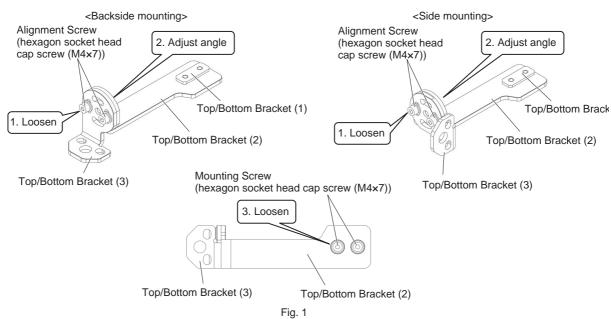

2. Slide the Top/Bottom Bracket (1) in the grooves of the sensor housing. Adjust the Top/Bottom Bracket to the mounting position of the wall surface. Make sure to contact the whole body of the Top/Bottom Bracket (1) with the groove of the yellow area of the housing. Securely tighten the Mounting Screws to fix the Top/Bottom Bracket to the housing of the sensor. The recommended torque to tighten the Mounting Screws of the Top/Bottom Bracket is 3.0 N•m. (Fig. 2)

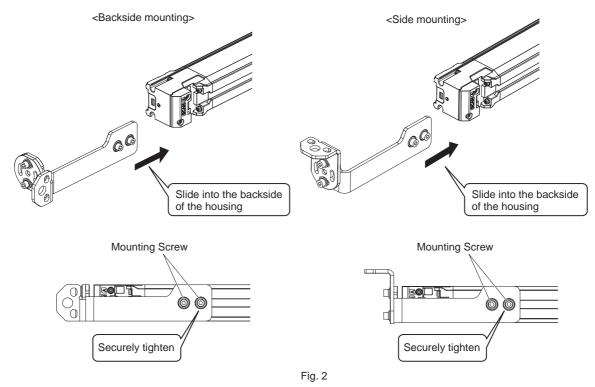


Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.

CHECK!


CHECK!

3. Securely tighten screws to fix the Side-Mount Bracket to the mounting position of the wall surface. When using more than one Side-Mount Brackets, align them in the same line using the sides of the brackets that do not face the wall, before attaching the brackets to the sensor. (Fig. 3)

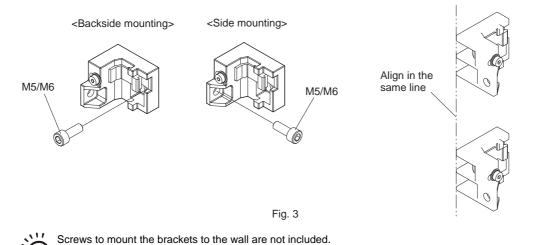


Ε

4. Fully loosen the Mounting Screw (hexagon socket head cap screw (M4×22)) of the Side-Mount Bracket. (Fig. 4) Then slide the hooks of the Brackets (1) and (2) in the groove of the backside of the sensor housing. (Fig. 5)

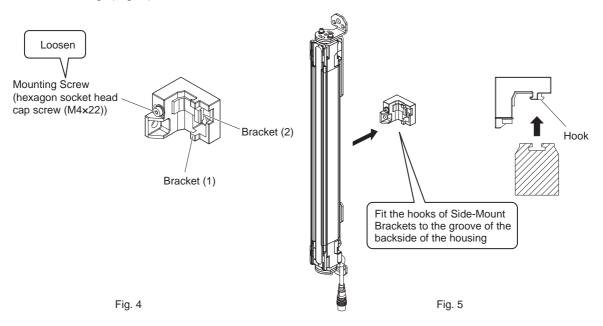


5. Securely tighten the Mounting Screw to fix the Side-Mount Bracket to the sensor housing. The recommended torque to tighten the Mounting Screw of the Side-Mount Bracket is 3.0 N•m. (Fig. 6)

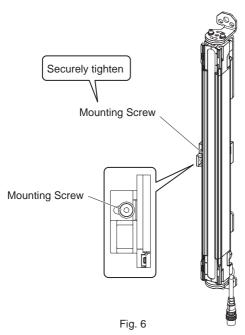

Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.

CHECK!


6. Securely tighten screws to fix the Top/Bottom Bracket to the mounting position of the wall surface. (Fig.7)

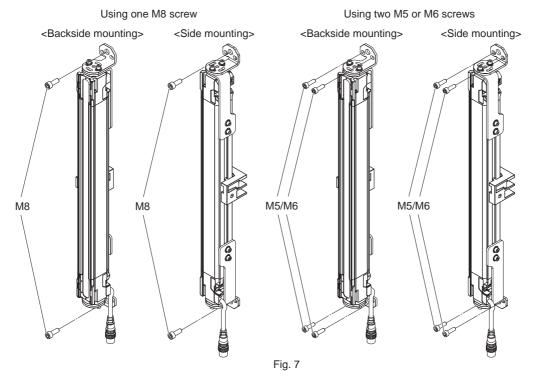

Screws to mount the brackets to the wall are not included.

CHECK!

7. Securely tighten the Alignment Screw of the Top/Bottom Bracket to fix the bracket to the sensor housing. The recommended torque to tighten the Alignment Screw is 3.0 N•m. (Fig. 8)

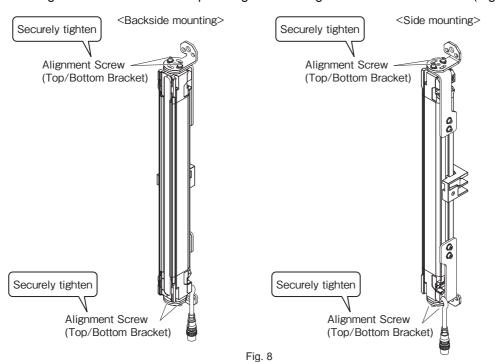

Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.

5-3-4-4. Mounting with Adjustable Top/Bottom Brackets (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) and Adjustable Side-Mount Brackets (Intermediate Brackets) (F39-LSGA)

The mounting method of the Adjustable Top/Bottom Bracket (F3SG-RA/RE Adapter) (F39-LSGTB-RE) or the Adjustable Top/Bottom Bracket (MS4800, F3SR Adapter) (F39-LSGTB-MS) are the same as that of the Adjustable Top/Bottom Bracket (F3SJ, F3SN Adapter) (F39-LSGTBSJ). CHECK!

1. Loosen the Alignment Screws (hexagon socket head cap screw (M4×7)) of the Top/Bottom Bracket (3) and change the angle of the Top/Bottom Bracket (3) according to its mounting direction. Then loosen the Mounting Screws (low head hexagon socket head cap screw (M4x7)) of Top/Bottom Bracket (2). (Fig. 1)


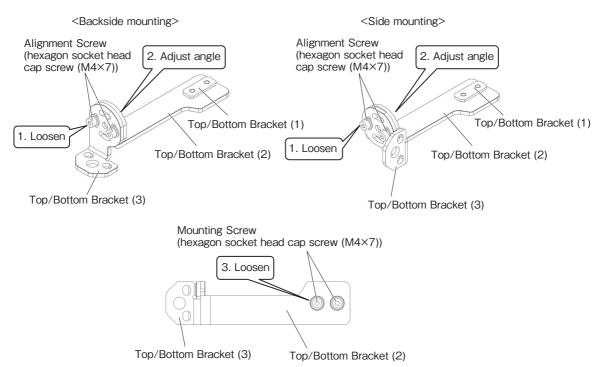



Fig. 1

2. Slide the Top/Bottom Bracket (1) in the grooves of the sensor housing. Adjust the Top/Bottom Bracket to the mounting position of the wall surface. Make sure to contact the whole body of the Top/Bottom Bracket (1) with the groove of the yellow area of the housing. Securely tighten the Mounting Screws to fix the Top/Bottom Bracket to the housing of the sensor. The recommended torque to tighten the Mounting Screws of the Top/Bottom Bracket is 3.0 N•m. (Fig. 2)

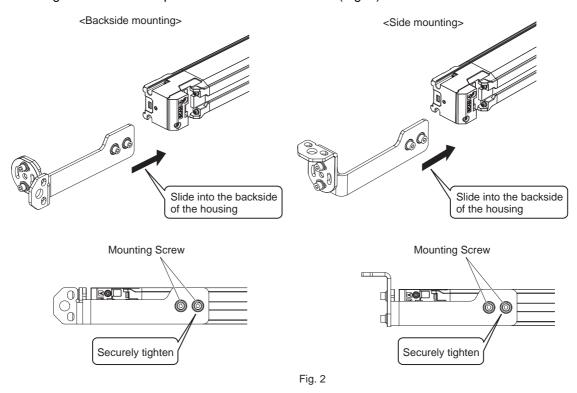

Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.

3. Securely tighten screws to fix the Adjustable Side-Mount Bracket to the mounting position of the wall surface. When using more than one Adjustable Side-Mount Brackets, align them in the same line using the sides of the brackets that do not face the wall, before attaching the brackets to the sensor. (Fig. 3)

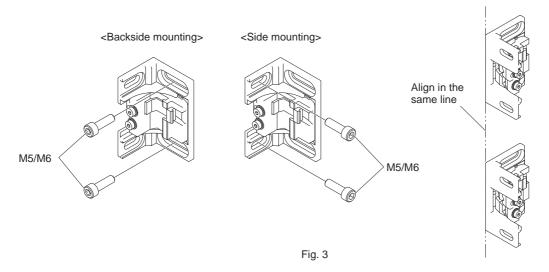


Screws to mount the brackets to the wall are not included.


CHECK!

CHECK!


4. Fully loosen the Mounting Screw (hexagon socket head cap screw (M4x22)) of the Adjustable Side-Mount Bracket. (Fig. 4) Then slide the hooks of the Brackets (1) and (2) in the groove of the backside of the sensor housing. (Fig. 5)

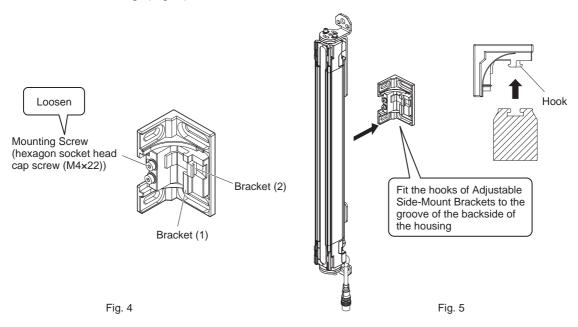

5. Securely tighten the Mounting Screw to fix the Adjustable Side-Mount Bracket to the sensor housing. The recommended torque to tighten the Mounting Screw of the Adjustable Side-Mount Bracket is 3.0 N•m. Then loosen the Alignment Screw (hexagon socket head cap screw (M4×22)) of the Adjustable Side-Mount Bracket. (Fig. 6)

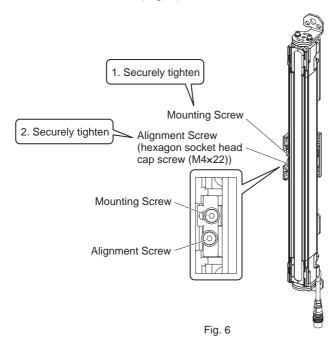

6. Securely tighten screws to fix the Top/Bottom Bracket to the mounting position of the wall surface. (Fig.7)

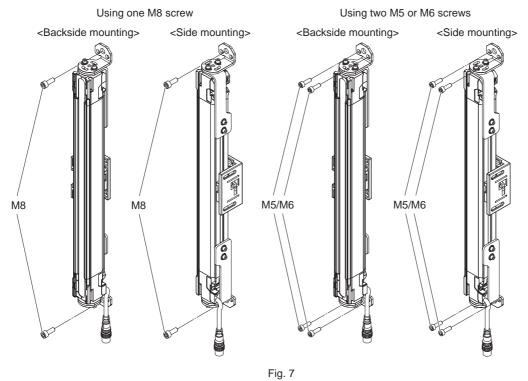


. .9.



Screws to mount the brackets to the wall are not included.

7. Power the emitter and receiver on to perform beam alignment. Move the emitter and receiver from side to side (Fig. 8) to check the state of the beams For more information on the beam alignment procedure, refer to 5-3-5. Beam Alignment Procedure.

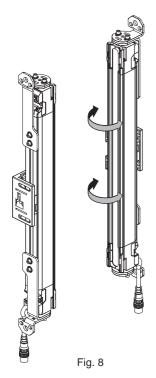

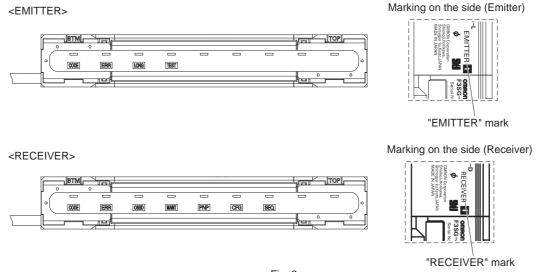


Fig. 9

- The angle adjustment range is ±22.5° when using the Top/Bottom Brackets only.
- The angle adjustment range is ±15° when using the Top/Bottom Brackets and Adjustable Side-Mount Bracket(s) together.
- CHECK! The ABI indicators are for the F3SG-SRA only. The TOP and BTM indicators are for the F3SG-SRB only.
 - The ABI indicators of both emitter and receiver are illuminated in the case the Wired Synchronization is enabled. Only the ABI indicators of the receiver are illuminated in the case the Optical Synchronization is enabled.
 - It is recommended to use the Light Level Monitoring with the SD Manager 3 for beam alignment. Refer to Chapter 4 Setting with SD Manager 3 for more information.
 - The ABI indicators (green) will not be illuminated if the blanking function is used and there is a blocking object in the detection zone. Perform beam alignment according to the step No. 7 after setting the blanking function.
- 8. Securely tighten the Alignment Screws of the Top/Bottom Bracket and Adjustable Side-Mount Bracket to fix the bracket to the sensor housing. The recommended torque to tighten the Alignment Screws is 3.0 N•m. (Fig. 10)

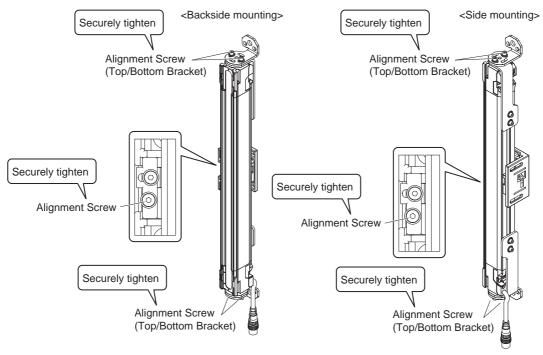


Fig. 10

Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.

CHECK!

5-3-5. Beam Alignment Procedure

The Adjustable Side-Mount Bracket (Intermediate Bracket) (F39-LSGA) and Adjustable Top/Bottom Bracket (F3SJ, F3SN Adapter) (F39-LSGTB-SJ) allow beam alignment after fixing the brackets to a wall surface. The Side-Mount CHECK! Bracket (Intermediate Bracket) (F39-LSGF) does not allow beam alignment.

- **1.** Verify the following points:
 - The optical surfaces of the emitter and receiver are clean.
 - There is no interrupting object in the detection zone of the F3SG-SR.
- **2.** Align the beams of the emitter and receiver:

Move the emitter and receiver from side to side to check the state of the beams with the ABI indicators or the TOP and BTM indicators. When the stable unblocked state is established, the TOP and BTM indicators turns blue and the ABI indicators change the color at every second from green -> orange -> green -> orange -> green, indicating that the beam alignment is complete.

Adjust the angle of the emitter and receiver of the F3SG-SR to bring the beams in the stable unblocked state.



1-4. LED Indicators on F3SG-SR



- The ABI indicators are for the F3SG-SRA only. The TOP and BTM indicators are for the F3SG-SRB only.
- The ABI indicators of the emitter are illuminated only in the case the Wired Synchronization is enabled and are off in $\begin{tabular}{c} \end{tabular}$ the case the Optical Synchronization is enabled.
 - Perform beam alignment to the primary sensor first, when using the F3SG-SR in a cascade connection.
 - It is recommended to use the Light Level Monitoring with the SD Manager 3 for beam alignment. Refer to Chapter 4 Setting with SD Manager 3 for more information.
 - The ABI indicators (green) will not be illuminated if the blanking function is used and there is a blocking object in the detection zone. Perform beam alignment again to illuminate the ABI indicators (green) after setting the blanking function.
- 3. When the Start Interlock is disabled, the safety outputs are turned to the ON state simultaneously with the establishment of the stable unblocked state. Confirm that the ABI indicators are illuminated in green and the TOP and BTM indicators are illuminated in blue when the safety outputs are in the ON state.

When the Start Interlock is enabled, the ABI or TOP/BTM indicators are turned off simultaneously with the establishment of the stable unblocked state. Confirm that the ABI indicators are illuminated in green and TOP and BTM indicators are illuminated in blue when the Start Interlock is released (and the safety outputs are in the ON state) by turning the RESET input in the ON state.

4. Make sure to keep the beams aligned and tightly fasten all screws. The table below shows the recommended tightening torques for the included screws.

Mounting bracket type	Model	Nominal diameter x length of screw (mm)	Tightening torque (recommended)
Side-Mount Bracket (Intermediate Brackets)	F39-LSGF	M4×22	3.0 N•m
Adjustable Side-Mount Bracket (Intermediate Bracket)	F39-LSGA	M4×22	3.0 N•m
Adjustable Top/Bottom Bracket (F3SJ, F3SN Adapter)	F39-LSGTB-SJ	M4×7	3.0 N•m
Adjustable Top/Bottom Bracket (F3SG-RA/RE Adapter)	F39-LSGTB-RE	M4×7	3.0 N•m
Adjustable Top/Bottom Bracket (MS4800, F3SR Adapter)	F39-LSGTB-MS	M4×7	3.0 N•m



- If any of the ABI indicators (green) or either TOP or BTM indicator is not illuminated, check if the emitter and receiver are mounted parallel and at the same height.
- Tightening screws with a torque that considerably exceeds the recommended torque may cause failure.

5-4. Wiring

5-4-1. Wiring Precautions

∕!\ WARNING

Double or reinforced insulation from hazardous voltage must be applied to all input and output lines. Failure to do so may result in electric shock.



When using the PNP output, connect the load between the output and 0 V line. When using the NPN output, connect the load between the output and +24 VDC line. Connecting the load between the output and a different power supply line from the above line will result in a dangerous condition because the operation mode of safety outputs are reversed to "Dark-ON".



When using the PNP output, do not ground +24 VDC line. When using the NPN output, do not ground 0 V line. Otherwise, a ground fault may turn the safety outputs ON, resulting in a failure of stopping the machine.



Configure the system by using the optimal number of safety outputs that satisfy the requirements of the necessary safety category.




Do not connect each line of the F3SG-SR to a DC power supply of higher than 24 VDC+20%. Also, do not connect it to an AC power supply. Failure to do so may result in electric shock.



Make sure to perform wiring while the power supply is OFF.



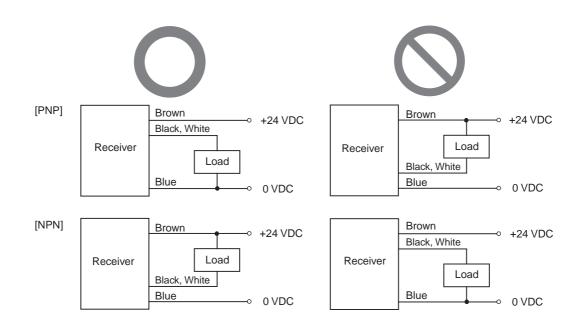

5-4-2. Power Supply Unit

. MARNING

For the F3SG-SR to comply with IEC 61496-1 and UL 508, the DC power supply unit must satisfy all of the following conditions:



- The DC power supply operates within the rated power voltage (24 VDC ± 20%).
- The DC power supply has tolerance against the total rated current of devices if it is connected to multiple devices.
- The DC power supply complies with EMC directives (industrial environment).
- Double or reinforced insulation is applied between the primary and secondary circuits.
- The DC power supply has an automatic recovery type of overcurrent protection characteristics.
- Output holding time is 20 ms or longer.
- The DC power supply satisfies output characteristic requirements for class 2 circuit or limited voltage current circuit defined by UL 508. (Refer to Note below.)
- The DC power supply complies with laws and regulations, regarding EMC and electrical
 equipment safety, of the country or region where the F3SG-SR is used. (For example, in
 EU, the power supply must comply with the EMC Directive and the Low Voltage
 Directive.)

Note:

To prevent a fire, the secondary circuit of the power supply must satisfy either of the following conditions in accordance with UL 508:

• As with secondary winding of isolation transformer, there must be a limited current voltage circuit to which isolated power supply provides power, and the "current is limited to 8 A max. (including short-circuit)" or "circuit protection such as a fuse is used to limit the current, which has a rating of 4.2A max." (24 VDC power supply).

Recommended power supply: OMRON S8VK-S (30 W or 60 W)

These products are UL-Listed (UL 508, class 2 power supply), CE marking compatible (EMC/Low Voltage Directive).

• Class 2 power supply unit complying with UL 1310, or a circuit using 2 transformers complying with UL 1585 as a power supply.



Sharing the power supply with other devices may cause the F3SG-SR/PG to be affected by noise or voltage drop. It is recommended that the F3SG-SR/PG use a dedicated power supply, not shared with other devices.

5-4-3. Cable Connections

WARNING

Extension of the cable must be within a specified length. If it isn't, safety functions may not work properly, resulting in danger.




For the restrictions on the cable extension, refer to 1-5-1. F3SG-SR Series.

Perform wiring according to the following procedure.

- 1. Connect a gray Root-Straight Cable for Emitter (F39-JG□C-L, sold separately) or Root-Plug Cable for Extended for Emitter (F39-JGR3K-L, sold separately) to the emitter.
- 2. When extending the cable length, connect a gray Extended Plug-Socket Cable for Emitter and/or Extended Socket-Straight Cable for Emitter (F39-JGDD-L, sold separately) to the emitter-side Root-Plug Cable for Extended.
- 3. Connect a black Root-Straight Cable for Receiver (F39-JG□C-D, sold separately) or Root-Plug Cable for Extended for Receiver (F39-JGR3K-D, sold separately) to the receiver.
- 4. When extending the cable length, connect a black Extended Plug-Socket Cable for Receiver and/or Extended Socket-Straight Cable for Receiver (F39-JGDD-D, sold separately) to the receiver-side Root-Plug Cable for Extended.

5-4-3-1. Root-Straight Cable


■ Root-Straight Cable for Emitter (F39-JG□C-L, sold separately)

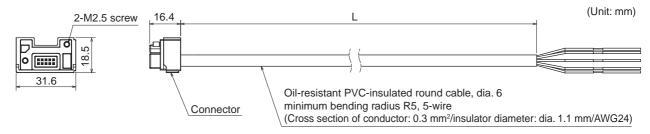

<Internal wiring diagram>

Brown	24V/0V
Black	TEST
Blue	0V/24V
White	COM(+)
Yellow	OPERATING RANGE SELECT INPUT/COM(-)

■ Root-Straight Cable for Receiver (F39-JG□C-D, sold separately)

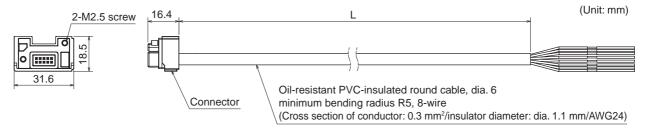


<Internal wiring diagram>

Yellow	RESET/EDM
Brown	24V/0V
Gray	MUTE A/PRE-RESET/PSDI/COM(+)
Pink	MUTE B/COM(-)
Black	OSSD 1
White	OSSD 2
Blue	0V/24V
Red	AUX

Emitter cable (Gray)	Receiver cable (Black)	Length (L)
F39-JG3C-L	F39-JG3C-D	3 m
F39-JG7C-L	F39-JG7C-D	7 m
F39-JG10C-L	F39-JG10C-D	10 m

5-4-3-2. Root-Plug Cable for Extended

■ Root-Plug Cable for Extended for Emitter (F39-JGR□K-L, sold separately)

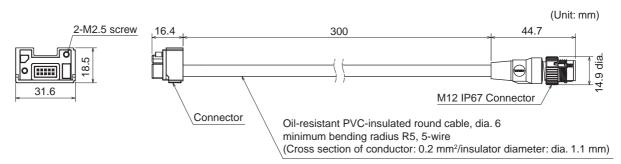


<Internal wiring diagram>

1	Brown	24V/0V
2	Black	TEST
3	Blue	0V/24V
4	White	COM(+)
5	Yellow	OPERATING RANGE SELECT INPUT/COM(-)



■ Root-Plug Cable for Extended for Receiver (F39-JGR□K-D, sold separately)

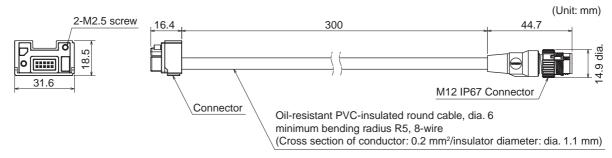

<Internal wiring diagram>


1	Yellow	RESET/EDM
_ '	I CIIOW	KL3L1/LDIVI
2	Brown	24V/0V
3	Gray	MUTE A/PRE-RESET/PSDI/COM(+)
4	Pink	MUTE B/COM(-)
5	Black	OSSD 1
6	White	OSSD 2
7	Blue	0V/24V
8	Red	AUX



Emitter cable (Gray)	Receiver cable (Black)	Length
F39-JGR3K-L	F39-JGR3K-D	0.3 m

5-4-3-3. Extended Socket-Straight Cable

■ Extended Socket-Straight Cable for Emitter (F39-JG□A-L, sold separately)

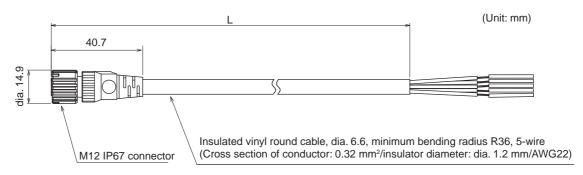


<Internal wiring diagram>

Connected to root cable or Extended Plug-Socket Cable



1	Brown	24V/0V
2	Black	TEST
3	Blue	0V/24V
4	White	COM(+)
5	Yellow	OPERATING RANGE SELECT INPUT/COM(-)

■ Extended Socket-Straight Cable for Receiver (F39-JG□A-D, sold separately)

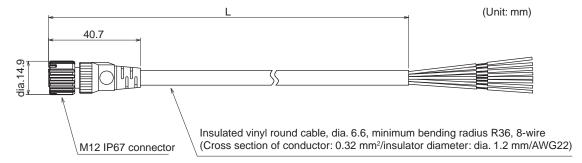

<Internal wiring diagram>

Connected to root cable or Extended Plug-Socket Cable




Female

1	Yellow	RESET/EDM
2	Brown	24V/0V
3	Gray	MUTE A/PRE-RESET/PSDI/COM(+)
4	Pink	MUTE B/COM(-)
5	Black	OSSD 1
6	White	OSSD 2
7	Blue	0V/24V
8	Red	AUX

Emitter cable (Gray)	Receiver cable (Black)	Length (L)
F39-JG3A-L	F39-JG3A-D	3 m
F39-JG10A-L	F39-JG10A-D	10 m


5-4-3-4. Extended Plug-Socket Cable

■ Extended Plug-Socket Cable for Emitter: Cable for extension (F39-JG□B-L, sold separately)

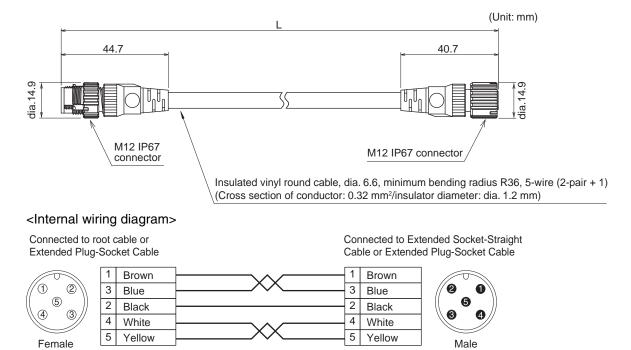

Twisted pair wires are brown and blue, and white and yellow.

■ Extended Plug-Socket Cable for Receiver: Cable for extension (F39-JG□B-D, sold separately)

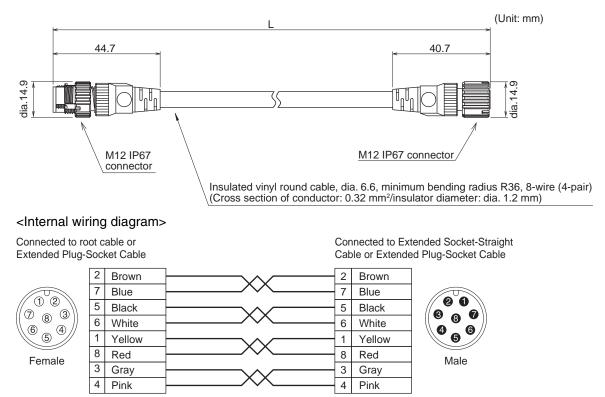


Twisted pair wires are brown and blue, black and white, yellow and red, and gray and pink.

Emitter cable (Gray)	Receiver cable (Black)	Length (L)
F39-JG3B-L	F39-JG3B-D	3 m
F39-JG10B-L	F39-JG10B-D	10 m
F39-JG20B-L	F39-JG20B-D	20 m


If the length of the F39-JG□A Single-Ended Cable is insufficient, use 1 or more F39-JG□B Extended Plug-Socket Cables to extend the length, as required. The total cable extension length of the root cable must be 100 m max. (When the Intelligent Tap (F39-SGIT-IL3) is connected to the sensor, this applies in the case of the rated power supply of 24 VDC or higher.)

<Connection example>

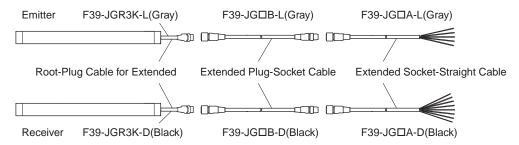


5-4-3-5. Cascading Cable for Extended

- Cascading Cable for Extended (F39-JGR3W, sold separately) (two cables per set, one for emitter and one for receiver)
- Emitter Cascading Cable for Extended

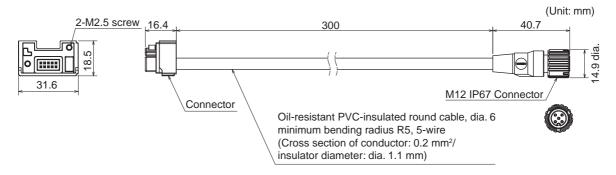


Receiver Cascading Cable for Extended

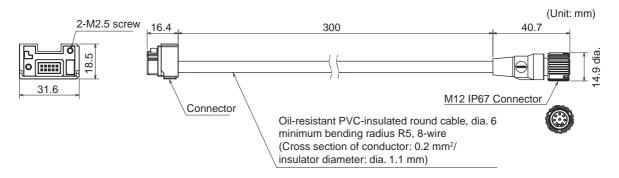

Set model name	Emitter cable (Gray)	Receiver cable (Black)	Length
F39-JGR3W	F39-JGR3W-L	F39-JGR3W-D	0.3 m


If the length of the cascading cable is insufficient, connect the F39-JG□B-□ Extended Plug-Socket Cable (sold separately) between the cascading cable and the F39-JGR3K root cable of the secondary sensor, as required. (Extension cable between sensors: 10 m max. (not including Cascading Cable for Extended*1 and Root Cable*2.))

- *1. F39-JGR3W
- *2. F39-JGR3K

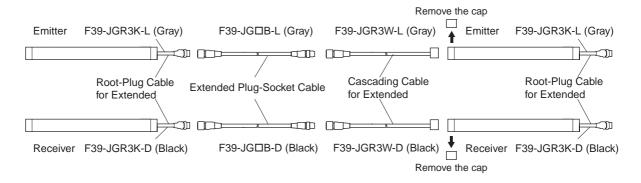


5-4-3-6. Side-by-side Cascading Cable

- Side-by-side Cascading Cable (F39-JGR12L, sold separately) (two cables per set, one for emitter and one for receiver)
- Side-by-side Cascading Cable for Emitter

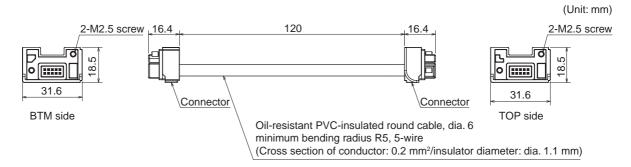

Side-by-side Cascading Cable for Receiver

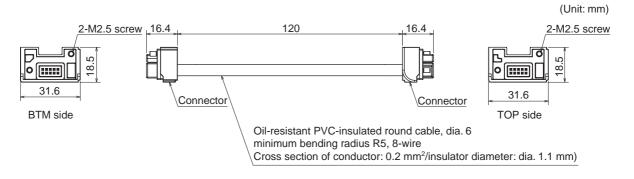

Set model name	Emitter cable (Gray)	Receiver cable (Black)	Length
F39-JGR12L	F39-JGR12L-L	F39-JGR12L-D	12 cm

To extend the cable length to more than 12 cm, add the F39-JGR3W Cascading Cable for Extended.

5-4-3-7. F3SJ-B/A Conversion Cable

Used to convert the wiring for F3SJ-B/-A, F3SR-B or F3SN Safety Light Curtain to that for the F3SG-SR.

(0) CHECK!

- Do not connect the Conversion Cable for the following purposes. Failure to do so may result in failure. 1. Connecting with the F39-SGIT-IL3, F39-GCNY2 or F39-GCNY3

 - 2. Connecting between the F3SG-SR's




Conversion Cables are only for PNP connection. To use for NPN, connect the 24 VDC line and the 0 VDC line in reverse.



There are the restrictions on the functions related to wiring when using Conversion Cables.

■ F3SJ-B/A Conversion Cable for Emitter (F39-JGR3K-SJ-L, sold separately)

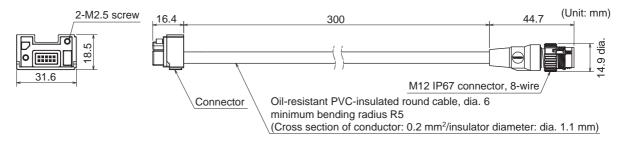


<Internal wiring diagram>

Connected to connector of F3SJ-A/-B, F3SR-B or F3SN emitter cable

	F3SJ-A/-B	F3SR	F3SN
1	Not used	Not used	Not used
2	+24 VDC	+24 VDC	+24 VDC
3	Test input	Test input	Test input
4	Not used	Not used	Not used
5	Communication line (+)	Communication line (+)	RS-485(A)
6	Communication line (-)	Communication line (-)	RS-485(B)
7	0 VDC	0 VDC	0 VDC
8	Not used	Not used	Not used



■ F3SJ-B/A Conversion Cable for Receiver (F39-JGR3K-SJ-D, sold separately)

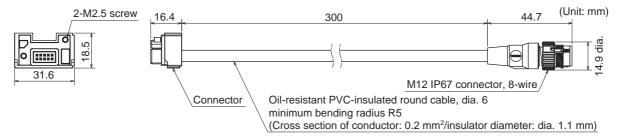

<Internal wiring diagram>

Connected to connector of F3SJ-A/-B, F3SR-B or F3SN receiver cable

	F3SJ-A/-B	F3SR	F3SN
1	Safety output 2	Safety output 2	OSSD2
2	+24 VDC	+24 VDC	+24 VDC
3	Safety output 1	Safety output 1	OSSD1
4	Auxiliary output 1	Operating range select input	Auxiliary output
5	Communication line (+)	Communication line (+)	RS-485(A)
6	Communication line (-)	Communication line (-)	RS-485(B)
7	0 VDC	0 VDC	0 VDC
8	External device monitoring input	External device monitoring input	EDM input



Emitter cable (Gray)	Receiver cable (Black)	Length
F39-JGR3K-SJ-L	F39-JGR3K-SJ-D	0.3 m

5-4-3-8, F3SG-RE Conversion Cable

Used to convert the wiring for F3SG-RE Safety Light Curtain to that for the F3SG-SR.



- Do not connect the Conversion Cable for the following purposes. Failure to do so may result in failure.
 - 1. Connecting with the F39-SGIT-IL3, F39-GCNY2 or F39-GCNY3
 - 2. Connecting between the F3SG-SR's




Conversion Cables are only for PNP connection. To use for NPN, connect the 24 VDC line and the 0 VDC line in reverse.



There are the restrictions on the functions related to wiring when using Conversion Cables.

■ F3SG-RE Conversion Cable for Emitter (F39-JGR3K-RE-L, sold separately)

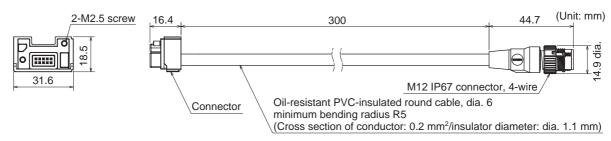


<Internal wiring diagram>

Connected to connector of F3SG-RE emitter cable

	F3SG-RE
1	+24 VDC
2	Operating Range Select Input
3	0 VDC
4	Not used



■ F3SG-RE Conversion Cable for Receiver (F39-JGR3K-RE-D, sold separately)

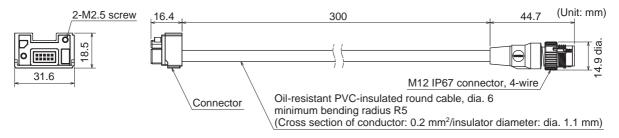

<Internal wiring diagram>

Connected to connector of F3SG-RE receiver cable

	F3SG-RE	D
1	+24 VDC	// // (2 0)
2	OSSD 2	(6 4)
3	0 VDC	8 4
4	OSSD 1	Male
		iviale

Emitter cable (Gray)	Receiver cable (Black)	Length
F39-JGR3K-RE-L	F39-JGR3K-RE-D	0.3 m

5-4-3-9. MS48 Conversion Cable

Used to convert the wiring for MS4800 Safety Light Curtain to that for the F3SG-SR.



Do not connect the Conversion Cable for the following purposes. Failure to do so may result in failure.

- 1. Connecting with the F39-SGIT-IL3, F39-GCNY2 or F39-GCNY3
- 2. Connecting between the F3SG-SR's




Conversion Cables are only for PNP connection. To use for NPN, connect the 24 VDC line and the 0 VDC line in reverse.



There are the restrictions on the functions related to wiring when using Conversion Cables.

■ MS48 Conversion Cable for Emitter (F39-JGR3K-MS-L, sold separately)

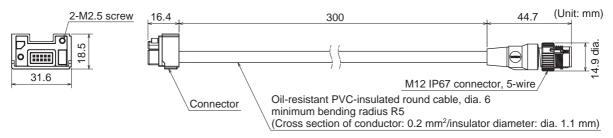


<Internal wiring diagram>

Connected to connector of MS4800 transmitter cable

	MS4800
1	0 VDC
2	+24 VDC
3	Not used
4	Not used
5	Not used



■ MS48 Conversion Cable for Receiver (F39-JGR3K-MS-D, sold separately)

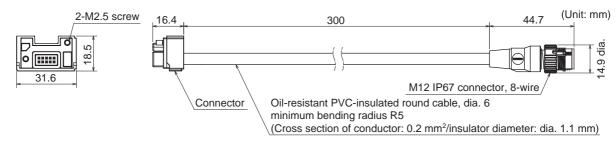

<Internal wiring diagram>

Connected to connector of MS4800 receiver cable

	MS4800
1	+24 VDC
2	0 VDC
3	Not used
4	OSSD 2
5	Start or EDM (Mode Select)
6	EDM
7	Auxiliary Out
8	OSSD 1



Emitter cable (Gray)	Receiver cable (Black)	Length
F39-JGR3K-MS-L	F39-JGR3K-MS-D	0.3 m

5-4-3-10. Extending Cable Length with Commercially Available Cable

When you need to use a cable that is not specified by OMRON, use a cable that satisfies the following specifications.

- 1. Emitter: 5-wire Receiver: 8-wire
- 2. 0.3 mm² or larger, conductor resistance 0.058 ohms/m max.
- 3. Mute A and Mute B lines, and 24V/0V and 0V/24V lines must be used as twisted-pair lines.





Do not use cables in the same conduit as high voltage or electric power lines.


5-4-3-11. Reduced Wiring Connector System with Y-Joint Plug/Socket Connector

Reduced wiring can be achieved by using a Y-Joint Plug/Socket Connector (F39-GCNY2, sold separately).




When using the Y-Joint Plug/Socket Connector, the External Test, Operating Range Selection and Wired Synchronization cannot be used.

■ Y-Joint Plug/Socket Connector (F39-GCNY2, sold separately)

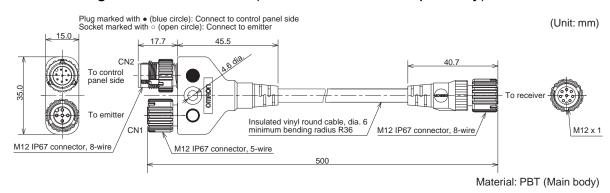

<Internal wiring diagram>

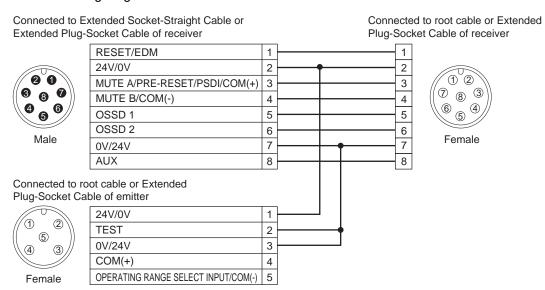

Model	Length
F39-GCNY2	0.5 m

F3SG-SR User's Manual


5-4-3-12. Easy Wiring Connector System with Reset Switch Connector

When arranging reset switch near F3SG-SR, easy wiring can be achieved by using a Reset Switch Connector (F39-GCNY3, sold separately).




When using the Reset Switch Connector, the External Device Monitoring (EDM) cannot be used.

■ Reset Switch Connector (F39-GCNY3, sold separately)

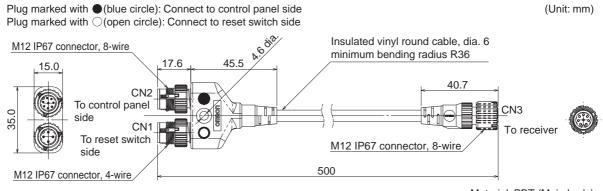


Material: PBT (Main body)

<Internal wiring diagram>

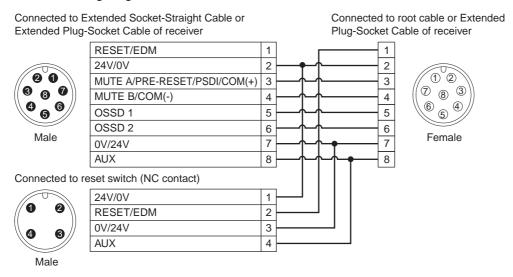

Model	Length
F39-GCNY3	0.5 m

■ Connector Connected to Cable, Socket on One Cable End (XS5F-D421-□80-F, sold separately)

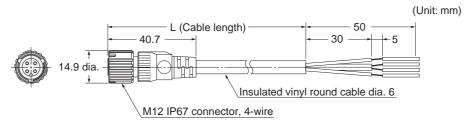

<Internal wiring diagram>



1	Brown	24V/0V
2	White	RESET
3	Blue	0V/24V
4	Black	AUX

Female

Model	Length
XS5F-D421-C80-F	1 m
XS5F-D421-D80-F	2 m
XS5F-D421-E80-F	3 m
XS5F-D421-G80-F	5 m
XS5F-D421-J80-F	10 m
XS5F-D421-L80-F	20 m

5-4-4. Functional Earth Connection

F3SG-SR root cable entry *1

The F3SG-SR operates properly without functional earth connection in a general industrial environment. If the F3SG-SR fails due to electrical noise, connecting the F3SG-SR to the functional earth may work to prevent the noise. It is recommended the functional earth terminal of the F3SG-SR be connected to functional earth cables. Connection with protective earth cables may cause the F3SG-SR to fail due to a noise level of the environment.

When you connect the F3SG-SR with the functional earth, connect an earth cable to the functional earth terminals, as shown below.

The size of the screws of the terminals is M3. Make sure to use crimp terminals that fits the size.

The earth cable must have a cross section of 1 mm² or more with conductor resistance of 0.058 ohms/m or less and a length of 20 m or less.

Functional earth terminal (M3)
Connect an earth cable to either of these screws. *2 *3

Root cable

*1. Select either of the terminals of the emitter and receiver according to your environment.

*2. The color of functional earth terminal screws is silver for the emitter and black for the receiver.

5-5. Cascade Connection


F3SG-SRA	Х
F3SG-SRB	Х

5-5-1. Overview


Up to 3 sets of F3SG-SR can be series-connected. Cascade connection allows them to be used as a safety light curtain, requiring only 1 set to be wired to a controller and preventing mutual interference. If any 1 set of series-connected F3SG-SR is blocked, both of the safety outputs turn OFF.

- Number of connections: Up to 3 sets
- Total number of beams: Up to 255 beams
- Response time: Varies according to the number of beams of cascaded F3SG-SR segments.
 - 1-6-3. Calculation of Response Time of Cascaded Segments
- Cable length between sensors: 10 m max. (not including cascading cable (F39-JGR3W) and root cable (F39-JGR3K or F39-JG□C))


Example: Configuring an U-shaped detection zone

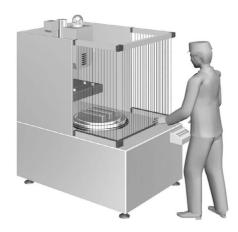

The sensor segments in a cascade connection are called as follows:

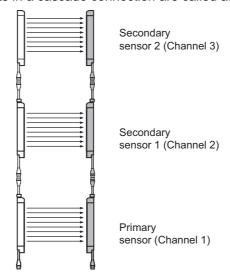

Properly connect an emitter to another emitter, and a receiver to another receiver, as shown below.

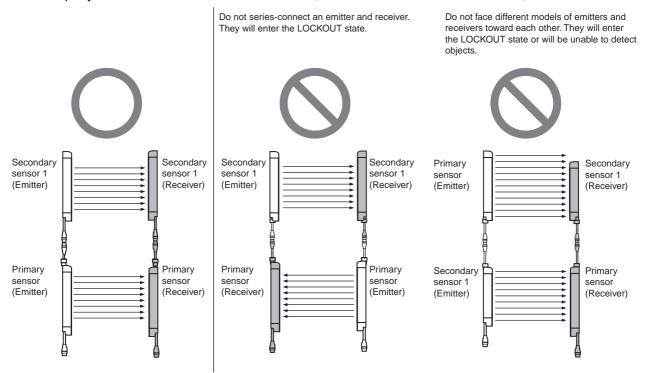


If caps and Cascading Cables are not connected properly, the F3SG-SR enters lockout (when power is turned ON).

CHECK

5-5-2. Connection Procedure

- When Using the F39-JGR3W Cascading Cable for Extended (sold separately)
- **1** Remove the caps from the primary sensor. Loosen the screw (M2.5 cross-head) to remove the cap.
- 2. Connect the primary sensor and the secondary sensor with the F39-JGR3W Cascading Cable (sold separately).
- **3.** If the length of the cascading cable is insufficient, connect the F39-JG□B-□ Extended Plug-Socket Cable (sold separately) between the cascading cable and the F39-JGR3K root cable of the secondary sensor, as required. (Cable length between sensors: 10 m max. (not including cascading cable (F39-JGR3W) and root cable (F39-JGR3K or F39-JG□C).)


Do not connect the F3SG-SR upside down. In the figure below, the side with the mark "BTM" on the plastic part of the F3SG-SR must come to the down side.

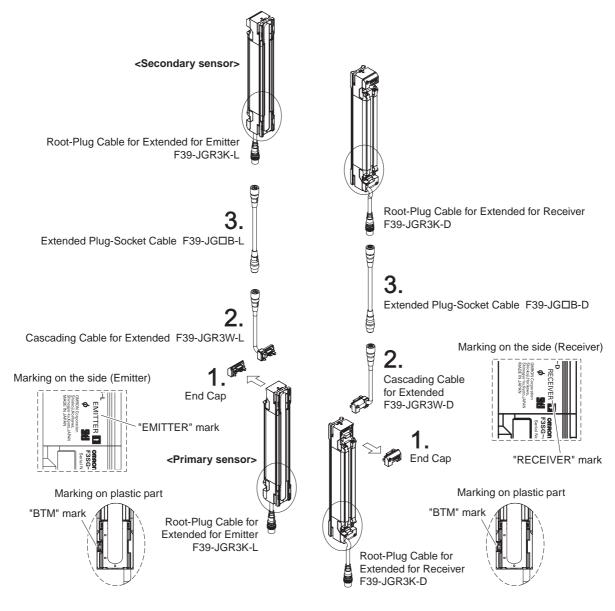



- When attaching a cable or cap, securely fasten the screws (M2.5, recommended torque: 0.35 N•m). Failure to do so may cause the cable/cap to come loose, leading to deterioration of the protective functions.
- Attaching/detaching of the cap and the Cascading Cable may cause misalignment of rubber grommet in the connector assembly. Press the grommet to the bottom of the connector and attach the connector to the sensor again.

- When Using the F39-JGR12L Side-by-side Cascading Cable (sold separately)
- 1. Remove the caps from the primary sensor. Loosen the screw (M2.5 cross-head) to remove the cap.
- 2. Connect the primary sensor and the secondary sensor with the F39-JGR12L Side-by-side Cascading Cable (sold separately). Do not connect the F3SG-SR upside down. In the figure below, the side with the mark "BTM" on the plastic part of the F3SG-SR must come to the down side.

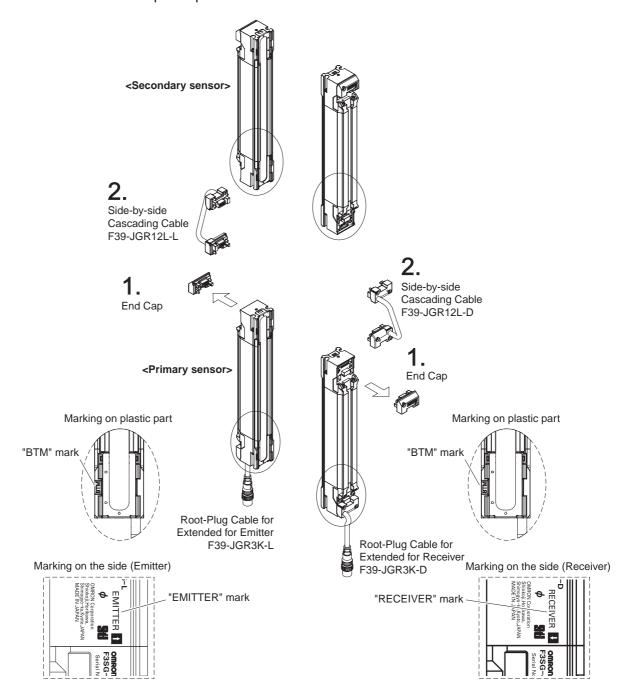



- When attaching a cable or cap, securely fasten the screws (M2.5, recommended torque: 0.35 Nem). Failure to do so may cause the cable/cap to come loose, leading to deterioration of the protective functions.
- CHECK! Attaching/detaching of the cap and the Cascading Cable may cause misalignment of rubber grommet in the connector assembly. Press the grommet to the bottom of the connector and attach the connector to the sensor again.

Chapter 6 **Input/Output Circuit and Applications**


6-1. Input/Output Circuit	314
6-1-1. Entire Circuit Diagram	314
6-1-2. Input Circuit Diagram by Function	315
6-2. Wiring Examples (for F3SG-SR)	316
6-2-1. Non-Muting System Wiring Examples	316
6-2-1-1. Auto Reset Mode with Optical Synchronization and Unused	EDN 316
6-2-1-2. Auto Reset Mode with Wired Synchronization and Unused	EDN 317
6-2-1-3. Auto Reset Mode with Optical Synchronization and Used	EDN 318
6-2-1-4. Manual Reset Mode with EDM	319
6-2-1-5. Manual Reset Mode with EDM and Y-Joint Plug/S Connector	ocke 320
6-2-1-6. Manual Reset Mode with Intelligent Tap	321
6-2-1-7. Manual Reset Mode with Reset Switch Connector	322
6-2-1-8. Pre-Reset Mode with EDM Unused	323
6-2-1-9. Pre-Reset Mode with Reset Switch Connector	324
6-2-1-10. Single Break with EDM and Intelligent Tap	325
6-2-1-11. Double Break with EDM	326
6-2-2. Muting System Wiring Examples	327
6-2-2-1. Standard Muting Mode/Exit-Only Muting Mode	327
6-2-2-2. Standard Muting Mode/Exit-Only Muting Mode will Joint Plug	th Y- 328
6-2-2-3. Standard Muting Mode/Exit-Only Muting Mode Intelligent Tap	with 329
6-2-2-4. Standard Muting Mode/Exit-Only Muting Mode with I Switch Connector	Reset 330
6-3. Connectable Safety Control Units	331

6-1. Input/Output Circuit

6-1-1. Entire Circuit Diagram

The entire circuit diagrams of the F3SG-SR are shown below.


The numbers in the circles indicate the connector's pin numbers.

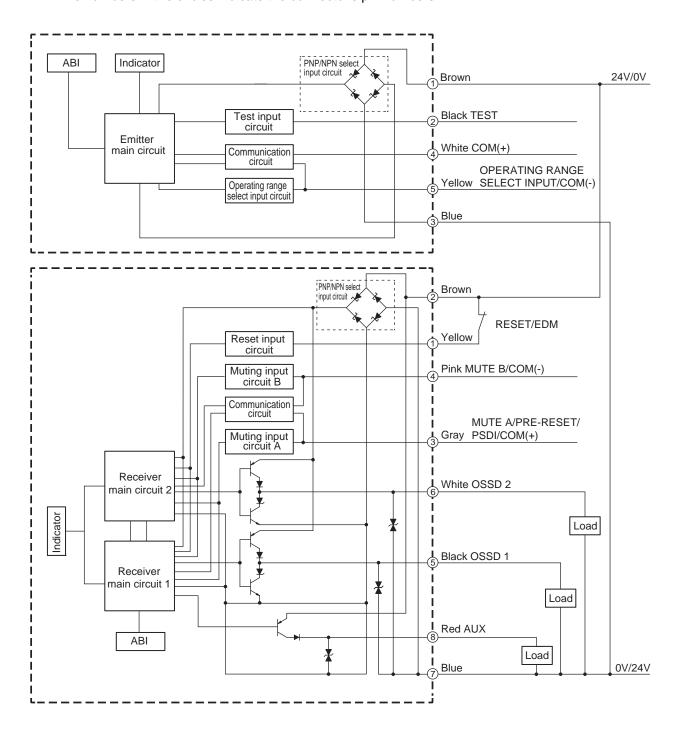


6-1-2. Input Circuit Diagram by Function


The input circuit diagrams of by function are shown below.


■ Test Input

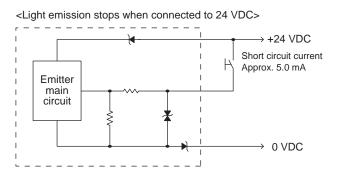

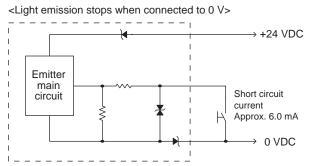


■ Test Input, Operating Range Select Input

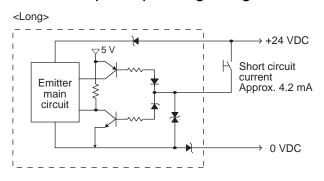


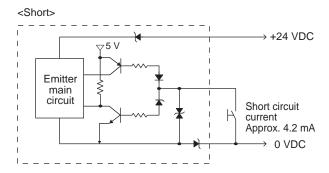

■ RESET/EDM, MUTE A/B

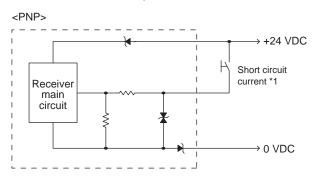

*1. Short circuit current: approx. 9.5 mA (RESET/EDM), approx. 4.5 mA (MUTE A/B)

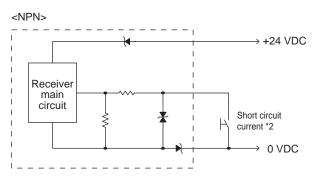


*2. Short circuit current: approx. 13.0 mA (RESET/EDM), approx. 7.0 mA (MUTE A/B)

6-2. Wiring Examples (for F3SG-SR)

Examples of a motor control system using the F3SG-SR are shown below. This chapter shows examples equivalent to up to PLe, Category 4 (ISO 13849-1).

6-2-1. Non-Muting System Wiring Examples

6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused

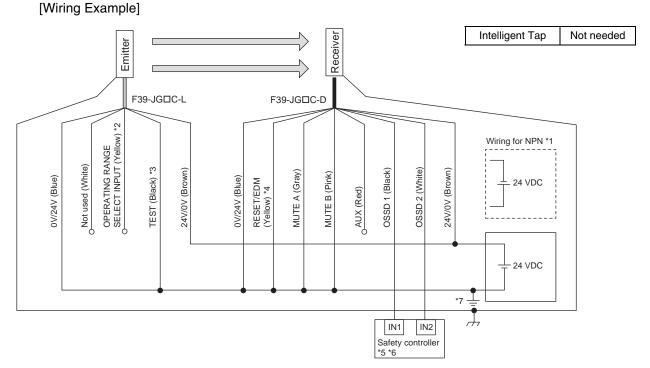

Function	Setting
EDM	EDM Disabled (factory default setting)
Interlock	Auto Reset (factory default setting)
Operating Range Selection	Long : Open the OPERATING RANGE SELECT INPUT line of the emitter or connect the line to 24 VDC.
Non-Muting system	Perform wiring according to the wiring diagram.
External Test not used	Connect the TEST line of the emitter to 0V/24V of the emitter.
Optical Synchronization	Do not connect the COM(+) and COM(-) lines of the of emitter and receiver with each other.




- *1. Reverse the polarity of the power supply when using in the NPN system. Select a safety controller of PNP or NPN type according to the system of your application.
- *2. Connect the line to 0 VDC if Operating Range Selection is used in Short Mode.
- *3. Refer to 2-6. External Test for more information if External Test is used.
- *4. Connect the line to 24V/0V (brown) of the receiver via a lockout reset switch (NC contact) if Lockout Reset is used.
- *5. Refer to 6-3. Connectable Safety Control Units for more information.
- The safety controller and the F3SG-SR must share the power supply or be connected to the common terminal of the power supply.
- This is the case for a PELV circuit.



- Functional earth connection to the F3SG-SR housing is unnecessary when you use the F3SG-SR in a general industrial environment where noise control or stable power supply is considered. However, when you use the F3SG-SR in an environment where there may be excessive noise from surroundings or stable power supply may be interfered, it is recommended the F3SG-SR be connected to functional earth.
- The wiring examples in later pages do not indicate functional earth. To use functional earth, wire an earth cable according to the example above. Refer to 5-4-4. Functional Earth Connection for more information.

6-2-1-2. Auto Reset Mode with Wired Synchronization and EDM Unused

[Wiring Example]

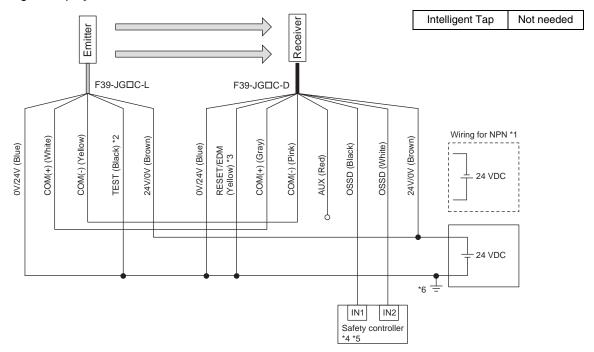

Function	Setting
EDM	EDM Disabled (factory default setting)
Interlock	Auto Reset (factory default setting)
Operating Range Selection	Long (factory default setting) *7
Non-Muting system	Perform wiring according to the wiring diagram.
External Test not used	Connect the TEST line of the emitter to 0V/24V of the emitter.
Optical Synchronization	Connect the COM(+) and COM(-) line of the emitter and receiver with each other.

Timing chart




- *1. Reverse the polarity of the power supply when using in the NPN system. Select a safety controller of PNP or NPN type according to the system of your application.
- *2. Refer to 2-6. External Test for more information if External Test is used.
- *3. Connect the line to 24V/0V (brown) of the receiver via a lockout reset switch (NC contact) if Lockout Reset is used.
- *4. Refer to 6-3. Connectable Safety Control Units for moreinformation.*6
- 5. The safety controller and the F3SG-SR must share the power supply or be connected to the common terminal of the power supply.
- *6. This is the case for a PELV circuit.
- *7. The Intelligent Tap is needed to set the Short mode. Set the function with the DIP Switches on the Intelligent Tap or the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.



• When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-2-1-3. Auto Reset Mode with Optical Synchronization and EDM Used

[Wiring Example]

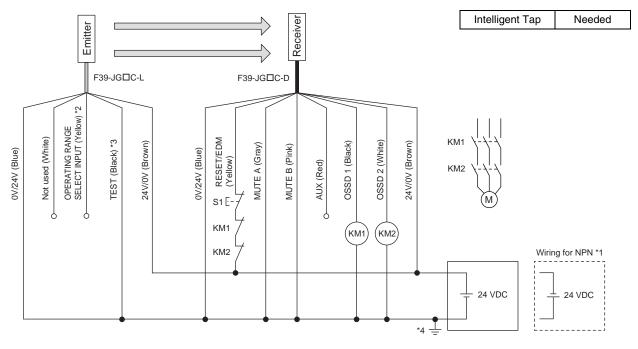

☐: Indicates a switch position.

			= maioatos a simon postas.
Function	Setting		
Function	DIP switch		SD Manager 3
EDM *5	EDM Enabled	3 ON	[External device monitoring] : Enable
Interlock	Auto Reset (factory default setting)		
Operating Range Selection *5	Long: Open the OPERATING RANGE SELECT INPUT line of the emitter or connect the line to 24 VDC.		
	Long	8 ON	[Operating Range Selection] : Long mode
Non-Muting system	Perform wiring according to the wiring diagram.		
	N/A [Muting] : Disable		
External Test not used	Connect the TEST line of the emitter to 0V/24V of the emitter.		
Optical Synchronization	Do not connect the COM(+) and COM(-) lines of the of emitter and receiver with each other.		

Timing chart



S1: Lockout reset switch

KM1, KM2: Safety relay with forcibly guided contacts (G7SA) or magnetic contactor


- *1. Reverse the polarity of the power supply when using in the NPN system.
- *2. Connect the line to 0 VDC if Operating Range Selection is used in Short Mode.
- *3. Refer to 2-6. External Test for more information if External Test is used.
- This is the case for a PELV circuit.
- Set the function with the DIP Switches on the Intelligent Tap or the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.



When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-2-1-4. Manual Reset Mode with EDM


[Wiring Example]

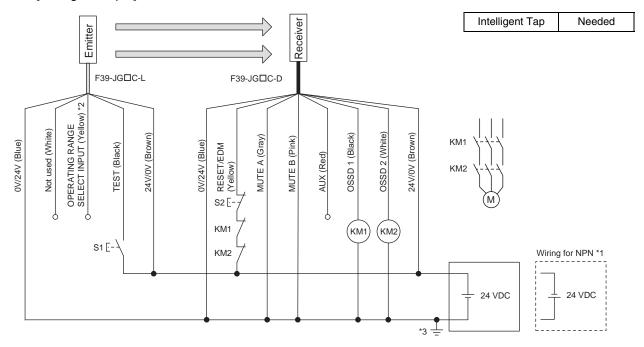

☐: Indicates a switch position.

			' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' '	
Function	Setting			
FullClion	С	IP switch	SD Manager 3	
EDM *4	EDM Enabled	3 ON	[External device monitoring] : Enable	
Interlock *4	Manual Reset	4 ON 5 ON	[Start interlock] : Enable [Restart interlock] : Enable	
Operating Range Selection	Long : Open the OPE	Long : Open the OPERATING RANGE SELECT INPUT line of the emitter or connect the line to 24 VDC.		
	Long *4	8 ON	[Operating Range Selection] : Long mode *4	
Non-Muting system	Perform wiring acco	Perform wiring according to the wiring diagram.		
	N/A		[Muting] : Disable *4	
External Test used	Connect the TEST	Connect the TEST line of the emitter to 24V/0V of the emitter via a test switch (NO contact). *5		
	N/A		[External test signal inversion] : Disable	
Optical Synchronization	Do not connect the	Do not connect the COM(+) and COM(-) lines of the of emitter and receiver with each other.		

Timing chart

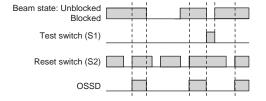

- S1: Test switch
- S2: Lockout/interlock reset switch

KM1, KM2: Safety relay with forcibly guided contacts (G7SA) or magnetic contactor M: Motor


- *1. Reverse the polarity of the power supply when using in the NPN system.
- *2. Connect the line to 0 VDC if Operating Range Selection is used in Short Mode.
- *3. This is the case for a PELV circuit.
- *4. Set the function with the DIP Switches on the Intelligent Tap or the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the
- This wiring example shows light emission stop when connected to 24 VDC with PNP setting, and light emission stop when connected to 0 VDC with NPN setting. If TEST switch is not needed, refer to 2-6. External Test.

CHECK!


When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-2-1-5. Manual Reset Mode with EDM and Y-Joint Plug/Socket Connector

[Wiring Example]

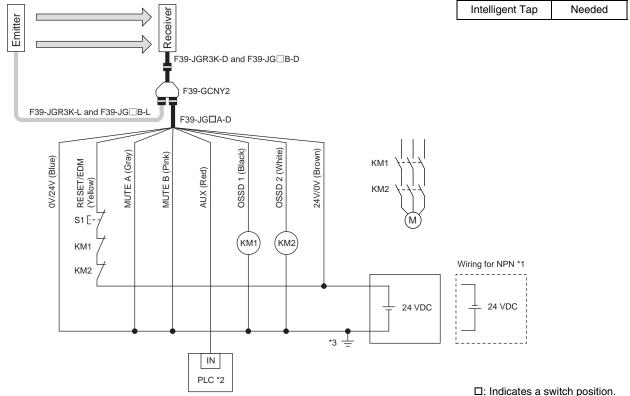

Function	Setting		
Function	DIP switch		SD Manager 3
EDM *4	EDM Enabled	3 ON	[External device monitoring] : Enable
Interlock *4	Manual Reset	4 ON ON	[Start interlock] : Enable [Restart interlock] : Enable
Operating Range Selection *5	Long (factory default setting)		
	Long	8 O N	[Operating Range Selection] : Long mode
Non-Muting system	Perform wiring according to the wiring diagram.		
	N/A		[Muting] : Disable *4
External Test not used	N/A		
Optical Synchronization	Connect the wires according to the diagram above.		

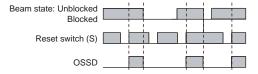


- S1: Lockout/interlock reset switch
- KM1, KM2: Safety relay with forcibly guided contacts (G7SA) or magnetic contactor M: Motor
- PLC: Programmable logic controller (Used for monitoring only. NOT related to safety system.)
- *1. Reverse the polarity of the power supply when using in the NPN system. Select a PLC of PNP or NPN type according to the system of your application.
- *2. When connecting to the PLC, the output mode must be changed with the SD Manager 3 according to your application. Refer to *Chapter 4 Setting with SD Manager 3* for more information on setting this function by the SD Manager 3.
- *3 This is the case for a PELV circuit.
- *4 Set the function with the DIP Switches on the Intelligent Tap or the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.
- *5 To set the Short mode, set the function with the DIP Switches on the Intelligent Tap or the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.



- When using the Y-Joint Plug/Socket Connector (F39-GCNY2), the following functions are not available.
 - External Test
 - Operating Range Selection by wiring
 - Wired Synchronization
- When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.


6-2-1-6. Manual Reset Mode with Intelligent Tap

[Wiring Example]

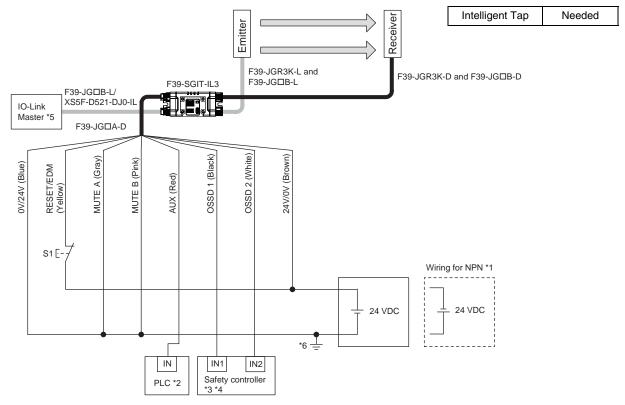

□: Indicates a switch position.

	Setting		
Function	D	IP switch	SD Manager 3
EDM	EDM Disabled	3 ON	[External device monitoring] : Disable
Interlock	Manual Reset	4 ON ON	[Start interlock] : Enable [Restart interlock] : Enable
Operating Range Selection	Long	8 ON	[Operating Range Selection] : Long mode
Non-Muting system	Perform wiring acco	Perform wiring according to the wiring diagram.	
	N/A [Muting] : Disable		[Muting] : Disable
Test Input	N/A	N/A	
Wired Synchronization	Connect the emitter and receiver with the Intelligent Tap.		

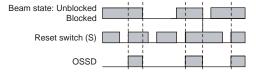


- S1: Lockout/interlock reset switch
- PLC: Programmable logic controller (Used for monitoring only. NOT related to safety system.)
- *1. Reverse the polarity of the power supply when using in the NPN system. Select a PLC and a safety controller of PNP or NPN type according to the system of your application.
- *2. When connecting to the PLC, the output mode must be changed with the SD Manager 3 according to your application. Refer to *Chapter 4 Setting with SD Manager 3* for more information on setting this function by the SD Manager 3.
- *3. Refer to 6-3. Connectable Safety Control Units for more information.
- *4. The safety controller and the F3SG-SR must share the power supply or be connected to the common terminal of the power supply.
- *5. For connecting with the IO-Link Master unit, refer to an instruction manual of the IO-Link Master unit you use.
- *6. This is the case for a PELV circuit.



- When using the Intelligent Tap (F39-SGIT-IL3) with the emitter and receiver connected, the following functions are not available.
 - External Test
 - Operating Range Selection by wiring
 - Optical Synchronization
- When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-2-1-7. Manual Reset Mode with Reset Switch Connector

[Wiring Example]

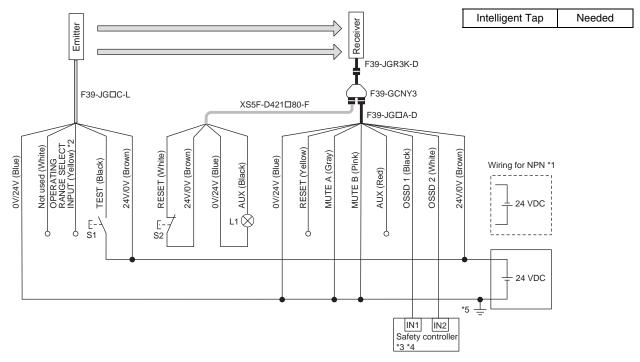

□: Indicates a switch position.

			D. Indicates a switch position	
Function	Setting			
DIP switch		IP switch	SD Manager 3	
EDM	EDM Disabled (fac	tory default setting)		
Interlock *6	Manual Reset	4 ON ON	[Start interlock] : Enable [Restart interlock] : Enable	
Operating Range Selection	Long : Open the OPE	Long : Open the OPERATING RANGE SELECT INPUT line of the emitter or connect the line to 24 VDC.		
	Long *6	8 ON	[Operating Range Selection] : Long mode *6	
Non-Muting system	Perform wiring acco	Perform wiring according to the wiring diagram.		
	N/A		[Muting] : Disable *6	
External Test used	Connect the TEST	Connect the TEST line of the emitter to 24V/0V of the emitter via a test switch (NO contact). *7		
	N/A		[External test signal inversion] : Disable	
Optical Synchronization	Open the COM(+) and COM(-) lines of the emitter.			




- S1: Test switch
- S2: Lockout/interlock reset switch
- L1: Lamp
- *1. Reverse the polarity of the power supply when using in the NPN system. Select a safety controller of PNP or NPN type according to the system of your application.
- *2. Connect the line to 0 VDC if Operating Range Selection is used in Short Mode.
- *3. Refer to 6-3. Connectable Safety Control Units for more information.
- *4. The safety controller and the F3SG-SR must share the power supply or be connected to the common terminal of the power supply.
- *5. This is the case for a PELV circuit.
- Set the function with the DIP Switches on the Intelligent Tap or the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.
- *7. This wiring example shows light emission stop when connected to 24 VDC with PNP setting, and light emission stop when connected to 0 VDC with NPN setting. If TEST switch is not needed, refer to 2-6. External Test.



- When using the Reset Switch Connector (F39-GCNY3), the following functions are not available.
- External Device Monitoring (EDM)
- When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-2-1-8. Pre-Reset Mode with EDM Unused


[Wiring Example]

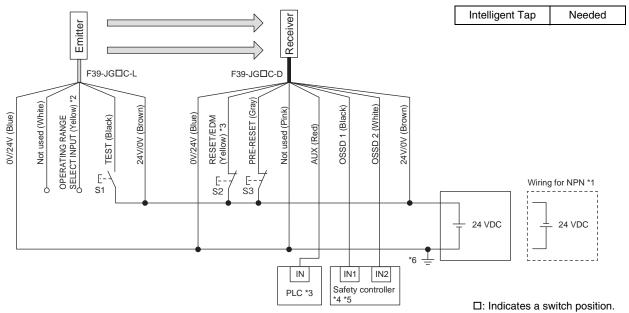

Function	Setting			
Function	DIP switch		SD Manager 3	
EDM	EDM Disabled (facto	ry default setting)		
	EDM Disabled *7	3 ON	[External device monitoring] : Disable *7	
Pre-Reset *7	Pre-Reset	4 ON ON	[Pre-Reset] : Enable	
Operating Range Selection	Long : Open the OPER	Long: Open the OPERATING RANGE SELECT INPUT line of the emitter or connect the line to 24 VDC.		
	Long *7	8 ON	[Operating Range Selection] : Long mode *7	
Non-Muting system	Perform wiring according to the wiring diagram.			
External Test used	Connect the TEST lin	Connect the TEST line of the emitter to 24V/0V of the emitter via a test switch (NO contact).		
Optical Synchronization	Do not connect the COM(+) and COM(-) lines of the of emitter and receiver with each other.			

- S1: Test switch
- S2: Lockout/interlock reset switch
- S3: Pre-reset switch
- PLC: Programmable logic controller (Used for monitoring only. NOT related to safety system.)
- *1. Reverse the polarity of the power supply when using in the NPN system. Select a PLC and a safety controller of PNP or NPN type according to the system of your application.
- *2. Connect the line to 0 VDC if Operating Range Selection is used in Short Mode.
- *3. When connecting to the PLC, the output mode must be changed with the SD Manager 3 according to your application. Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.
- *4. Refer to 6-3. Connectable Safety Control Units for more information.
- *5. The safety controller and the F3SG-SR/PG must share the power supply or be connected to the common terminal of the power supply.
- *6 This is the case for a PELV circuit.
- *7 Set the function with the DIP Switches on the Intelligent Tap or the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.

Timing chart

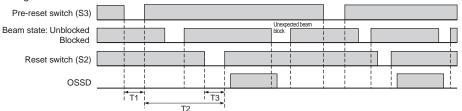

- T1: Minimum pressing time of pre-reset switch. Configurable from 100 to 500 ms in 100-ms increments
- T2: Maximum permissible time from input of PRE-RESET signal to input of RESET signal. Configurable from 1 to 60 s in 1-s increments.
- T3: Minimum pressing time of reset switch. Configurable from 100 to 500 ms in 100-ms increments.




When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

Ε

6-2-1-9. Pre-Reset Mode with Reset Switch Connector

[Wiring Example]

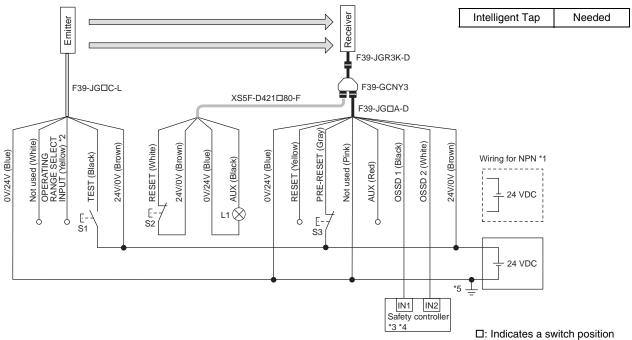


	Setting		
Function	DIP switch		SD Manager 3
EDM	N/A		
Pre-Reset *6	Pre-Reset 4	ON ON	[Pre-Reset] : Enable *6
Non-Muting system	Perform wiring according to the wiring diagram.		
	N/A		[Muting] : Disable *6
Operating Range Selection	Long: Open the OPERATING RANGE SELECT INPUT line of the emitter or connect the line to 24 VDC.		
External Test used	Connect the TEST line of the emitter to 24V/0V via a test switch (NO contact). *7		
	N/A		[External test signal inversion] : Disable
Optical Synchronization	Do not connect the COM(+) and COM(-) lines of the of emitter and receiver with each other.		

- S1: Test switch
- S2: Lockout/interlock reset switch
- S3: Pre-reset switch
- L1: Lamp

- *1. Reverse the polarity of the power supply when using in the NPN system. Select a safety controller of PNP or NPN type according to the system of your application.
- Connect the line to 0 VDC if Operating Range Selection is used in Short Mode.
- *3. Refer to 6-3. Connectable Safety Control Units for more information.
- *4. The safety controller and the F3SG-SR must share the power supply or be connected to the common terminal of the power supply.
- This is the case for a PELV circuit.
- Set the function with the DIP Switches on the Intelligent Tap or the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.
- This is the example for the PNP system to stop emission when the line is connected to 24 VDC and for the NPN to stop emission when the line is connected to 0 VDC. If TEST switch is not needed, refer to 2-6. External Test.

Timing chart

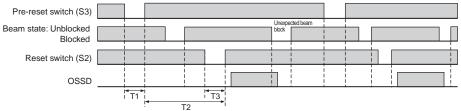


- T1: Minimum pressing time of pre-reset switch. Configurable from 100 to 500 ms in 100-ms increments.

 T2: Maximum permissible time from input of PRE-RESET signal to input of RESET signal. Configurable from 1 to 60 s in 1-s increments.
- T3: Minimum pressing time of reset switch. Configurable from 100 to 500 ms in 100-ms increments
- When using the Reset Switch Connector (F39-GCNY3), the following functions are not available. External Device Monitoring (EDM)
- When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with CHECK! Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

(0

6-2-1-10. Single Break with EDM and Intelligent Tap


[Wiring Example]

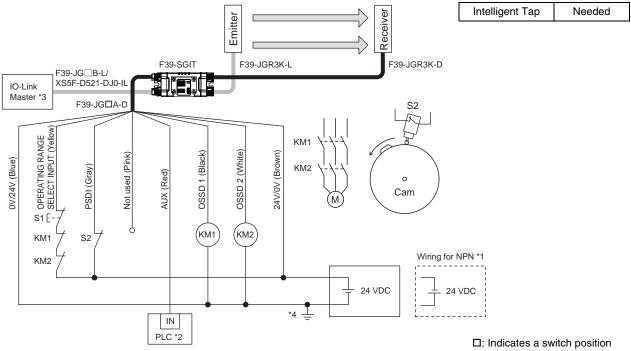

Function	Setting		
Function	DIP switch *6	SD Manager 3	
EDM	-	[External device monitoring] : Enable	
Operating Range Selection *5	-	[Operating Range Selection] : Long mode	
	-	[Operating Range Selection] : Short mode	
PSDI	N/A	[PSDI] : Single break	
Non-Muting system	Perform wiring according to the wiring diagram.		
	N/A	[Muting] : Disable	
External Test not used	N/A		
Wired Synchronization	Connect the emitter and receiver with the Intelligent Tap.		

- S1: Reset switch
- S2: Press position switch
- KM1, KM2: Safety relay with forcibly guided contacts (G7SA) or magnetic contactor
- PLC: Programmable logic controller (Used for monitoring only. NOT related to safety system.)
- M: Motor

- *1. Reverse the polarity of the power supply when using in the NPN system. Select a PLC of PNP or NPN type according to the system of your application.
- *2. When connecting to the PLC, the output mode must be changed with the SD Manager 3 according to your application. Refer to Chapter 4 Setting with SD Manager 3 for more information on setting the functions by the SD Manager 3.
- '3. For connecting with the IO-Link Master unit, refer to an instruction manual of the IO-Link Master unit you use.
- 4. This is the case for a PELV circuit.
- *5. It is possible to set either Long or Short mode.
- *6. The PSDI is only configurable by the SD Manager 3, not by the DIP Switch.

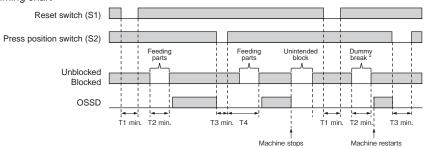

- T1: Minimum pressing time of reset switch.


 Configurable from 100 to 500 ms in 100-ms increments by SD Manager 3.
- increments by SD Manager 3. T2: Minimum break time (300 ms)
- T3: Minimum pressing time of press position switch. T3 = T1
- T4: Wait time until single break is complete (30 s or less)
- * When the machine is stopped by unintended block in the middle of pressing of parts, operation of the switch (S1) and then a single dummy break are needed for reinitiation of the machine cycle.



- When using the Intelligent Tap (F39-SGIT-IL3) with the emitter and receiver connected, the following functions are not available.
 - External Test
 - Operating Range Selection by wiring
 - Optical Synchronization
- When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-2-1-11. Double Break with EDM

[Wiring Example]

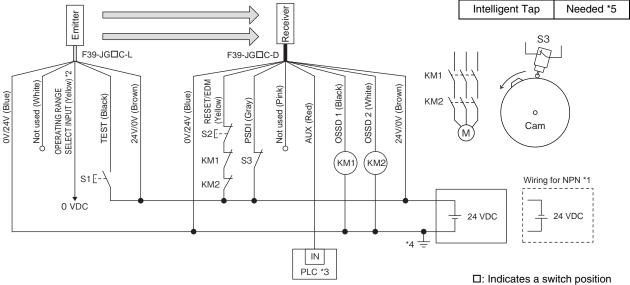


Function	Setting		
Function	DIP switch	SD Manager 3	
EDM	-	[External device monitoring] : Enable *5	
Operating Range Selection	Short : Connect the OPERATING RANGE SEL	ECT INPUT line of the emitter to 0 VDC.	
PSDI	N/A	[PSDI] : Double break *5	
Non-Muting system	Perform wiring according to the wiring diagram.		
	N/A	[Muting] : Disable *5	
External Test used	Connect the TEST line of the emitter to 24V/0V of the emitter via a test switch (NO contact).		
	N/A	[External test signal inversion] : Disable	
Optical Synchronization	Do not connect the COM(+) and COM(-) lines of the of emitter and receiver with each other.		

- S1: Test switch
- S2: Reset switch
- S3: Press position switch
- KM1, KM2: Safety relay with forcibly guided contacts (G7SA) or magnetic contactor
- PLC: Programmable logic controller (Used for monitoring only. NOT related to safety system.)
- M: Motor

- *1. Reverse the polarity of the power supply when using in the NPN system. Select a PLC of PNP or NPN type according to the system of your application.
- Open or connect the line to 24 VDC if Operating Range Selection is used in Long Mode. When connecting to the PLC, the output mode must be changed with the SD Manager 3 according to your application. Refer to Chapter 4 Setting with SD Manager 3 for more information on setting the functions by the SD Manager 3.
- This is the case for a PELV circuit.
- Set the function with the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.
- This wiring example shows light emission stop when connected to 24 VDC with PNP setting, and light emission stop when connected to 0 VDC with NPN setting. If TEST switch is not needed, refer to 2-6. External Test.

Timing chart

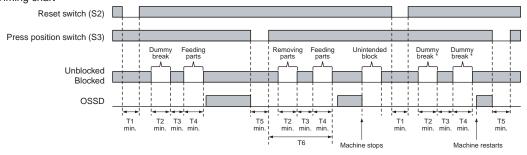

- T1: Minimum pressing time of reset switch. Configurable from 100 to 500 ms in 100-ms increments by SD Manager 3
- T2: Minimum break time (300 ms)
- T3: Minimum unblocked time during the time from removing to feeding parts. T3 = T1
- T4: Minimum break time (300 ms)
- T5: Minimum pressing time of press position switch. T5 = T1
- T6: Wait time until double break is complete (30 s or less)
- * When the machine is stopped by unintended block in the middle of pressing of parts, operation of the reset switch (S1) and then double dummy break are needed for reinitiation of the machine cycle




When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-2-2. Muting System Wiring Examples


6-2-2-1. Standard Muting Mode/Exit-Only Muting Mode

[Wiring Example]

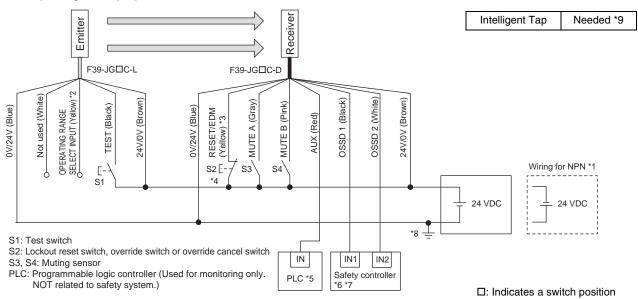

Function	Setting		
Function	DIP switch	SD Manager 3	
EDM	EDM Disabled (factory default setting)		
	-	[External device monitoring] : Disable *9	
Interlock	Auto Reset (factory default setting)		
	-	[Start interlock] : Disable [Restart interlock] : Disable *9	
Operating Range	Long: Open the OPERATING RANGE SELECT INPUT line of the emitter or connect the line to 24 VDC.		
Selection	-	[Operating Range Selection] : Long mode *9	
Standard Muting Mode	When not using the Intelligent Tap or the SD Manager 3, perform wiring according to the wiring diagram. (factory default setting)		
	N/A	[Muting] : Enable [Muting mode] : Standard Muting (Installation Example1/2) *9	
Exit-Only Muting Mode	N/A	[Muting] : Enable [Muting mode] : Exit-Only Muting *9	
External Test used	Connect the TEST line of the emitter to 24V/0V of the emitter via a test switch (NO contact). *10		
	N/A	[External test signal inversion] : Disable	
Optical Synchronization	Open the COM(+) and COM(-) lines of the emitter.		

Timing chart

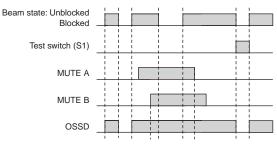


- *1. Reverse the polarity of the power supply when using in the NPN system. Select a PLC and a safety controller of PNP or NPN type according to the system of your application.
- *2. Connect the line to 0 VDC if Operating Range Selection is used in Short Mode.
 - *3. Also used as OVERRIDE INPUT line.
- *4. Make sure to connect an override cancel switch to the RESET line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious injury.
- *5. When connecting to the PLC, the output mode must be changed with the SD Manager 3 according to your application. Refer to *Chapter 4 Setting with SD Manager 3* for more information on setting this function by the SD Manager 3.
- *6. Refer to 6-3. Connectable Safety Control Units for more information.
- *7. The safety controller and the F3SG-SR must share the power supply or be connected to the common terminal of the power supply.
- *8. This is the case for a PELV circuit.
- *9. Set the function with the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.
- *10.This wiring example shows light emission stop when connected to 24 VDC with PNP setting, and light emission stop when connected to 0 VDC with NPN setting. If TEST switch is not needed, refer to 2-6. External Test.



When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-2-2. Standard Muting Mode/Exit-Only Muting Mode with Y-Joint Plug


[Wiring Example]

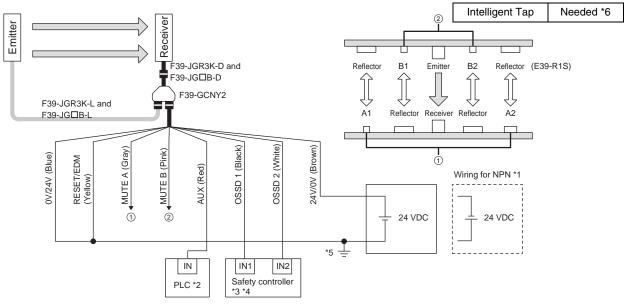

PLC: Programmable logic controller (Used for monitoring only. NOT related to safety system.) A1, A2, B1, B2: Muting sensor (E3Z-R□6)

☐: Indicates a switch position

Function	Setting		
Function	DIP switch	SD Manager 3	
EDM	EDM Disabled (factory default setting)		
	-	[External device monitoring] : Disable *6	
Interlock	Auto Reset (factory default setting)		
	-	[Start interlock] : Disable [Restart interlock] : Disable *6	
Operating Range	Long (factory default setting) *7		
Selection	-	[Operating Range Selection] : Long mode *6	
Standard Muting Mode	When not using the Intelligent Tap or the SD Manage	er 3, perform wiring according to the wiring diagram.	
	N/A	[Muting] : Enable [Muting mode] : Standard Muting (Installation Example1/2) *6	
Exit-Only Muting Mode	N/A	[Muting] : Enable [Muting mode] : Exit-Only Muting *6	
External Test not used	N/A		
Optical Synchronization	Connect the wires according to the diagram above.		

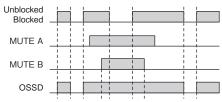


- *1. Reverse the polarity of the power supply when using in the NPN system. Select a PLC and a safety controller of PNP or NPN type according to the system of your application.
- When connecting to the PLC, the output mode must be changed with the SD Manager 3 according to your application. Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.
- Refer to 6-3. Connectable Safety Control Units for more information.
- The safety controller and the F3SG-SR must share the power supply or be connected to the common terminal of the power supply.
- This is the case for a PELV circuit.
- When using the Exit-Only Muting, set the function with the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.
- To set the Short mode, set the function with the DIP Switches on the Intelligent Tap or the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.




- When using the Y-Joint Plug/Socket Connector (F39-GCNY2), the following functions are not available.
 - External Test
 - Operating Range Selection by wiring
 - Wired Synchronization
- When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-2-2-3. Standard Muting Mode/Exit-Only Muting Mode with Intelligent Tap

[Wiring Example]

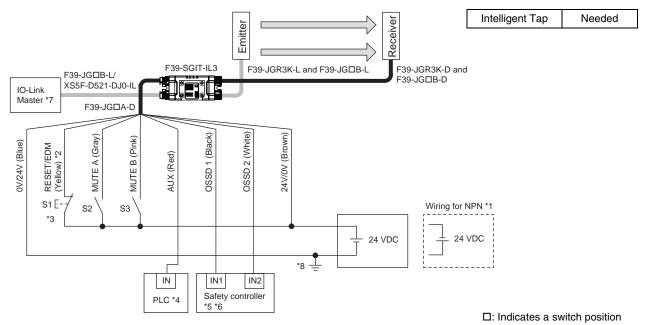

Function	Setting		
Function	D	IP switch	SD Manager 3
EDM	EDM Disabled	3 O N	[External device monitoring] : Disable
Interlock	Auto Reset	4 ON ON	[Start interlock] : Disable [Restart interlock] : Disable
Operating Range Selection	Long	8 ON	[Operating Range Selection] : Long mode
Standard Muting Mode	N/A		[Muting] : Enable [Muting mode] : Standard Muting (Installation Example1/2)
Exit-Only Muting Mode	N/A		[Muting] : Enable [Muting mode] : Exit-Only Muting
Test Input	N/A		
Wired Synchronization	Connect the emitter and receiver with the Intelligent Tap.		

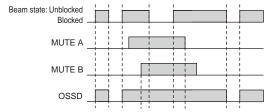


- S1: Lockout reset switch, override switch or override cancel switch
- S2, S3: Muting sensor
- PLC: Programmable logic controller (Used for monitoring only. NOT related to safety system.)
- Reverse the polarity of the power supply when using in the NPN system. Select a PLC and a safety controller of PNP or NPN type according to the system of your application.
- Also used as OVERRIDE INPUT line.
- Make sure to connect an override cancel switch to the RESET line when using the override function. Otherwise the override state may not be released by the override cancel switch, resulting in serious injury.
- When connecting to the PLC, the output mode must be changed with the SD Manager 3 according to your application. Refer to Chapter 4 Setting with SD Manager 3 for more information on setting this function by the SD Manager 3.
- Refer to 6-3. Connectable Safety Control Units for more information.
- The safety controller and the F3SG-SR must share the power supply or be connected to the common terminal of the power supply
- For connecting with the IO-Link Master unit, refer to an instruction manual of the IO-Link Master unit you use
- *8. This is the case for a PELV circuit.




- When using the Intelligent Tap (F39-SGIT-IL3), the following functions are not available.
 - External Test
 - Operating Range Selection by wiring
 - Optical Synchronization
- When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-2-2-4. Standard Muting Mode/Exit-Only Muting Mode with Reset Switch Connector [Wiring Example]

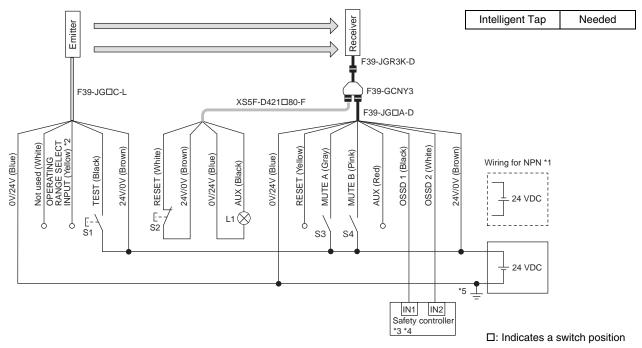

Franction	Setting		
Function	DIP switch		SD Manager 3
EDM	EDM Disabled (factory defa	ault setting)	
Interlock *6	Manual Reset 4 5	ON ON	[Start interlock] : Enable [Restart interlock] : Enable
Operating Range	Long : Open the OPERATIN	G RANGE SEL	ECT INPUT line of the emitter or connect the line to 24 VDC.
Selection	Long *6 8	ON	[Operating Range Selection] : Long mode *6
Standard Muting Mode	N/A		[Muting] : Enable [Muting mode] : Standard Muting (Installation Example 1/2) *6
Exit-Only Muting Mode *6	N/A [Muting] : Enable [Muting mode] : Exit-Only Muting		. 0.
External Test used	Connect the TEST line of the emitter to 24V/0V via a test switch (NO contact). *7		4V/0V via a test switch (NO contact). *7
	N/A		[External test signal inversion] : Disable
Optical Synchronization	Open the COM(+) and COM(-) lines of the emitter.		

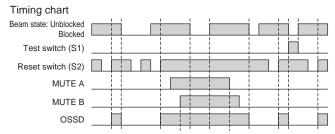

- S1: Test switch
- S2: Lockout/interlock reset switch
- S3: S4: Muting sensor
- L1: Lamp
- Reverse the polarity of the power supply when using in the NPN system. Select a safety controller of PNP or NPN type according to the system of your application.
- Connect the line to 0 VDC if Operating Range Selection is used in Short Mode.
- Refer to 6-3. Connectable Safety Control Units for more information.
- The safety controller and the F3SG-SR must share the power supply or be connected to the common terminal of the power supply.
- This is the case for a PELV circuit.
- Set the function with the DIP Switches on the Intelligent Tap or the SD Manager 3, restore the settings to the F3SG-SR, and perform wiring according to the wiring diagram.
- This is the example for the PNP system to stop emission when the line is connected to 24 VDC and for the NPN to stop emission when the line is connected to 0 VDC. If TEST switch is not needed, refer to 2-6. External Test.



- When using the Reset Switch Connector (F39-GCNY3), the following functions are not available.
 - External Device Monitoring (EDM)
- When a functional earth is necessary, wire an earth cable according to the example in 6-2-1-1. Auto Reset Mode with Optical Synchronization and EDM Unused. Also refer to 5-4-4. Functional Earth Connection for more information.

6-3. Connectable Safety Control Units

The F3SG-SR in the PNP system can be connected to the safety control units listed in the table below.

Connectable safety control units (PNP output)			
Connectable safety control unit G9SA-301 G9SA-321-T□ G9SA-501 G9SB-200-B G9SB-200-D G9SB-301-B G9SB-301-D G9SE-201 G9SE-401 G9SE-221-T□ F3SP-T01	G9SX-AD322-T G9SX-ADA222-T G9SX-BC202 G9SX-GS226-T15	G9SP-N10S G9SP-N10D G9SP-N20S NE0A-SCPU01 NE1A-SCPU01 NE1A-SCPU02 DST1-ID12SL-1 DST1-MD16SL-1 DST1-MRD08SL-1 NX-SIH400 NX-SID800 GI-SMD1624	
		GI-SID1224	

The F3SG-SR in the NPN system can be connected to the safety control unit listed in the table below.

Connectable safety control units (NPN output)	
G9SA-301-P	

For the connection to IO-Link with the Intelligent Tap, the F3SG-SR can be connected to the IO-Link Master unit listed in the table below.

```
Connectable IO-Link Master units*
NX-ILM400
GX-ILM08C
```

^{*} Connectable to units supporting IO-Link Version 1.1.

Chapter 7 Checklists

7-1. Pre-Operation Checklists	334
7-1-1. Checklists	334
7-1-1. Installation Condition Check	334
7-1-1-2. Wiring Check Before Power Is Turned ON	334
7-1-1-3. Operation Check While the Machine Is Stopped	335
7-1-1-4. Checking that Hazardous Parts Stop While the I Operates7-2. Maintenance Checklists	Machine 336 337
7-2-1. Checklists	337
7-2-1-1. Inspection at Startup and When Changing Operat	ors 337
7-2-1-2. Checking that Hazardous Parts Stop While the I Operates	Machine 338
7-2-1-3. Items to Inspect Every 6 Months or When I Settings Are Changed	Machine 338

7-1. Pre-Operation Checklists

MARNING

Make sure Responsible Person tests the operation of the F3SG-SR and F39-SGIT-IL3 after installation to verify that the F3SG-SR and F39-SGIT-IL3 operate as intended. Make sure to stop the machine until the test is complete. Unintended installation, wiring or function settings may cause a person to go undetected, resulting in serious injury.



After installation, the highest level administrator must use the following checklist to verify the operation, placing a check mark in each of the boxes.

7-1-1. Checklists

7-1-1. Installation Condition Check

\square The machine itself does not prevent the operation of safety functions such as stopping.
☐ The hazardous part of a machine cannot be reached without passing through the detection zone of the F3SG-SR.
☐ The system is configured so that the F3SG-SR can always detect a worker who is working in the hazardous zone.
☐ The interlock reset switch is installed in a location that provides a clear view of the entire hazardous zone and it cannot be activated from within the hazardous zone.
☐ The pre-reset switch is installed in a location inside the hazardous zone and where it cannot be operated from outside the hazardous zone.
☐ Safety distance has been calculated. Calculated distance: S = ()mm
☐ Safety distance has been calculated with larger object resolution when the Floating Blanking or Reduced Resolution function is used. Calculated distance: S = ()mm
☐ The actual distance is equal to or greater than the calculated distance. Actual distance = ()mm
☐ Reflective surfaces are not installed in prohibited zones.
☐ Not installed in a retro-reflective configuration.
☐ When the Muting function is used, a muting sensor must be installed so that MUTING state should not occur when a human body enters a detection zone of the F3SG-SR by mistake.
☐ When the Muting function is used, a muting sensor must be installed so that MUTING state should not occur when a human body enters a hazardous zone of a machine.
☐ When the Muting function is used, MUTING state can be checked from where a worker operates or adjust the machine.
☐ A muting sensor consists of two independent devices.
☐ It is not used in flammable or explosive atmosphere.
7-1-1-2. Wiring Check Before Power Is Turned ON
☐ When the power supply unit is connected to multiple devices, the power supply unit must have tolerance against total rated current of the devices.
☐ The power supply unit is a 24 VDC unit that conforms to the EMC Directive, Low-voltage Directive, and output holding time specifications.
☐ The power supply lines are wired with a proper polarity according to the wiring specifications of the PNP or NPN setting.
☐ Emitter/receiver cables are properly connected to the respective emitters/receivers.
☐ Double insulation is used between I/O lines and the hazard potential (commercial power supplies, etc.).

□ When using PNP output, the outputs are not short-circuited to +24 VDC line. When using NPN output, the outputs are not short-circuited to 0 VDC line.
 □ When using PNP output, loads are not connected to +24 VDC line. When using NPN output, loads are not connected to 0 VDC line.
 □ All lines are not connected to commercial power source.
 □ When using the F3SG-SR, the root cable must not be attached to the connector for the Cascading Cable and vice versa.
 □ Model of emitter and receiver must be the same.
 □ When two or more F3SG-SR systems are used, they are in cascade connection or prevented from mutual interference with each other.
 □ On a secondary sensor farthest from its power supply, the following part is attached:

 End Cap
 □ Neither connector, cap, or bracket must be loose.
 □ Auxiliary output must not be used as safety output.
 □ When using PNP output, +24 VDC line of the power supply must not be grounded. When using NPN

7-1-1-3. Operation Check While the Machine Is Stopped

☐ Wiring must not be bent, cracked, nor damaged.

output, 0 VDC line of the power supply must not be grounded.

☐ The test rod is not deformed.

The object resolution may vary depending on the models of the F3SG-SR and settings of the Floating Blanking function or Reduced Resolution function. Use a test rod with an appropriate diameter for inspection. A test rod is not included in the F3SG-SR product package. The model name of test rod is as follows.


Model name	Diameter *
F39-TRD14	Dia. 14 mm
F39-TRD25	Dia. 25 mm

^{*} The customer needs to prepare a test rod lager than 25-mm dia.

☐ The sensor must detect a test rod wherever it is in the detection zone. In other words, when a test rod is inserted into the detection zone, the OSSD indicator turns red.

When the Fixed Blanking function is used, you must ensure that all blanked zones in the detection zone are covered by a hard barrier guard and there must be no zone in the detection zone where the test rod goes undetected.

To check detection, move the test rod as shown in the diagram below.

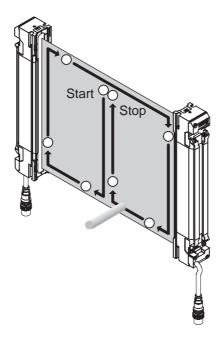

☐ When the External Test function is used: When PNP is selected, the OSSD indicator turns red when the TEST line is short-circuited to 9 V to Vs. When NPN is selected, the OSSD indicator turns red when the TEST line is short-circuited to 0 to 3 V.
□ When the External Device Monitoring function is used: When the RESET line is open the OSSD indicator remains red regardless of the beam state of the F3SG-SR.
□ When the Start Interlock function is used: When the F3SG-SR is turned ON and the F3SG-SR is unblocked, the OSSD indicator remains red. The reset input turns the OSSD indicator to green.
□ When the Restart Interlock function is used: When the OSSD indicator is green and the F3SG-SR is blocked and then returned to unblocked state, the OSSD indicator remains red. The reset input turns the OSSD indicator to green.
☐ When the Muting function is used, minimum muting time limit required must be set.
☐ When the Muting function's operation mode is Exit-Only Muting mode, minimum muting end wait time required must be set.
☐ Under the MUTING state, a signal that indicates the MUTING state must be given from the AUX line.
☐ When the Override function is used, the minimum override time limit required must be set.
☐ Under the OVERRIDE state, a signal that indicates the OVERRIDE state must be given from the AUX line.
7-1-1-4. Checking that Hazardous Parts Stop While the Machine Operates
☐ The hazardous parts stop immediately when a test rod is inserted into the detection zone at 3 positions: "directly in front of the emitter", "directly in front of the receiver", and "between the emitter and receiver". (Use the appropriate test rod.)
☐ The hazardous parts remain stopped as long as the test rod is in the detection zone.
☐ The hazardous parts stop when the power of the F3SG-SR is turned OFF.
☐ The actual response time of the whole machine is equal to or less than the calculated value.

7-2. Maintenance Checklists

⚠ WARNING

Perform daily and 6-month inspections for all F3SG-SR. When using the F3SG-SR in cascade connection, perform inspections for every connected F3SG-SR. Otherwise, the system may fail to work properly, resulting in serious injury.



Do not try to disassemble, repair, or modify the product. Doing so may cause the safety functions to stop working properly.



To ensure safety, keep a record of the inspection results.

When the user is a different person from those who installed or designed the system, he/she must be properly trained for maintenance.

7-2-1. Checklists

7-2-1-1. Inspection at Startup and When Changing Operators

☐ There is no approach route other than through the detection zone of the F3SG-SR.	
□ Part of the operator's body always remains in the detection zone of the F3SG-SR will around the machine's hazardous part.	hen working
☐ The actual safety distance is equal to or greater than the calculated value.	
☐ There must be no dirt on or damage to the front window or Spatter Protection Cover (F3 separately) of the F3SG-SR.	9-HSG, sold
☐ When PNP is selected, the OSSD indicator turns red when the TEST line is short-circuited When NPN is selected, the OSSD indicator turns red when the TEST line is short-circuited	
$\hfill\square$ When the Muting function is used, muting lamp must not be clear due to dirt or degrada	tion.
☐ The test rod is not deformed.	
☐ When the Start Interlock function is used: When the F3SG-SR is turned ON and the F3SG-SR is unblocked, the OSSD indicator of The reset input turns the OSSD indicator to green.	remains red.
☐ When the Restart Interlock function is used: When the OSSD indicator is green and the F3SG-SR is blocked and then returned to state, the OSSD indicator remains red. The reset input turns the OSSD indicator to gree	
☐ When the power of the F3SG-SR is turned ON while nothing is in the detection zone, it n as follows:	nust operate


If Start Interlock is not used: The OSSD indicator turns green within 3 s after the F3SG-SR is turned ON. If Start Interlock is used: The SEQ indicator turns yellow and the OSSD indicator turns red within 3 s after the F3SG-SR is turned ON.

□ Nothing should exist in the detection zone and the OSSD indicator must turn ON (red or green) at power on.

☐ The test rod is detected when it is moved around in the detection zone as shown in the diagram below.

In other words, when a test rod is inserted into the detection zone, the OSSD indicator turns red. When the Fixed Blanking function is used, you must ensure that all blanked zones in the detection zone are covered by a hard barrier guard and there must be no zone in the detection zone where the test rod goes undetected.

The object resolution may vary depending on the models of the F3SG-SR and settings of the Floating Blanking function or Reduced Resolution function. Use a test rod with an appropriate diameter for inspection. A test rod is not included in the F3SG-SR product package.

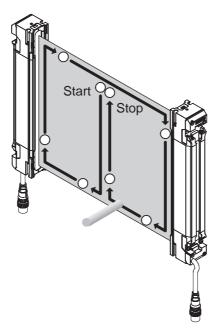

- ☐ When the Muting function is used, installation condition of muting sensor must not be changed.
- ☐ When the Muting function is used, the MUTING state can be checked from where a worker operates or adjust the machine.
- ☐ Neither connector, cap, or bracket must be loose.

7-2-1-2. Checking that Hazardous Parts Stop While the Machine Operates

- ☐ The hazardous parts are movable when nothing is in the detection zone.
- ☐ The hazardous parts stop immediately when a test rod is inserted into the detection zone at 3 positions: "directly in front of the emitter", "directly in front of the receiver", and "between the emitter and receiver". (Use the appropriate test rod.)
- ☐ The hazardous parts remain stopped as long as the test rod is in the detection zone.
- ☐ The hazardous parts stop when the power of the F3SG-SR is turned OFF while nothing is in the detection zone.

7-2-1-3. Items to Inspect Every 6 Months or When Machine Settings Are Changed

In addition to inspection item at operation start, following items must also be verified.

- ☐ The outputs of the F3SG-SR and the machine are properly wired.
- ☐ The total number of times that the control relays/contactors have switched is significantly lower than their design lives.
- ☐ There is no ambient light.
- ☐ Safety distance has been calculated with changed object resolution when the setting of the Floating Blanking or Reduced Resolution function is changed.
 - Calculated distance: S = ()mm

- ☐ When the Muting function setting is changed, a muting sensor must be installed so that the MUTING state should not occur when a human body enters a detection zone of F3SG-SR by mistake. ☐ When the Muting function setting is changed, a muting sensor must be installed so that the MUTING state should not occur when a human body enters a hazardous zone of a machine. ☐ When the Muting function setting is changed, a muting sensor must consist of 2 independent devices. ☐ When the configuration of the cascade connection is changed, the following part is attached on a secondary sensor farthest from its power supply: - End Cap ☐ When using PNP output, +24 VDC line of the power supply must not be grounded. When using NPN output, 0 VDC line of the power supply must not be grounded.
- ☐ Wiring must not be bent, cracked, nor damaged.

Chapter 8 Appendix

3-	1. Troubleshooting	342
	8-1-1. LED Indicators (F3SG-SR)	342
	8-1-2. LOCKOUT State	343
	8-1-2-1. Description	343
	8-1-2-2. Troubleshooting	344
	8-1-3. Warning	349
	8-1-3-1. Description	349
	8-1-2-2. Troubleshooting	344
	8-1-3-3. Muting Sequence Error Indication	350
	8-1-3-4. Interlock Sequence Error Indication	351
	8-1-3-5. PSDI Sequence Error Indication	352
	8-1-4. Troubleshooting for Intelligent Tap	353
	8-1-5. Troubleshooting for Bluetooth® Communication Unit	356
3-	2. Optional Accessories (Sold Separately)	357
3-	3. Glossary	365
3-	4. Revision History	369


8-1. Troubleshooting

8-1-1. LED Indicators (F3SG-SR)


■ F3SG-SR Series

<Emitter>

F3SG-□SR□□□□□-14

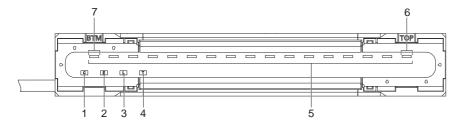


F3SG-USRUUUUU-25/-45/-85

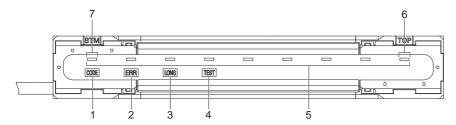


1	Scan code
2	Lockout
3	Operating range
4	Test
5	Area Beam Indicator (ABI) *1
6	Top-beam-state *2
7	Bottom-beam-state *2

<Receiver>
F3SG-□SR□□□□□-14

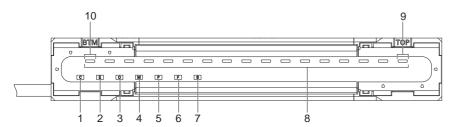

F3SG-USRUUUUU-25/-45/-85

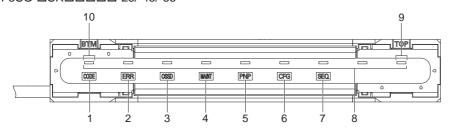


1 Scan code
2 Lockout
3 ON/OFF
4 Maintenance
5 PNP/NPN mode
6 Configuration
7 Sequence
8 Area Beam Indicator (ABI) *1
9 Top-beam-state *2
10 Bottom-beam-state *2

- *1. For the F3SG-□SRA only.
- *2. For the F3SG-□SRB only.

LED Blinking Pattern:

The timing chart below shows the blinking frequency of the LED blinking patterns (blinking once through seven times) described in the following pages.

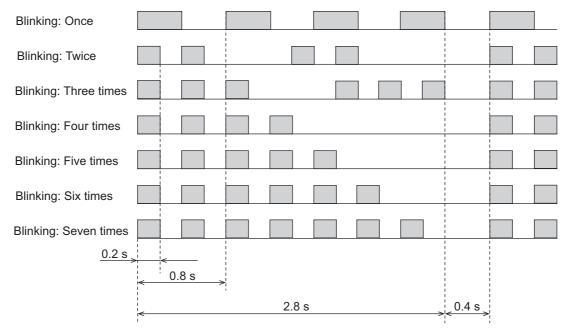

You can check error and warning logs by the Maintenance Information function using the SD Manager 3 or the SD Manager 3 Mobile APP.

Refer to Chapter 4 Setting with SD Manager 3 for more information on checking error and warning logs by the SD Manager 3 or the SD Manager 3 Mobile APP.

8-1-2. LOCKOUT State

8-1-2-1. Description

If the F3SG-SR detects any failure, it keeps the safety outputs in the OFF state and transitions to the LOCKOUT state. Under the LOCKOUT state, the ERR indicator blinks and other indicators blink based on the failure. Solve the problems based on the table below.

Eliminate the cause of the problem. Then turn the power ON again or reset the LOCKOUT state by providing a reset input to restart the F3SG-SR.

8-1-2-2. Troubleshooting

Identify an error according to the combination of the indicators when the error occurs. See the following troubleshooting tables to take measures.



<Indicator status at lockout: Receiver> Combination of indicators and error description

ERR indicator	MAINT indicator	Other indicators	Error description
		or OSSD	Safety Output error
		P or PNP	Error due to change of PNP/NPN polarity during operation
ERR Blinking once [Error description] Recoverable error or MAINT Red blinking: Replacement-recommended error	[Error description]	F or CFG	Blanking monitoring error Configuration error Parameter error
	or Red blinking :	TOP *1 -	Cap error Other sensor error
	BTM *2 -	DIP Switch setting error	
or - ERR Blinking twice		or OSSD	Safety output error due to power supply voltage or noise
or		_	Communication error External device monitoring error Error other than those above
_	or Orange blinking -	_	Intelligent Tap error

- *1. For F3SG-SRA, the Area Beam Indicator closer to the "TOP" mark on the F3SG-SR blinks. *2. For F3SG-SRA, the Area Beam Indicator closer to the "BTM" mark on the F3SG-SR blinks.

<Indicator status at lockout: Emitter> Combination of indicators and error description

ERR indicator	Other indicators	Error description	
or - ERR Blinking once	or LONG	Operating range selection setting error	
	TOP -	Cap error Other sensor error	
	BTM *2 *3 -	DIP Switch setting error	
	_	Communication error Error other than those above	

- *1. For F3SG-SRA, the Area Beam Indicator closer to the "TOP" mark on the F3SG-SR blinks. *2. For F3SG-SRA, the Area Beam Indicator closer to the "BTM" mark on the F3SG-SR blinks.
- *3. The indicator blinks only in the case the Wired Synchronization is enabled and is off in the case the Optical Synchronization is enabled.

	Checking by			
Description	Indicator	SD Manager 3/ SD Manager 3 Mobile APP	Error code (HEX)*	Cause and measures
Safety output error	X	X	60, 6B, 6C	The OSSD lines may be short-circuited to each other or another signal line may be short-circuited to the OSSD line. Wire the OSSD lines properly.
				Chapter 5 Wiring and Installation
			56	The polarity does not match between the power supply and the OSSD lines. Check if a correct polarity is selected for the PNP/NPN setting according to your application. Also check: • if the power supply (0 VDC or 24 VDC) of the Intelligent Tap and F3SG-SR is wired as intended. • if the OSSD lines are properly wired.
Recoverable error	Х	-	-	The error may occur due to a temporary cause. Identify the cause by the status of the other LED indicator and take measures.
Replacement-recommended error				The error may occur due to a product failure. If the measure according to the status of the other LED indicator does not work, it is recommended to replace the F3SG-SR.
Intelligent Tap error	X	-	-	An error due to noise may have occurred in the internal circuit of the Intelligent Tap. Check the noise level in the environment.
				The internal circuit of the Intelligent Tap may be defective. Replace the Intelligent Tap.
Error due to change of PNP/NPN polarity during operation	X	Х	E7	An error due to noise may have occurred in the internal circuit. Check the noise level in the environment.
				The internal circuit may be defective. Replace the F3SG-SR.
Blanking monitoring error	X	X	EC	An error is detected by the Fixed Blanking Monitoring function or the Floating Blanking Monitoring function. See Chapter 2 "Fixed Blanking" or "Floating Blanking" to solve the problem.
				2-15. Fixed Blanking
				2-16. Floating Blanking
Configuration error	X	X	39, 3A, 3B	The cascading cable may be short-circuited, broken, or disconnected. Check that the cascading cable should be tightly connected. If the cascading cable is broken, replace it.
				The number of connected sensors or beams may have exceeded the maximum value due to cascading. Check the configuration.
			3C, 3E, 3F	A model name does not match between emitter and receiver. Check that the emitter and receiver are the same model.

	Checking by									
Description	Indicator	SD Manager 3/ SD Manager 3 Mobile APP	Error code (HEX)*	Cause and measures						
Configuration error	X	X	34	An error may have occurred to the internal information of the model name of the F3SG-SR due to effect of noise.						
				If other devices using the same power supply generate noise, do not share the same power supply with other devices, and use a separate power supply exclusively for the safety components.						
				The inductive noise tends to be induced especially if the power supply line of the machine guarded and the power supply line of the Intelligent Tap are arranged in parallel. Arrange the exclusive power supply near the Intelligent Tap or lay the power supply line of the Intelligent Tap away from the power supply line of the machine guarded.						
				If the power supply for the Intelligent Tap is located near the power supply of the machine guarded and it shares the same grounding wire, it is subject to the influence of common mode noise. Separate the grounding point or use it as the exclusive ground.						
				5-4-4. Functional Earth Connection						
				An error may have occurred in the internal circuit. Replace the F3SG-SR.						
Parameter error	Х	Х	F1	The settings do not match between the Intelligent Tap and F3SG-SR. Perform the Backup.						
			40	The settings of the F3SG-SR may be faulty. Check if the settings are correct.						
Cap error	Х	Х	4F	A cap may be detached. Attach the cap properly.						
Other sensor error	Х	X	38	Other sensor being cascaded caused an error. Check the indicator of the sensor.						
DIP Switch setting error	Х	Х	E7, E8	A DIP Switch on the Intelligent Tap setting may have been changed during operation. Check if a DIP Switch setting was changed or not.						
Communication error	-	Х	30, 32	The communication lines or other lines may be short-circuited or broken. Check if the cascading or extension cables. If the cascading cable or extension cables is broken, replace it.						
			31	An error may have occurred to the communication due to effect of noise.						
				If other devices using the same power supply generate noise, do not share the same power supply with other devices, and use a separate power supply exclusively for the safety components.						
										The inductive noise tends to be induced especially if the power supply line of the machine guarded and the power supply line of the Intelligent Tap are arranged in parallel. Arrange the exclusive power supply near the Intelligent Tap or lay the power supply line of the Intelligent Tap away from the power supply line of the machine guarded.
				If the power supply for the Intelligent Tap is located near the power supply of the machine guarded and it shares the same grounding wire, it is subject to the influence of common mode noise. Separate the grounding point or use it as the exclusive ground.						
				5-4-4. Functional Earth Connection						
				An error may have occurred in the internal circuit. Replace the F3SG-SR.						

	Checking by			
Description	Indicator	SD Manager 3/ SD Manager 3 Mobile APP	Error code (HEX)*	Cause and measures
Safety output error due to power supply voltage or noise	X	X	19	The power supply voltage may have dropped temporarily when the F3SG-SR is in operation. Check for temporary power supply voltage drop (by about 12 VDC) by the influence of the inductive load, etc. If the exclusive power supply is not used, check the power consumption of other connected devices for enough capacity.
				Power supply voltage may be outside the rated range. Connect the F3SG-SR to a 24 VDC±20% power supply voltage.
				Voltage fluctuation may have occurred due to insufficient power supply capacity. Replace the power supply with one that has a larger capacity.
				Instantaneous break or instantaneous stop may have occurred due to power sharing with other devices. Do not share the power supply with other devices. Connect the F3SG-SR to a power supply that is dedicated to electrosensitive protective devices for electro-sensitive protective equipment such as the F3SG-SR, safety controller, etc.
			1A	Effect of noise may be excessive.
				If other devices using the same power supply generate noise, do not share the same power supply with other devices, and use a separate power supply exclusively for the safety components.
				The inductive noise tends to be induced especially if the power supply line of the machine guarded and the power supply line of the F3SG-SR are arranged in parallel. Arrange the exclusive power supply near the F3SG-SR or lay the power supply line of the F3SG-SR away from the power supply line of the machine guarded.
				If the power supply for the F3SG-SR is located near the power supply of the machine guarded and it shares the same grounding wire, it is subject to the influence of common mode noise. Separate the grounding point or use it as the exclusive ground.
				5-4-4. Functional Earth Connection
Operating range selection setting error	Х	Х	ЕВ	The setting of the operating range selection may be incorrect. • When the Intelligent Tap is connected, check if the Operating Range Selection of the DIP Switch is properly set. • When the Intelligent Tap is not connected, check if the Operating Range Select Input line is properly wired.
				2-20. Operating Range Selection
				Chapter 3 Setting with Intelligent Tap
				5-4-3-11. Reduced Wiring Connector System with Y-Joint Plug/Socket Connector

	Chec	Checking by		
Description	Indicator SD Mana	SD Manager 3/ SD Manager 3 Mobile APP	Error code (HEX)*	Cause and measures
External device monitoring error	-	Х	52	Relay may be welded. Replace the relay.
	*2			The relay and the RESET line may not be properly wired. Check the wiring with the relay.
				2-11. External Device Monitoring (EDM)
				The relay response time may be exceeding the allowable delay time. Change the allowable delay time or replace the relay with one that has an appropriate response time.
				2-11. External Device Monitoring (EDM)
				4-3-2-1. Interlock/External Device Monitoring (EDM)/PSDI
Error other than those above	- *2	Х	Error code other than those above	An error may have occurred in the internal circuit. Replace the F3SG-SR.

^{*1.} You can check the error codes by SD Manager 3 or SD Manager 3 Mobile APP.

^{*2.} Other indicators than the ERR and MAINT indicators are not illuminated. For details of the error, refer to [Code] and [Error description] displayed in [Error Log] in the SD Manager 3.

8-1-3. Warning

8-1-3-1. Description

If an error is detected that prevents the F3SG-SR to continue normal operation, the SEQ indicator or Area Beam Indicator (ABI) blinks to notify warning information according to the error. The F3SG-SR continues normal operation. In the Auto Reset mode, the F3SG-SR automatically recovers from the warning status when the cause of the error is solved. In the Manual Reset mode, the F3SG-SR keeps the safety outputs in the OFF state. A reset signal is required to release the INTERLOCK state in this mode.

8-1-3-2. Troubleshooting

Identify an error according to the combination of the indicators when the error occurs. See the following troubleshooting tables to take measures.



<Indicator status at warning: Receiver *1>

Combination of indicators and error description

ERR indicator	MAINT indicator	Other indicators	Error description
	M or MAINT	or CFG S or -	Teach-in error
or ERR		or -\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Muting sequence error, Interlock sequence error or PSDI sequence error
	or Orange -	Area Beam Indicator Green	Malfunction due to ambient light or vibration
		Area Beam Indicator Orange	Low incident light level

^{*1} In the warning state, no indicators on the emitter are illuminated or blink.

^{*2} There are several illumination patterns to identify a faulty sequence.

	Checking by		Warning	
Description	Indicator	SD Manager 3/ SD Manager 3 Mobile APP	r 3/ code er 3 (HEX)*1	Cause and measures
Teach-in error	Х	Х	ED	Teach-in failed. Perform the Teach-in again.
				3-7. Teach-in (Fix Blanking / Floating Blanking)
Muting sequence error	X	Х	2C, 2D, 2F	Muting input may have been applied in the incorrect order. Check the pattern of illumination of the LED indicator to identify the cause. 8-1-3-3. Muting Sequence Error Indication
Interlock sequence error	Х	-	-	When using the Pre-reset function, the reset signals for interlock may be input in the wrong order. Check the pattern of illumination of the LED indicator to identify the cause. 8-1-3-4. Interlock Sequence Error Indication

	Checking by		Warning	
Description	Indicator	SD Manager 3/ SD Manager 3 Mobile APP	code (HEX)*1	Cause and measures
PSDI sequence error	X	Х	2A, 2B	PSDI input may have been applied in the correct order. Check if the pattern of illumination of the LED indicator to identify the cause. **Besides of the correct order.** **Besides of the LED indicator to identify the cause.** **Besides of the LED indicator to identify the left t
Malfunction due to ambient light or vibration	-	X (SD Manager 3 Mobile APP is not applicable) *2	-	Malfunction may have occurred due to ambient light or instantaneous beam misalignment from vibration. Check the installation condition. Take necessary measures against mutual interference according to "5-1-4. Mutual Interference Prevention".
Low incident light level	Х	Х	12	The incident light level may be low due to dirty front window or misaligned beams caused by vibration. Clean the front window and check the alignment of the beams. Take necessary measures for this according to 5-3-5. Beam Alignment Procedure. 5-3-5. Beam Alignment Procedure
Low communications quality	- *3	Х	F0	Retries of communications may have been generated due to noise. Check the noise level in the proximity of the communication lines.
				Retries of communications may have been generated due to short-circuit of the communication lines. Check the cables connected.

^{*1.} You can check the error codes by SD Manager 3 or SD Manager 3 Mobile APP.

2-28. Instantaneous Block Detection and 4-4-3-5. Instantaneous Block Detection Information.

8-1-3-3. Muting Sequence Error Indication

The following table is applied only when the muting function is being enabled.

SEQ indicator	Cause and measures
	Power supply may have been turned ON with muting input A or B being ON. Check the condition of the muting sensors and the F3SG-SR.
	Muting input B may have been turned ON before muting input A was turned ON. Check the condition of the muting sensors.
- Blinking: Once	Muting input A and B may have been turned ON at the same time. • Check the arrangement of the muting sensors. • Check if the wiring of muting input A and B is short-circuited.
	Either muting input A or B may have been turned ON with the F3SG-SR being blocked or INTERLOCK State. Check the condition of the F3SG-SR.
- Blinking: Twice	Muting input B may have been turned ON within T1min (= 0.1 s *) after muting input A was turned ON. • Check that if the muting sensors are installed too close each other. • Check that if the speed of the workpiece is too fast.
	It may have taken T1max (= 4 s *) or longer for muting input B to be turned ON after muting input A was turned ON. • Check that if the muting sensors are installed too far each other. • Check that if the speed of the workpiece is too slow.
	The F3SG-SR may have been blocked after muting input A was turned ON but before muting input B was turned ON. Check the condition of the F3SG-SR.

^{*2.} You can check by instantaneous block detection logs in [Instantaneous Block Detection Information].

^{*3.} The indicators are not illuminated. For details of the warning, refer to [Code] and [Warning description] displayed in [Warning Log] in the SD Manager 3.

SEQ indicator	Cause and measures
- Blinking: Four times	The F3SG-SR may have been blocked within 0.08 s after muting input A and B were normally turned ON. • Check that if the muting sensor and the F3SG-SR are installed too close each other. • Check that if the speed of the workpiece is too fast.
	Muting may have been released after the F3SG-SR entered the MUTING state but before a workpiece blocked the F3SG-SR. • Check that the workpiece still remains. • Check that the speed of the workpiece is too slow.
- Blinking: Five times	The F3SG-SR entered the MUTING state, but muting may have then been released while a workpiece passes through the F3SG-SR. • Check that the workpiece still remains. • Check that if the speed of the workpiece is too slow. • Check that the muting sensors have been installed upstream and downstream of the F3SG-SR with the size of workpieces taken into account. (Using four muting sensors)
- Blinking: Six times	Muting may have been released with muting input A and B remained ON after a workpiece passed through the F3SG-SR. • Check that the workpiece still remains. • Check that the speed of the workpiece is too slow.
- Blinking: Seven times	The next muting sequence may have started after muting was released but before the initial muting condition was established. • Check that if a next workpiece has not entered before the current workpiece passes through the F3SG-SR. • Check that if the interval between workpieces are too narrow.

^{*} Factory default setting

8-1-3-4. Interlock Sequence Error Indication

The following table is applied only when the pre-reset function is being enabled.

SEQ indicator	Cause and measures			
- Blinking: Once	The reset or pre-reset switch may have been pressed before the F3SG-SR receives light. Check the wiring of the reset and pre-reset signals.			
	The F3SG-SR may have been blocked or the pre-reset switch may have been pressed before the pre-reset switch is pressed. Check the status of the F3SG-SR and the wiring of the pre-reset signal.			
- Blinking: Twice	After the pre-reset switch was pressed, the pre-reset or reset switch may have been pres before the F3SG-SR is blocked. Check the installation environment of the F3SG-SR.			
- Blinking: Three times	After the pre-reset switch was pressed and the F3SG-SR was blocked, the pre-reset switch may have been pressed before the reset switch is pressed. Check the wiring of the pre-reset signal.			
	After the pre-reset switch was pressed, a time period from the block of the F3SG-SR to the press of the reset switch may have exceeded the allowable time. Check the installation environment of the F3SG-SR as well as pre-reset and reset switches.			
	The number of blocks of the F3SG-SR may have exceeded the allowable value after the pre- reset switch was pressed and before the reset switch is pressed. Check the installation environment of the F3SG-SR.			

8-1-3-5. PSDI Sequence Error Indication

The following table is applied only when the PSDI function is being enabled.

SEQ indicator	Error condition	Cause and measures		
	•	Power supply may have been turned ON with PSDI input being OFF. Check the condition of the light curtains and PSDI input wiring.		
	•	Power supply may have been turned ON with the light curtain blocked. Check the condition of the light curtains and PSDI input wiring.		
	•	Power supply may have been turned ON with RESET input being OFF. Check the condition of the light curtains and RESET input wiring.		
- Blinking: Once	•	PSDI input may have been turned OFF before RESET input was turned OFF. Check the PSDI input wiring.		
	•	The light curtain may have been blocked before RESET input was turned ON. Check the condition of the light curtains and RESET input wiring.		
	•	The PSDI input may have turned OFF while the RESET input is OFF. Check the condition of the light curtains and PSDI input wiring.		
	•	The light curtain may have been blocked before RESET input was turned ON. Check the condition of the light curtains and RESET input wiring.		
	•	After RESET input , the light curtain may not be blocked longer than T2 and the PSDI input may have turned OFF. Check the condition of the light curtains and RESET input wiring.		
- Blinking: Twice	•	The PSDI input may have turned OFF with the light curtain blocked. Check the condition of the light curtains and PSDI input wiring.		
	0	PSDI input may have turned OFF before the light curtain blocked twice. Check the condition of the light curtains and PSDI input wiring.		
Diaking, Three times	•	The light curtain was blocked before the PSDI input turned OFF. Check the condition of the light curtains and PSDI input wiring.		
- Blinking: Three times	•	The light curtain was blocked while the PSDI input turned OFF. Check the condition of the light curtains and PSDI input wiring.		
	•	PSDI input may have turned OFF during the period from when the PSDI state is cancelled until the light curtain blocked. Check the condition of the light curtains and PSDI input wiring.		
	•	The PSDI input may have turned OFF with the light curtain blocked. Check the condition of the light curtains and PSDI input wiring.		
	0	It may have taken T4 (= 30 s) or longer for PSDI input to be turned OFF after the light curtain blocked. Check the condition of the light curtains and PSDI input wiring.		
- Blinking: Four times	0	It may have taken T6 (= 30 s) or longer for PSDI input to be turned OFF after the light curtain blocked. Check the condition of the light curtains and PSDI input wiring.		
	0	The PSDI input may have turned OFF again before the light curtain blocked. Check the condition of the light curtains and PSDI input wiring.		
	0	It may have taken T6 (= 30 s) or longer for PSDI input to be turned OFF after the light curtain blocked twice. Check the condition of the light curtains and PSDI input wiring.		
	0	PSDI input may have turned OFF before the light curtain blocked again. Check the light curtain status and PSDI input wiring.		


Notations

O...Single Break

O...Double Break

...Common

8-1-4. Troubleshooting for Intelligent Tap

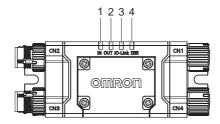

1	IN
2	OUT
3	IO-Link
4	ERR

If the Intelligent Tap detects any failure, it transitions to the LOCKOUT state. Under the LOCKOUT state, the ERR indicator is turned ON. Identify an error according to the combination of the indicators when the error occurs. See the following troubleshooting tables to take measures.









Combination of indicators and error description

				- I
ERR (Red)	IN (Yellow)	OUT (Green/Red)	IO-Link (Green)	Error description
-)	_		_	Communication error DIP Switch circuit error at startup
			_	Communication error in Backup
-)		Green	_	Communication error in Restoration
		Red	_	Communication error between the F3SG-SR and the Intelligent Tap
-1		Green	_	Restoration failed
		-\(\begin{align*} -\emptyred -\em	_	LOCKOUT state of the F3SG-SR
	_			IO-Link circuit error
		_		Power supply voltage error, or other errors

, , , , ,

- The signals output to IO-Link or IN and OUT indicators show the statuses of the F3SG-SR/PG or Intelligent Tap except their LOCKOLIT state
- The muting inputs A and B are kept in the OFF state when the LOCKOUT state occurs due to the power supply voltage error.

	Chec	king by		
Description	Indicator	SD Manager 3/ SD Manager 3 Mobile APP	Error code (HEX)*	Cause and measures
Communication error	х	Х	1D	The communication lines or other lines may be short-circuited or broken. Check the cables for cascading or extension cables. If the wiring is extended with cables other than specified, the cables used for extension may not have performance equivalent or greater than the specified cables. Use cables with the same performance or more than the specified cables.

	Checking by			
Description	Indicator	SD Manager 3/ SD Manager 3 Mobile APP	Error code (HEX)*	Cause and measures
Communication error in Backup	X	X	1E	The communication lines or other lines may be short-circuited or broken. Check the cables for cascading or extension cables. If the wiring is extended with cables other than specified, the cables used for extension may not have performance equivalent or greater than the specified cables. Use cables with the same performance or more than the specified cables. Effect of noise may be excessive. If other devices using the same power supply generate noise, do not share the same power supply with other devices, and use a separate power supply exclusively for the safety components. The inductive noise tends to be induced especially if the power supply line of the machine guarded and the power supply line of the Intelligent Tap are arranged in parallel. Arrange the exclusive power supply near the Intelligent Tap or lay the power supply line of the Intelligent Tap away from the power supply line of the machine guarded. If the power supply for the Intelligent Tap is located near the power supply of the machine guarded and it shares the same grounding wire, it is subject to the influence of common mode noise. Separate the grounding point or use it as the exclusive ground.
Communication error in Restoration	X	X	1F	The internal circuit of the Intelligent Tap may be defective. Replace the Intelligent Tap. The communication lines or other lines may be short-circuited or broken. Check the cables for cascading or extension cables. If the wiring is extended with cables other than specified, the cables used for extension may not have performance equivalent or greater than the specified cables. Use cables with the same performance or more than the specified cables.
				Effect of noise may be excessive. If other devices using the same power supply generate noise, do not share the same power supply with other devices, and use a separate power supply exclusively for the safety components. The inductive noise tends to be induced especially if the power supply line of the machine guarded and the power supply line of the Intelligent Tap are arranged in parallel. Arrange the exclusive power supply near the Intelligent Tap or lay the power supply line of the Intelligent Tap away from the power supply line of the machine guarded. If the power supply for the Intelligent Tap is located near the power supply of the machine guarded and it shares the same grounding wire, it is subject to the influence of common mode noise. Separate the grounding point or use it as the exclusive ground. Lie 5-4-4. Functional Earth Connection The internal circuit of the Intelligent Tap may be defective. Replace the Intelligent Tap.

	Checking by					
Description	Indicator	SD Manager 3/ SD Manager 3 Mobile APP	Error code (HEX)*	Cause and measures		
Communication error between the F3SG-SR and the Intelligent Tap	Х	-	-	The F3SG-SR may be disconnected from the Intelligent Tap, the communication line of the F3SG-SR may be broken, or the internal circuit of the Intelligent Tap may be defective. Check the connection and cable wiring between the Intelligent Tap and the F3SG-SR. In the case of defective internal circuit, replace the Intelligent Tap.		
F3SG-SR LOCKOUT state	Х	-	-	The F3SG-SR is in the LOCKOUT state. For details of the error of the F3SG-SR, check the indicator status or error code of the F3SG-SR. 8-1-2. LOCKOUT State		
Restoration failed	X	-	-	The sensor configuration (sensor model, connection configuration, etc.) stored in the Intelligent Tap by the Backup process does not match the sensor configuration of the connected F3SG-SR. Connect the F3SG-SR with the same sensor configuration as the backed-up sensor configuration. Error codes are not recorded. When performing the Restoration of the F3SG-SR with a different sensor configuration of other than the number of beams, perform the Backup of the connected F3SG-SR and then perform the Restoration again. Refer to 3-6. Backup/Restoration for more information on the Backup and Restoration procedures.		
Power supply voltage error, or other errors	. X X	A3	The muting inputs A and B are kept in the OFF state when the LOCKOUT state occurs due to the power supply voltage error. The power supply voltage may have dropped temporarily when the F3SG-SR is in operation. Check for temporary power supply voltage drop (by about 12 VDC) by the influence of the inductive load, etc. If the exclusive power supply is not used, check the power consumption of other connected devices for enough capacity.			
				Power supply voltage may be outside the rated range. Connect the F3SG-SR to a 24 VDC±20% power supply voltage.		
				Voltage fluctuation may have occurred due to insufficient power supply capacity. Replace the power supply with one that has a larger capacity.		
				Instantaneous break or instantaneous stop may have occurred due to power sharing with other devices. Do not share the power supply with other devices. Connect the F3SG-SR to a power supply that is dedicated to electro-sensitive protective devices for electro-sensitive protective equipment such as the F3SG-SR, safety controller, etc.		
DIP Switch circuit error at startup	Х	Х	ВС	The internal circuit may be defective. Replace the Intelligent Tap.		
IO-Link circuit error	Х	Х	BD	The internal circuit may be defective. Replace the Intelligent Tap.		
Internal error	Х	Х	Others	The internal circuit may be defective. Replace the Intelligent Tap.		

^{*} You can check the error codes by SD Manager 3 or SD Manager 3 Mobile APP.

8-1-5. Troubleshooting for Bluetooth® Communication Unit

See the following troubleshooting table to take measures if any of the phenomena in the table occurs when in the connection with the Bluetooth® Communication Unit.

Status	Measures
Communications cannot	Check if Bluetooth® Communication Unit is properly mounted.
be established	Check if Bluetooth® function is enabled on the device you use for SD Manager 3.
	Check if Bluetooth® Communication Unit is not being paired with another device.
	Check if Bluetooth® Communication Unit and the device you use for SD Manager 3 are properly paired (or the connection is verified). *
	Check if Bluetooth® function of the device you use for SD Manager 3 supports SPP (Serial Port Profile).
	Check if a COM port is properly configured.
	Check the noise level in the environment.
	Check if there is any device that uses 2.4 GHz band.
	Check if there is any obstruction between Bluetooth® Communication Unit and the device you use for SD Manager 3. The maximum permissible line-of-sight distance is approximately 10 m.
	The F3SG-SR is under the SETTING state. Turn OFF and ON the power of the F3SG-SR.
Files cannot be read from the outside while the	The sensor model in the saved file does not match the sensor model in the file that you are about to read in. Check the sensor model.
sensor is connected	If a file is saved by SD Manager 3 of a newer version than your SD Manager 3, the file is not usable on your SD Manager 3. Check the SD Manager 3 version.
F3SG-SR does not go back to normal state after terminating SD Manager 3	Restart F3SG-SR. If SD Manager 3 does not operate normally even after restarted, use the setup recovery function to restore to the factory default settings again.

^{*} The procedure depends on the device you use for SD Manager 3. Refer to instruction manuals of the device.

8-2. Optional Accessories (Sold Separately)

Adjustable Side-Mount Bracket (Intermediate Bracket)

Appearance	Appearance Model		Remarks
	F39-LSGA	Bracket to mount the F3SG-SR. Beam alignment after mounting possible. The angle adjustment range is ±15°. Side mounting and backside mounting possible.	A set of 2 brackets.

Adjustable Top/Bottom Bracket (F3SJ, F3SN Adapter)

Appearance	Model	Application	Remarks
	F39-LSGTB-SJ	Bracket to mount the F3SG-SR. Use this bracket at the top and bottom positions of the F3SG-SR. Beam alignment after mounting possible. The angle adjustment range is ±22.5°. Side mounting and backside mounting possible. Use this bracket when replacing an existing F3SJ or F3SN Safety Light Curtain with F3SG-SR.	A set of 2 brackets.

Adjustable Top/Bottom Bracket (F3SG-RA/RE Adapter)

Appearance	Model	Application	Remarks
	F39-LSGTB-RE	Bracket to mount the F3SG-SR. Use this bracket at the top and bottom positions of the F3SG-SR. Beam alignment after mounting possible. The angle adjustment range is ±22.5°. Side mounting and backside mounting possible. Use this bracket when replacing an existing F3SG-RA/RE Safety Light Curtain with F3SG-SR.	A set of 2 brackets.

Adjustable Top/Bottom Bracket (MS4800, F3SR Adapter)

Appearance	Model	Application	Remarks
	F39-LSGTB-MS	Bracket to mount the F3SG-SR. Use this bracket at the top and bottom positions of the F3SG-SR. Beam alignment after mounting possible. The angle adjustment range is ±22.5°. Side mounting and backside mounting possible. Use this bracket when replacing an existing MS4800 or F3SR Safety Light Curtain with F3SG-SR.	A set of 2 brackets.

Root-Straight Cable for Emitter

Appearance	Model	Cable length	Remarks
	F39-JG3C-L	3 m	To sensor: dedicated connector, To external: open-ended type 5 wires
£0	F39-JG7C-L	7 m	
	F39-JG10C-L	10 m	

Root-Straight Cable for Receiver

Appearance	Model	Cable length	Remarks
	F39-JG3C-D	3 m	To sensor: dedicated connector, To external: open-ended type 8 wires
£0	F39-JG7C-D	7 m	
	F39-JG10C-D	10 m	

Root-Plug Cable for Extended for Emitter

Appearance	Model	Cable length	Remarks
	F39-JGR3K-L	0.3 m	To sensor: dedicated connector, To external: M12 connector type (8-pin)

Root-Plug Cable for Extended for Receiver

Appearance	Model	Cable length	Remarks
	F39-JGR3K-D	0.3 m	To sensor: dedicated connector, To external: M12 connector type (8-pin)

Extended Socket-Straight Cable for Emitter

Appearance	Model	Cable length	Remarks
	F39-JG3A-L	3 m	M12 connector (5-pin), 5 wires
	F39-JG10A-L	10 m	

Extended Socket-Straight Cable for Receiver

Appearance	Model	Cable length	Remarks
	F39-JG3A-D	3 m	M12 connector (8-pin), 8 wires
	F39-JG10A-D	10 m	

Extended Plug-Socket Cable for Emitter

Appearance	Model	Cable length	Remarks
	F39-JG3B-L	3 m	M12 connector (5-pin) on both ends
	F39-JG10B-L	10 m	
	F39-JG20B-L	20 m	

Extended Plug-Socket Cable for Receiver

Appearance	Model	Cable length	Remarks
	F39-JG3B-D	3 m	M12 connector (8-pin) on both ends
	F39-JG10B-D	10 m	
	F39-JG20B-D	20 m	

Cascading Cable for Extended (Two cables per set, for emitter and receiver)

Appearance	Model	Cable length	Remarks
	F39-JGR3W	0.3 m	For emitter To sensor: dedicated connector, To cascading sensor: M12 connector type (5 pin) For receiver To sensor: dedicated connector, To cascading sensor: M12 connector type (8 pin)

Side-by-side Cascading Cable (Two cables per set, for emitter and receiver)

Appearance	Model	Cable length	Remarks
£()	F39-JGR12L	12 cm	For emitter To sensor: dedicated connector 1, To cascading sensor: dedicated connector 2 For receiver To sensor: dedicated connector 1, To cascading sensor: dedicated connector 2

F3SJ-B/A Conversion Cable

Appearance	Model	Cable length	Remarks
	F39-JGR3K-SJ-L	0.3 m	For emitter (F39-JGR3K-SJ-L) To sensor: dedicated connector 1, To wires for F3SJ-B/-A: M12 connector type (8 pin) For receiver (F39-JGR3K-SJ-D) To sensor: dedicated connector 1, To wires for F3SJ-B/-A: M12 connector type (8 pin) Used to convert the wiring for F3SJ-B/-A,F3SR-B or F3SN Safety Light Curtain to that for the F3SG-SR.

F3SG-RE Conversion Cable

Appearance	Model	Cable length	Remarks
	F39-JGR3K-RE-L	0.3 m	For emitter (F39-JGR3K-RE-L) To sensor: dedicated connector 1, To wires for F3SG-RE: M12 connector type (4 pin) For receiver (F39-JGR3K-RE-D) To sensor: dedicated connector 1, To wires for F3SG-RE: M12 connector type (4 pin) Used to convert the wiring for F3SG-RE Safety Light Curtain to that for the F3SG-SR.

MS48 Conversion Cable

Appearance	Model	Cable length	Remarks
	F39-JGR3K-MS-L F39-JGR3K-MS-D	0.3 m	For emitter (F39-JGR3K-MS-L) To sensor: dedicated connector 1, To wires for MS4800: M12 connector type (5 pin) For receiver (F39-JGR3K-MS-D) To sensor: dedicated connector 1, To wires for MS4800: M12 connector type (8 pin) Used to convert the wiring for MS4800 Safety Light Curtain to that for the F3SG-SR.

Intelligent Tap

Appearance	Model	Application	Remarks
	F39-SGIT-IL3	Used to configure the F3SG-SR and connect external devices via IO-Link.	Material: PBT resin (Body parts)

Intelligent Tap Bracket

Appearance	Model	Application	Remarks
	F39-LITF1	Bracket to mount the Intelligent Tap on a DIN track.	Material: PBT resin (Body parts)

Root-Straight Cable for IO-Link

Appearance	Model	Application	Remarks
	XS5F-D521-DJ0-IL	2 m	M12 connector (5-pin), 5 wires. Used to connect an Intelligent Tap to an IO-Link Master unit of Push-in Terminal Block type.

Bluetooth® Communication Unit

Appearance	Model	Application	Remarks
	F39-SGBT	Mounted to the Intelligent Tap to connect with the SD Manager 3 via Bluetooth.	Material: PBT resin (Body parts)

Y-Joint Plug/Socket Connector

Appearance	Model	Application	Remarks
	F39-GCNY2	0.5 m	M12 connectors Used for reduced wiring.

Reset Switch Connector

Appearance	Model	Application	Remarks
	F39-GCNY3	3 m	M12 connectors. Used for reduced wiring when connecting to a reset switch.

Connector Connected to Cable, Socket on One Cable End

Appearance	Model	Application	Remarks
	XS5F-D421-C80-F	1 m	M12 connector (4-pin), 4 wires.
	XS5F-D421-D80-F	2 m	Used to connect a reset switch connector to a reset switch.
	XS5F-D421-E80-F	3 m	
	XS5F-D421-G80-F	5 m	
	XS5F-D421-J80-F	10 m	
	XS5F-D421-L80-F	20 m	

Muting Sensor

Appearance	Model	Sensing method / output type	Sensing distance
	E3Z-T66A	Through-beam/NPN output	10 m
	E3Z-T86A	Through-beam/PNP output	10 m
ি স	E3Z-R66	Retroreflective/NPN output	2 m
	E3Z-R86	Retroreflective/PNP output	2 m
Ħ	E39-R1S	Retroreflective/Reflectors	2 m

Laser Alignment Kit

Appearance	Model	Application	Remarks
	F39-PTG	You can attach this to F3SG-SR. The laser light assists coarse beam alignment.	Red semiconductor laser (wavelength 650 nm, 1 mW max., JIS Class 2, IEC Class 2, FDA Class II)

Test Rod

Appearance	Model	Diameter
	F39-TRD14 F39-TRD25	14 mm dia. 25 mm dia.



To check operation before use, purchase and use the test rod.

Spatter Protection Cover (two pieces per set)

Appearance	Model	Remarks
	F39-HSG□□□□	Two pieces per set, common for emitter/receiver. For the F3SG-R of the protective height of 2,000 mm or longer, use two Spatter Protection Covers of different lengths. Please note the following: • The operating range of the F3SG-SR attached with the Spatter Protection Cover is 10% shorter than the rating. Material: PC resin (Transparent cover), ABS resin (Side wall)

Ε

Control Unit

Appearance	Model	Output	Remarks
	G9SA-301 G9SA-321-T075 G9SA-321-T15 G9SA-321-T30	Safety output (relay): NO contact x 3 Auxiliary output (relay): NC contact x 1	• An F39-JG□C Root-Straight Cable or the combination of an F39-JGR3K Root-Plug Cable for Extended and an F39-JG□A
	G9SA-501	Safety output (relay): NO contact x 5 Auxiliary output (relay): NC contact x 1	Single-Ended Cable is required. • An F3SG-SR in PNP system can be connected.

Control Unit

Appearance	Model	Output	Remarks
	G9SA-301-P	Safety output (relay): NO contact x 3 Auxiliary output (relay): NC contact x 1	An F39-JG□C Root-Straight Cable or the combination of an F39-JGR3K Root-Plug Cable for Extended and an F39-J□GA Single-Ended Cable is required. An F3SG-SR in NPN system can be connected.

Control Unit

Appearance	Model	Output	Remarks
	G9SB-301-B	Safety output (relay): NO contact x 3 Auxiliary output (relay): NC contact x 1 Auto reset	 An F39-JG□C Root-Straight Cable or the combination of an F39-JGR3K Root-Plug Cable for Extended and an F39-JG□A Single-Ended Cable is required.
	G9SB-301-D	Safety output (relay): NO contact x 3 Auxiliary output (relay): NC contact x 1 Manual reset	 An F3SG-SR in PNP system can be connected.
	G9SB-200-B	Safety output (relay): NO contact x 2 Auto reset	
	G9SB-200-D	Safety output (relay): NO contact x 2 Manual reset	

Control Unit

Appearance	Model	Output	Remarks
	G9SX-AD322-T15	Safety output (solid-state): source output (PNP) x 3 (instantaneous), source output (PNP) x 2 (OFF-delayed) Auxiliary output (solid-state): source output (PNP) x 2	An F39-JG□C Root-Straight Cable or the combination of an F39-JGR3K Root-Plug Cable for Extended and an F39-JG□A Single-Ended Cable is required. An F3SG-SR in PNP system can be connected. 16 patterns of OFF-delayed output for up to 15 s can be set. The OFF-delayed output can be used as instantaneous output by setting it to 0 s. Can be configured for partial control and total control. Can be extended to connect a relay unit.

Control Unit

Appearance	Model	Output	Remarks
	G9SP-N10S	Safety output (solid-state): source output (PNP) x 4 Test output (solid-state): source output (PNP) x 4 Standard output (solid-state): source output (PNP) x4	An F39-JG□C Root-Straight Cable or the combination of an F39-JGR3K Root-Plug Cable for Extended and an F39-JG□A Single-Ended Cable is required. An F3SG-SR in PNP system can
	G9SP-N10D	Safety output (solid-state): source output (PNP) x 16 Test output (solid-state): source output (PNP) x 6	be connected.
	G9SP-N20S	Safety output (solid-state): source output (PNP) x 8 Test output (solid-state): source output (PNP) x 6	

Control Unit

Appearance	Model	Application	Specifications
	NX-SIH400	Safety input (solid-state): sink input (PNP) x 4 Test output (solid-state): source output (PNP) x 2	An F39-JG□C Root-Straight Cable or the combination of an F39-JGR3K Root-Plug Cable for Extended and an F39-JG□A
	NX-SID800	Safety input (solid-state): sink input (PNP) x 8 Test output (solid-state): source output (PNP) x 2	 Single-Ended Cable is required. An F3SG-SR in PNP system can be connected.

Control Unit

Appearance	Model	Application	Specifications
THE STATE OF	G9SE-201	Safety output (relay): NO contact x 2 (instantaneous) Auxiliary output (solid-state): source output (PNP) x 1	 An F39-JG□C Root-Straight Cable or the combination of an F39-JGR3K Root-Plug Cable for Extended and an F39-JG□A Single-Ended Cable is required. An F3SG-SR in PNP system can be connected. For G9SE-221-T□, 16 patterns of OFF-delayed output for up to 5 or 30 s can be set.
	G9SE-401	Safety output (relay): NO contact x 4 (instantaneous) Auxiliary output (solid-state): source output (PNP) x 1	
	G9SE-221-T□	Safety output (relay): NO contact x 2 (instantaneous), NO contact x 2 (OFF-delayed) Auxiliary output (solid-state): source output (PNP) x 1	

Control Unit

Appearance	Model	Output	Remarks
	GI-SMD1624	Safety output (solid-state): source output (PNP) x 4 Test output (solid-state): source output (PNP) x 12	An F39-JG□C Root-Straight Cable or the combination of an F39-JGR3K Root-Plug Cable for Extended or an F39-JG□A Single-Ended Cable is required. An F3SG-SR in PNP system can be connected.
	GI-SID1224	No safety output Test output (solid-state): source output (PNP) x 12	

IO-Link Master Unit

Appearance	Model	Number of IO-Link ports	Remarks
	NX-ILM400	4	I/O connection terminals: screwless clamping terminal block An F39-JG□C Root-Straight Cable or the combination of an F39-JGR3K Root-Plug Cable for Extended and an XS5F-D521-DJ0-IL Single-Ended Cable is required. An F39-SGIT-IL3 Intelligent Tap is required to connect to IO-Link.

IO-Link Master Unit

Appearance	Model	Number of IO-Link ports	Remarks
	GX-ILM08C	8	I/O connection terminals: M12 connector (A-cording, female) An F39-JGR3K Root-Plug Cable for Extended and an F39-JG□B-L Double-Ended Cable are required. An F39-SGIT-IL3 Intelligent Tap is required to connect to IO-Link.

8-3. Glossary

	Term	Description
Α	Accumulated load switching frequency	Total number of operations of a load to be connected to the F3SG-SR, from when the F3SG-SR is first energized until the present time.
	Allowable Beams	Dynamic Muting: Area(s) (or beam(s)) to be added in a Dynamic Muting zone, in order to prevent an accidental interruption of the F3SG-SR due to vibration.
		Fixed/Floating Blanking: Beam(s) in a Blanking zone, that are not monitored by the Blanking Monitoring function.
	Allowable delay time	The allowable amount of time difference from when the state of the Safety outputs changes until the state of an external relay changes. The F3SG-SR enters the LOCKOUT state if this time is exceeded.
	Auto reset mode	Mode that disables Start Interlock and Restart Interlock. The Safety outputs are turned ON when no object is detected in the detection zone.
	Auxiliary output	Function to give output signal according to the settings. This must not be used for safety applications.
В	Blanking zone	Area in the detection zone of the F3SG-SR, where the Fixed Blanking or the Floating Blanking is enabled.
С	Configuration Tool	Setting tool that allows the user to make settings to the F3SG-SR with a PC.
D	Designated beam output	Function to signal the state of user-designated beam(s) to the Auxiliary output or Lamp. To use the function, target beam(s) must be designated.
	Designated beam output information	Information on the beam state of user-designated beam(s) to be signaled to the Auxiliary output or Lamp. To signal the information, the Designated beam output information must be assigned to an output destination.
	Dynamic muting	Function to configure a new muting zone after muting is enabled based on a result measuring a workpiece height for a certain period of time.
Е	Effective aperture angle (EAA)	Range of angles in which the F3SG-SR can operate.
	Excess power-on time information	Information to be signaled to the Auxiliary output or Lamp when the power-on time exceeds the power-on time threshold value. To signal the information, the Power-On Time information must be assigned to an output destination.
	Exit-only muting delay time	Time difference from when the signal of Muting input A or B is turned OFF until the Muting state is cancelled.
	Exit-only muting mode	Muting mode to be used for such an application where objects move from the inside to the outside of the hazardous zone.
	External device monitoring function (EDM)	Function to monitor the operation of an N.C. contacts of external relays (or contactors) that control the hazardous zone of a machine, for any malfunctions such as welding.
	External test	Function that stops emission at a specified time to check that the Safety outputs are being properly turned OFF.
F	Fixed blanking	Function to disable part of the detection zone of the F3SG-SR and keep the Safety outputs in the ON state even if an object blocks the disabled detection zone.
	Fixed blanking monitoring function	Function to bring the F3SG-SR in the LOCKOUT state when part of the Fixed Blanking zone is unblocked.
	Floating blanking	Function to disable a specified number of beams in the detection zone of the F3SG-SR, and keep the Safety outputs in the ON state even if an object smaller than the dimension of the specified number of beams blocks the F3SG-SR.
	Floating blanking monitoring function	Function to bring the F3SG-SR in the LOCKOUT state if the number of blocked beams is smaller than specified.
I	Interlock	Information to be signaled to the Auxiliary output or Lamp when the F3SG-SR is in the Interlock is state. To signal the information, the Interlock information must be assigned to an output destination.
	Interlock Information	Provides output through auxiliary output if interlock input is ON. Note that interlock information must be assigned to the destination.


	Term	Description
	Interlock reset	Cancels the INTERLOCK state.
	Inverted signal output mode	In this mode, the logic of the Auxiliary output signal is reversed.
L	Light level diagnosis information	Information to be signaled to the Auxiliary output or Lamp when the Safety output is in the ON state and when the incident light level is from 100% to 170% of the ON-threshold value for 10 seconds or more. To signal the information, the Light Level Diagnosis information must be assigned to an output destination.
	Light level monitoring	Function to read out the light level of incident light or ambient light on the F3SG-SR.
	Load switching frequency	Function to display the number of operations of a load to be connected to the F3SG-SR. The number is counted from when the number was last reset until the present time.
	Lockout	Function to keep the Safety outputs in the OFF state when an error is detected by the F3SG-SR.
	Lockout information	Information to be signaled to the Auxiliary output or Lamp when an error or lockout occurs. To signal the information, the Lockout information must be assigned to an output destination.
	Lower beam(s)	Beams located toward the Power Cable of the F3SG-SR.
М	Maintenance information	Function to read the maintenance information of the F3SG-SR and view it on a PC screen, with the Configuration Tool.
	Manual reset mode	Function to enable the Start Interlock and Restart Interlock. The Safety outputs are turned ON by applying a reset signal when there is no object in the detection zone.
	Maximum allowable muting signal interruption	Maximum duration of a signal interruption allowed in Muting inputs A and B.
	Muting	Function to temporarily disable the safety function of the F3SG-SR and keep the Safety outputs in the ON state even if the F3SG-SR is blocked.
	Muting end wait time	Time difference from when the F3SG-SR is unblocked until the Muting state is cancelled.
	Muting input time limit value (maximum)	Maximum time difference between Muting inputs A and B.
	Muting input time limit value (minimum)	Minimum time difference between Muting inputs A and B.
	Muting key cap	Connector to be attached to the end cap of an emitter or receiver to use the Muting function.
	Muting sensor	Input device, such as photoelectric sensor or proximity sensor, to give an input signal for notifying the start and end of the Muting function.
	Muting sequence error	An error that occurs when muting signal is not received in the correct order. The Safety outputs keep in the ON state unless the F3SG-SR is blocked.
	Muting time limit	The duration time of the Muting function. The Muting state is cancelled if it continues for longer than this time limit.
N	Number of floating beams	Number of beams to be configured in the Floating Blanking zone, for which the F3SG-SR does not transition to the LOCKOUT state or Machine Stop state (Safety output OFF) even when blocked.
0	Object resolution (Detection capability)	Minimum size of an object that can be detected in the protective height of the F3SG-SR.
	Operating range selection	Function to change the operating range by changing the emission light level of the F3SG-SR.
	Operating status monitoring	Function to read out the I/O data and status of functions of the F3SG-SR.
	Output operation mode	Information to be signaled to an output part (Safety output, Auxiliary output).
	Override	Function that forcibly turns the Safety outputs ON when the Muting is not working.
	Override input time limit (maximum)	Input time limit (maximum value) of the special sequence to activate the Override function.
	Override time limit	The duration time of the Override function. The Override state is cancelled if it continues for longer than this time limit.

	Term	Description
Р	PELV	Protected Extra Low Voltage. A grounded circuit separated by double insulation or equivalent from hazardous voltage. It does not generate voltage that exceeds ELV under normal conditions and under single-fault conditions. Normally, protection against direct contact is required.
	PNP/NPN Selection	Function to select the safety output type between PNP and NPN.
	Position detection muting mode	Mode that enables the Muting function according to the position of a hazardous source such as a robot arm, using heterogeneous redundant inputs.
	Power-on time	Function to display the period of time when the F3SG-SR is energized, starting from when the power-on time was last reset until the present time.
	Power-on time reset	Function to reset the power-on time of the F3SG-SR to 0. In the case of cascade connection, the power-on time can be reset for each cascaded segment of the F3SG-SR.
	Power-on time threshold value	When the power-on time exceeds this value, an output is signaled to the Auxiliary output or Lamp. To signal the information, the Power-On Time information must be assigned to an output destination.
	Pre-Reset	One of the INTERLOCK reset functions. Interlock state can be released only in the sequence that the operator operates the Pre-reset switch installed in the hazardous zone and leave the hazardous zone, and then operates the Reset switch outside the hazardous zone.
	Pre-Reset state	The F3SG-SR under this state is allowed to be blocked after the input of the Pre- Reset signal is ensured. When the number of times the F3SG-SR is blocked is set to infinite, the F3SG-SR stays in this state until the Reset input signal is received.
	Primary sensor	Name used for the F3SG-SR to be connected nearest the power supply, when in cascade connection.
R	Reduced resolution	Function to change the size of the object resolution so that an object of the size between 1 and 3 beams has no effect.
	Reset	Function to release the INTERLOCK state or LOCKOUT state.
	Response time adjustment	Function to change the response time so that the Safety outputs can hardly be turned OFF due to accidental interruption by an environmental factor.
	Response time from ON to OFF	Period of time from when the F3SG-SR is blocked until the Safety outputs are turned from ON to OFF.
	Restart interlock	Function to turn the Safety outputs to the OFF state when the F3SG-SR is blocked and keep this state until a reset signal is received.
S	Safety output (OSSD)	Output to be turned to the ON state when safety is ensured. This can be used for safety applications.
	Safety output information	Information to be signaled to the Auxiliary output or Lamp when the Safety outputs are in the ON state. To signal the information, the Safety output information must be assigned to an output destination.
	SD Manager 3	Setting software that is used as the Configuration Tool for the F3SG-SR. It allows the user to make settings to or monitor the operation of the F3SG-SR when the F3SG-SR is connected to the PC via the Intelligent Tap or Bluetooth® Communication Unit.
	Secondary sensor	Name used for other segments of F3SG-SR's than the primary sensor, when in cascade connection.
	SELV	Safety Extra Low Voltage. An ungrounded circuit separated by double insulation or equivalent from hazardous voltage. It does not generate voltage that exceeds ELV under normal conditions and under single-fault conditions. If the nominal voltage exceeds 25 VAC or 60 VDC, protection against direct contact is required.
	SETTING recovery	Function to restore the factory settings of the F3SG-SR.
	SETTING state	Status of the F3SG-SR when settings are being performed with the Configuration Tool. In this state, the Safety outputs are in the OFF state.
	Standard muting mode	Muting mode to be used for such an application where a muting sensor is positioned on both sides of the F3SG-SR. The factory default setting is this mode.
	Start interlock	Function to turn the Safety outputs to the OFF state at power-on or recovery from power failure and keep this state until a reset signal is received.

	Term	Description	
Т	Teach-in	Function to configure target beams of the following functions by blocking the beams Fixed Blanking - Floating Blanking	
	Troubleshooting support signal	Information to be signaled to the Auxiliary output or Lamp when any one of a Muting Sequence Error, Interference/Vibration Information and Light Level Diagnosis Information signals is in the ON state. To signal the information, the Troubleshooting Support signal must be assigned to an output destination.	
U	Upper beam(s)	Beams located toward the terminal of the F3SG-SR.	
V	Vs	Power supply voltage value in your usage environment.	
W	Warning zone function	Function to configure part of the detection zone, in which the Safety outputs are not affected by the beam state. The blocked state of the Warning zone can be signaled to the Auxiliary output. This function must not be used for safety applications.	
	Warning zone information	Information to be signaled to the Auxiliary output or Lamp when the Warning zone is blocked. To signal the information, the Warning Zone information must be assigned to an output destination.	

8-4. Revision History

A manual revision code appears as a suffix to the manual number at the bottom of the front and back covers of this manual.

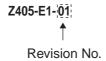

Revision symbol	Revision date	Revisions
01	May 2019	First edition

Industrial Automation Company OMRON Corporation

Kyoto, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands
Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD.
No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC

2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower,

200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2019 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

Printed in Japan Cat. No. Z405-E1-01 0519(-)