

OMRON

Type G9SX-NSA222-T03-□ Type G9SX-NS202-□

Non-contact Door Switch Controller

English USER'S MANUAL

Thank you for purchasing G9SX-NS□ Non-contact Door Switch Controller.

Please read and understand this manual before using the products.

Keep this manual ready to use whenever needed. Only qualified person trained in professional electrical technique should handle G9SX-NS□.

Please consult your OMRON representative if you have any questions or comments. Make sure that information written in this document are delivered to the final user of the product.

OMRON Corporation

0631752-31

EU Declaration of Conformity

OMRON declares that G9SX-NS□ is in conformity with the requirements of the following EU Directives:
- Machinery Directive 2006/42/EC
- EMC Directive 2004/108/EC

Standards

G9SX-NS□ is designed and manufactured in accordance with the following standards:

- EN954-1 Cat. 3 (with D40A) / Cat. 4 (with D40Z)
- EN ISO 13849-1:2008
- IEC 3 PL d (with D40A) / Cat. 4 PL e (with D40Z)
- IEC/EN61508 SIL3,
- IEC/EN61000-6-2, - IEC/EN61000-6-4,
- UL508, - UL1998,
- CAN/CSA C22.0 No.142

Precautions for Safe Use

Meanings of Signal Words

The following signal words are used in this manual.

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.



WARNING

Meaning of Alert Symbols

The following alert symbols are used in this manual.



Indicates prohibited actions.



Indicates mandatory actions.

Alert Statements

WARNING

Serious injury may possibly occur due to breakdown of safety outputs.

Serious injury may possibly occur due to loss of required safety functions.

Serious injury may possibly occur due to damages of safety inputs.

Serious injury may possibly occur due to loss of safety functions.

Use appropriate devices referring to the information provided below.

Controlling Devices	Requirements
Emergency stop switch	Use approved devices with Direct Opening Mechanism complying with IEC/EN 60947-5-1
Door interlocking switch	Use approved devices with Direct Opening Mechanism complying with IEC/EN 60947-5-1 and capable of switching micro loads of 24VDC, 5mA
Limit switch	G9SX-NS□ must be used with Non-contact Door Switch Type D40A/D40Z series.
Relay with forcibly guided contacts	Use approved devices with forcibly guided contacts complying with EN 50205.
Contactors	For feedback purpose use devices with contacts capable of switching micro loads of 24VDC, 5mA. Failure to open contacts of a contactor cannot be detected by monitoring its auxiliary NC contact without forcibly guided mechanism.
Other devices	Evaluate whether devices used are appropriate to satisfy the requirements of safety category level.


Precautions for Safe Use

- Use G9SX-NS□ within an enclosure with IP54 protection or higher according to IEC/EN60529
- Incorrect wiring may lead to loss of safety function. Wire conductors correctly and verify the operation of G9SX-NS□ before using the system in which G9SX-NS□ is incorporated.
- Do not apply DC voltages exceeding the rated voltages, nor any AC voltages to G9SX-NS□.
- Use DC supply satisfying requirements below to prevent electric shock.
- DC power supply with double or reinforced insulation, for example, according to IEC/EN60950 or EN50179 or a transformer according to IEC/EN61558.
- DC supply satisfies the requirement for class 2 circuits or limited voltage/current circuit stated in UL 508.
- Apply properly specified voltages to G9SX-NS□ inputs.
Applying inappropriate voltages cause G9SX-NS□ to fail to perform its specified function, which leads to the loss of safety functions or damages to G9SX-NS□.
- Auxiliary error outputs and auxiliary monitoring outputs are NOT safety outputs. Do not use auxiliary outputs as any safety output. Such incorrect use causes loss of safety function of G9SX-NS□ and its relevant system.
- Also logical connection outputs can only be used for logical connections between G9SX-NS.
- After installation of G9SX-NS□, qualified personnel should confirm the installation, and should conduct test operations and maintenance. The qualified personnel should be qualified and authorized to secure the safety on each phases of design, installation, running, maintenance and disposal of system.
- A person in charge, who is familiar to the machine in which G9SX-NS□ is to be installed, should conduct and verify the installation.
- Perform daily and 6-month inspections for the G9SX-NS□. Otherwise, the system may fail to work properly, resulting in serious injury.
- Do not dismantle, repair, or modify G9SX-NS□. It may lead to loss of its safety functions.
- Use only appropriate components or devices complying with relevant safety standards corresponding to the required level of safety category. Conformity to requirements of safety category is determined as an entire system. It is recommended to consult a certification body regarding assessment of conformity to the required safety level.

- OMRON shall not be responsible for conformity with any safety standards regarding to customer's entire system.
- Disconnect G9SX-NS□ from power supply when wiring. Devices connected to G9SX-NS□ may operate unexpectedly.
- Be cautious not to have your fingers caught when attaching terminal sockets to the plugs on G9SX-NS□.
- Do not operate the D40A/D40Z with flammable or explosive gas.


Precautions for Correct Use

- Connection with Non-contact Door Switch
Wire conductors between G9SX-NS□ and Non-contact Door Switch D40A/D40Z correctly and verify the operation, before committing the system.
- Handle with care.
Do not drop G9SX-NS□ to the ground or expose to excessive vibration or mechanical shocks. G9SX-NS□ may be damaged and may not function properly.
- Conditions of storage and usage
Do not store or use in such conditions stated below.
1) In direct sunlight
2) At ambient temperatures out of the range of -10 to 55 °C
3) At relative humidity out of the range of 25 to 85% or under such temperature change that causes condensation.
4) In corrosive or combustible gases
5) With vibration or mechanical shocks out of the rated values.
6) Under splashing of water, oil, chemicals
7) In the atmosphere containing dust, salt or metal powder.
G9SX-NS□ may be damaged and may not function properly.
- Mounting
Mount G9SX-NS□ to DIN rails with attachments (Type PFP-M, not incorporated to this product), not to drop out of rails by vibration etc, especially when the length of DIN railing is short compared to the widths of G9SX-NS□.
- Following spacing around G9SX-NS□ should be available to apply rated current to outputs of G9SX-NS□ and for enough venting during wiring.

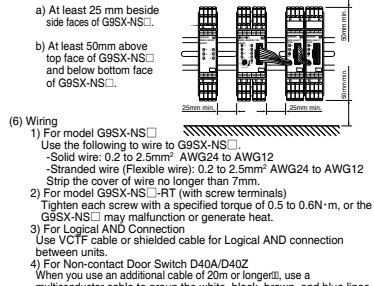

- Wiring
 - For model G9SX-NS□
Use the following to wire to G9SX-NS□.
- Solid wire: 0.2 to 2.5mm² AWG24 to AWG12
- Stranded wire (flexible wire): 0.2 to 2.5mm² AWG24 to AWG12
Strip the cover of wire no longer than 7mm.
 - For model G9SX-NS□-RT (with screw terminals)
Tighten each screw with a specified torque of 0.5 to 0.6N·m, or the G9SX-NS□ may malfunction or generate heat.
 - For Logical AND connection
Use VCTF cable or shielded cable for Logical AND connection between units.
 - For Non-contact Door Switch D40A/D40Z
When you use an additional cable of 20m or longer, use a multiconductor cable to group the white, black, brown, and blue lines together. †
- When connecting Expansion Units (G9SX-EX□) to G9SX-NSA222-T03□:
 - Follow the procedure below:
 - Remove the termination connector from the receptacle on G9SX-NSA222-T03□.
 - Insert the head of the connecting cable of Expansion Unit to the receptacle on the G9SX-NSA222-T03□.
 - Set the termination connector to the receptacle on the Expansion Unit at the end and position. When G9SX-NSA222-T03□ is used without expansion units, leave the termination connector set on the G9SX-NSA222-T03□.
 - Do not remove the termination connector while the system is operating.
 - Before applying supply voltage, confirm that the connecting sockets and plugs are locked firmly.
 - All of the Expansion Units should be supplied with its specified voltages within 10s after the connected G9SX-NSA222-T03□ is supplied with voltages. Otherwise, G9SX-NSA222-T03□ detects the power-supply error for the Expansion Units.
- Use cables with length 100m or less to connect to Safety Inputs, Non-contact Door Switch input, Feedback/Reset inputs, or between Logical AND connection inputs and Logical connection outputs, respectively.
- Set the time duration of Off-delay to an appropriate value that does not cause the loss of safety function of system.
- Logical Connections:
 - When using Logical AND connection inputs, set the Logical connection preset switch to 'AND' position for the units which the logical connection signal are input to.
 - Connect logical connection outputs appropriately to Logical AND connection inputs of the relevant unit. Verify the operation of G9SX-NS□ before commissioning the system.
 - When configuring the safety related system, be sure to consider that the delay of response time caused by logical connections do not degrade the safety function of the system.
 - To determine safety distance to hazards, take into account the delay of Safety outputs caused by the following time:
 - Response time of Safety input
 - Response time of Non-contact door switch (D40A/D40Z) inputs
 - Response time of Logical AND connection input (See also "Ratings and specifications, notes")
 - Preset off-delay time
 - Accuracy of off-delay time
 - Start entire system after more than 5s has passed since applying supply voltage to all G9SX-NS in the system.
- Devices connected to G9SX-NS□ may operate unexpectedly. When using a DC power supply with light curtains, use DC power supply which has no interruption by a power failure of 20ms.
- Devices connected to G9SX-NS□ may operate unexpectedly. When replacing G9SX-NS□, disconnect it from power supply.
- Adhesion of solvent such as alcohol, thinner, trichloroethane or gasoline on the product should be avoided. Such solvents make the marking on G9SX-NS□ illegible and cause deterioration of parts.
- This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take

Appearance and Explanation of Each Parts

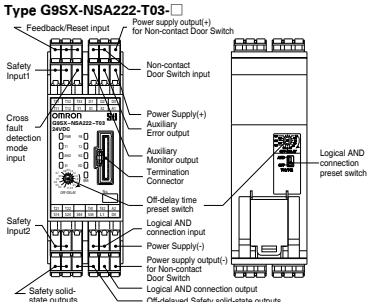

Settings indication (at power on)


Settings for G9SX-NS□ can be checked by indicators for approx. 3 seconds after power on. During the settings indication time, ERR indicator will light up, however the auxiliary error output will remain off.

Indicator	Items	Setting position	Indicator status	Setting mode	Setting status
T1	Cross fault detection mode (Type 0100-0402/0403)	Y1 terminal	light up	detection mode	Y1 = open
		not lit	not	non-detection mode	Y1 = 24VDC
		light up	manual reset mode	T33 = 24VDC	
FB	Reset mode (T32 or T33 terminal)	not lit	not	auto reset mode	T32 = 24VDC
		light up	enable Logical AND input	'AND'	
AND	Logical AND connection input mode	not lit	not	disable Logical AND input	'OFF'
		light up	enable Logical AND input		

LED Indicators


Marking	Color	Name	Function
PWR	Green	Power Supply Indicator	- Lights up while power is supplied.
ERR	Red	Error Indicator	- Lights up or blinks corresponding to the occurring error (†)
Y1	Orange	Error input #1 Indicator	- Blinks when error relating to Safety input #1 occurs. (†)
		Safety input #2 Indicator	- Blinks when error relating to Safety input #2 occurs. (†)
AND	Orange	Logical AND input Indicator	- Lights up while high signal is input to T41. - Blinks when error relating to Logical AND connection input occurs. (†)
		Non-contact Door Switch input Indicator	- Lights up while high signal is input to D2. - Blinks when error relating to Non-contact Door Switch input occurs. (†)
FB	Orange	Feedback/Reset input Indicator	- Lights up in the following cases: - With automatic reset while high signal is input to T33 - With manual reset while high signal is input to T32 - Blinks when an error relating to Feedback/Reset input occurs. (†)
		Safety output indicator	- Lights up while Safety solid-state outputs (S14, S24) are in ON-state. - Blinks when an error relating to Safety solid-state output occurs. (†)
E1	Orange	Safety output indicator	- Lights up while Safety off-delayed solid-state outputs (S44, S54) are in ON-state. - Blinks when an error relating to Safety off-delayed solid-state output occurs. (†)
		Off-delayed Safety output Indicator	

Internal Connection

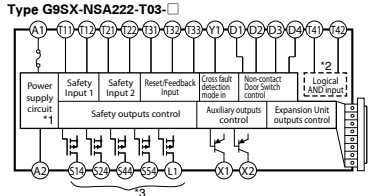

- *1 Internal power supply circuit is not isolated.
- *2 Logical AND input is isolated.
- *3 The Safety solid-state outputs, S14-S54, are internally redundant, respectively.

Type G9SX-NS202-□

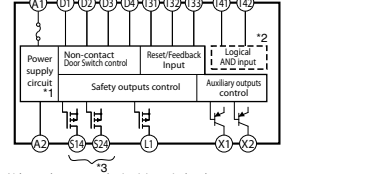

- *1 Internal power supply circuit is not isolated.
- *2 Logical AND input is isolated.
- *3 The Safety solid-state outputs, S14 and S24, are internally redundant, respectively.

Ratings and Specifications

Item	TYPE G9SX-NSA222-T03-□		TYPE G9SX-NS202-□	
	Rated supply voltage	Operating voltage range	Rated power consumption	Emergency stop input
Power input	24VDC	15% to +10% of rated supply voltage	4 W Max.	3 W Max.
Inputs	Emergency stop input	Operating Voltage: 20.4VDC to 26.4VDC. Internal impedance: approx. 2.8kohm (See Note2)		P channel MOS FET output Load current: 0.8A DC Max.(See Note4.5)
Outputs	Safety solid-state output (See Note3)	Off-delayed safety solid-state output (See Note3)		PNP transistor output Load current: 100mA Max.
	Auxiliary output			


Specifications and Performance

Item	TYPE G9SX-NSA222-T03-□	TYPE G9SX-NS202-□
Over voltage category (IEC/EN 60664-1)	II	II
Operating time (OFF to ON state)(See Note6,7)	Safety input Logical AND connection input	50ms Max. 100ms Max.
Response time (ON to OFF state) (See Note6)	Non-contact door switch input	100ms Max.
Response time (ON to OFF state) (See Note6)	Safety input	15 ms Max.
ON-state residual voltage	Logical AND connection input	15 ms Max.
OFF-state Leakage current	Non-contact door switch input	20 ms Max. (See note8)
Maximum cable length for Logical connection input, Safety inputs and Non-contact Door Switch input		3.0 V Max.
Number of units connected per one Logical connection output.		0.1 mA Max.
Total number of units connected with Logical connection		100m Max. (Permissible impedance of inputs : 100ohm Max and 10nF Max)
Number of units connected in series with Logical connection		4 units Max. (See Note9)
Total number of non-contact door switches		20 units Max. (See Note9.10)
Accuracy of Off-delay time		5 units Max. (See Note9)
Reset input time		30 switches Max.
Vibration resistance		Within plus or minus 0.5% of the set value
Mechanical shock resistance		100ms Min.
Ambient temperature		Frequency: 10 to 55 to 10Hz. Amplitude: 0.375mm half amplitude (0.75mm double amplitude)
Ambient humidity		300 ms² (detection), 100 ms² (malfunction)
Terminal tightening torque		-10 to +55 °C (No freezing or condensation) 25 to 85 %RH
Weight		0.5Nm (Applicable only to TYPE G9SX-NS□-RT: screw terminal model) Approx. 200g

Isolation specifications

Item	TYPE G9SX-NSA222-T03-□ / G9SX-NS202-□
Insulation resistance	- Between Logical AND connection terminals, and Power supply input terminals and other input and output terminals connected together. - Between all terminals connected together and DIN rail.
Dielectric strength	- Between Logical AND connection terminals, and Power supply input terminals and other input and output terminals connected together. - Between all terminals connected together and DIN rail.

- Note:
 - Power consumption of loads and non-contact door switches is not included.
 - Ensure that the current exceeds the minimum applicable load of the device connected.
 - While safety outputs are at its ON state, signal sequence shown below is output continuously for diagnosis. When using the safety outputs as input signals to control devices (e.i. programmable controller), consider the off pulse below.

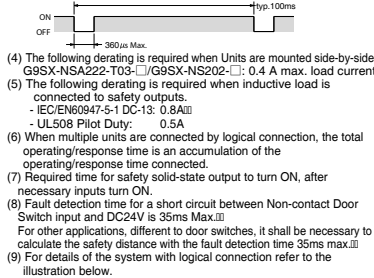


Preset Switches


Change the value of the preset switches only when G9SX-NS□ is disconnected from power supply. The states of the preset switches come into effect when the power supply to G9SX-NS□ turns on.

Name	Sets Logical AND Connection Inputs to valid or invalid. (2)	State/Value (position of switch)
Logical AND Connection Input	Valid (valid)	OFF (Invalid; default setting)/ AND (valid)
Off-delay Time Preset Switch	Presets Off-delay Time (duplicate) (3), (4)	0 (default setting value) / 0.2,0.3,0.4,0.5,0.6,0.7,0.8,0.9,1.0 / 1.21,1.41,2.02,2.53,0 (s) (5)

- Note:
 - See "Fault Detector" for details.
 - When operating G9SX-NS□ using Logical AND Connection function, be sure to set the preset switch to AND (valid) position for the units which the logical input signal is input to. When the switch is set to OFF (invalid) position, it is detected as a fault.
 - Set both of the two Off-delay Time Preset Switches, one each on the front and back, to the same value.
 - Off-delay time duration of Expansion Unit (OFF-delay mode) synchronize with the OFF-delay time duration set by Off-delay Time Preset Switch of G9SX-NSA222-T03-□.
 - See following illustration for setting position of Off-delay Time Preset Switch. Make sure that the direction of cutting edge of preset switch is correctly pointed to the off-delay time value which must be set.

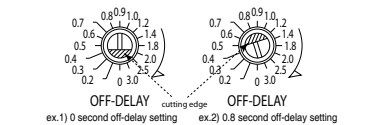

Dimensions

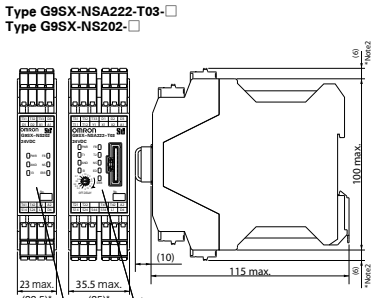

- *Note1 Above outline drawing is for -RC terminal type.
- *Note2 For -RC terminal type only.

† See specification of the device used for the load.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

† The load capacity is limited by the power supply capacity.

OMRON

OMRON Corporation (Manufacturer)
Shiohori Horikawa, Shimogyo-ku, Kyoto, 600-8530 JAPAN

OMRON EUROPE B.V. (Importer in EU)
Weghalen 67-69, NL-232 ID Hoofddorp THE NETHERLANDS
PHONE 31-2356-81300 FAX 31-2356-81388

OMRON SCIENTIFIC TECHNOLOGIES INC.
6550 Dumbarton Circle, Fremont CA 94555-3605 U.S.A
PHONE 1-510-608-3400 FAX 1-510-744-1442

OMRON ASIA PACIFIC PTE. LTD.
438A Alexandra Road # 05-05/08,
Alexandra Technopark Singapore 119967 SINGAPORE
PHONE 65-6-835-3011 FAX 65-6-835-2711

OMRON (CHINA) CO., LTD.
Room 2211, Bank of China Tower, 200 Yincheng Zhong Road,
Pudong New Area, Shanghai, 200120, China
PHONE 86-21-5037-2222 FAX 86-21-5037-2200

Note: Specifications subject to change without notice.

5 Examples of application


Application and timing chart

G9SX-NSA222-T03 (24VDC)

(2-channel emergency stop switch input + non-contact door switch input / Manual reset)

Note1: This example is corresponding to category 4(EN954-1, ISO13849-1)

Note2: For details of wiring around the non-contact door switch, refer to the D40Z's manual.

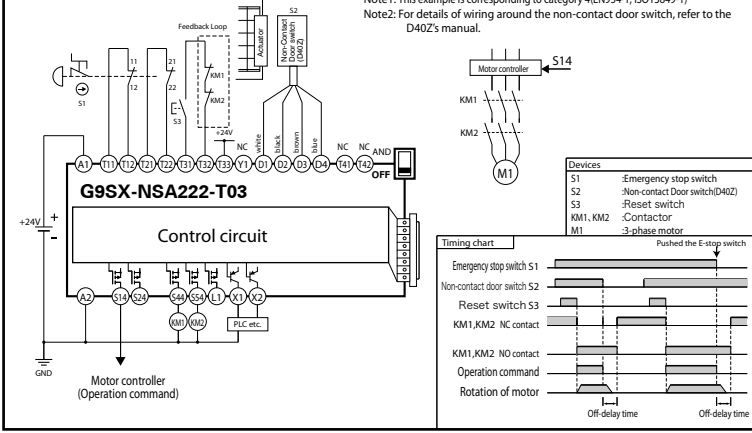


G9SX-NSA222-T03 (24VDC)

(2-channel safety limit switch input + non-contact door switch input / Auto reset)

Note1: This example is corresponding to category 3(EN954-1, ISO13849-1)

Note2: For details of wiring around the non-contact door switch, refer to the D40A's manual.

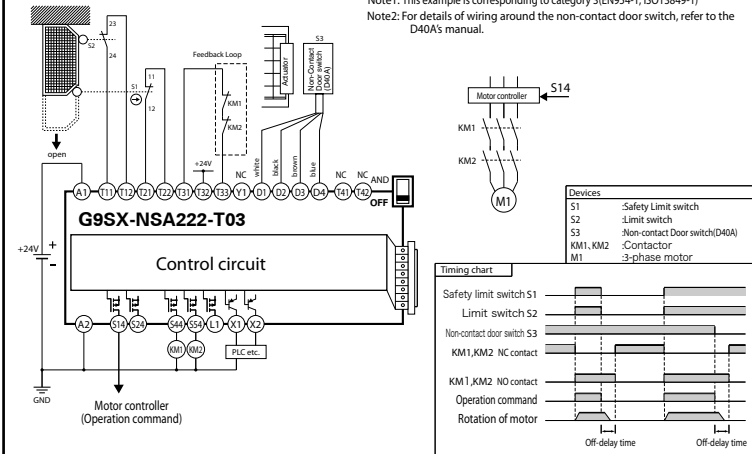


G9SX-BC202(DC24V) (2-channel emergency stop switch input / Manual reset)

+ G9SX-NS202(DC24V) (Non-contact door switch input / Auto reset)

Note1: This example is corresponding to category 3(EN 954-1, ISO13849-1)

Note2: For details of wiring around the non-contact door switch, refer to the D40A's manual.

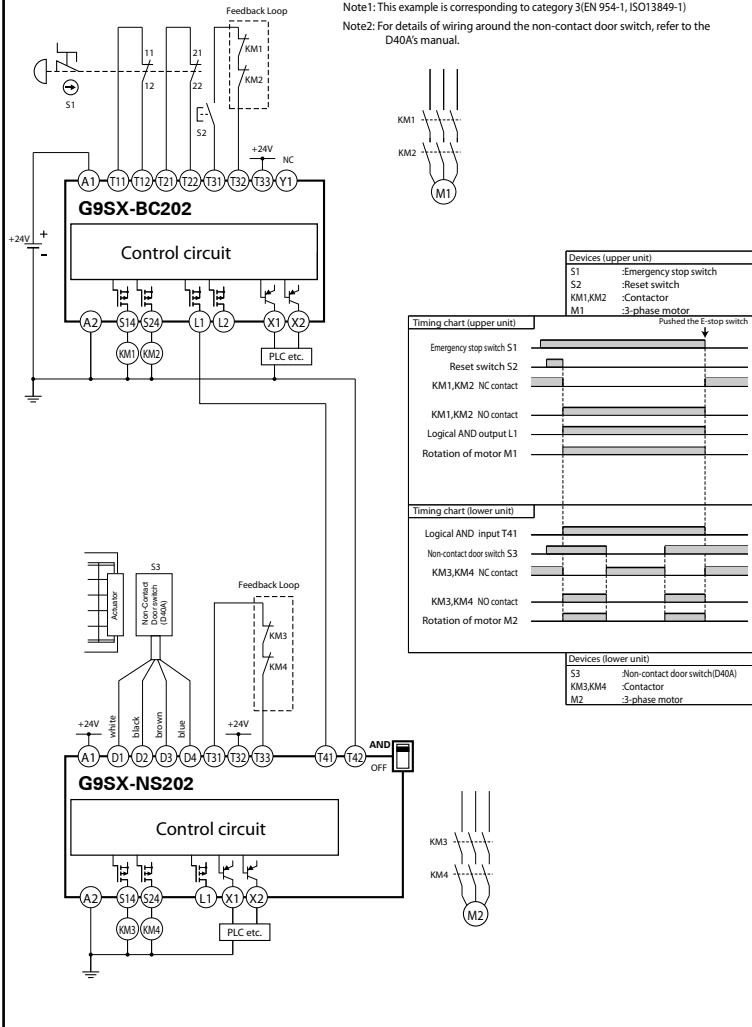

Wiring of inputs and outputs


Signal Name	Terminal Name	Description of operation	Wiring
Power supply input	A1, A2	Connect the power source to the A1 and A2 terminals.	Connect the power supply plus to the A1 terminal. Connect the power supply minus to the A2 terminal.
Safety input 1	T11, T12	To set Safety solid-state outputs in ON state, HIGH state signals must be input to both of Safety input 1 and Safety input 2. Otherwise Safety solid-state outputs cannot be in ON state.	Corresponds to category 2 (See Note 1) Corresponds to category 3 (See Note 1) Corresponds to category 4 (Cross fault detecting mode) (See Note 1)
Safety input 2	T21, T22		
Feedback/Reset input	T31, T32, T33	To set Safety solid-state outputs in ON state, ON state signal must be input to T33. Otherwise Safety solid-state outputs cannot be in ON state.	Auto reset Manual reset
Logical AND connection input	T41, T42	Logical AND connection means that lower unit (Unit B) calculates the logical multiplication (AND) of the safety output information from upper unit (Unit A) and safety input signal "b", which is input to lower unit. In the example of a right picture, the safety output of Unit C is "a" AND "b". Connect L1 or L2 of upper unit to T41 of lower unit, and connect GND of upper unit to T42 of lower unit. To set Safety solid-state outputs of the subsequent Unit in ON state, its Logical AND Connection Preset Switch must be set to AND (enable) and High state signal must be input to T41 of the subsequent unit.	
Cross fault detection input	Y1	Selects a mode of failure detecting (Cross fault detecting) function for safety inputs of G9SX-NSA222-T03-□ corresponding to the connection of Cross fault detection input.	Keep Y1 open when using T11, T21. (Cross fault detecting mode) Connect Y1 to 24VDC when NOT using T11, T21. (Wiring corresponding category 2 or 3)
Safety solid-state output	S14, S24	Turns ON/OFF according to the state of safety inputs, Feedback/Reset inputs, and Logical AND connection inputs. During Off-delay state, safety solid-state outputs are not able to turn ON.	Keep these outputs Open when NOT used.
Off-delayed Safety solid-state output	S44, S54	Off-delayed safety solid-state outputs. Off-delay time is set by off-delay preset switch. When the delay time is set to zero, these outputs can be used as non-delay outputs.	Keep these outputs Open when NOT used.
Logical connection output	L1	Outputs a signal of the same logic as Safety solid-state outputs.	Keep these outputs Open when NOT used.
Non-contact Door Switch input	D1, D2, D3, D4	To set Safety solid-state outputs in ON state, all non-contact door switch must be in ON state. Otherwise Safety solid-state outputs cannot be in ON state.	
Auxiliary Monitor output	X1	Outputs a signal of the same logic as Safety solid-state outputs	Keep these outputs Open when NOT used.
Auxiliary Error output	X2	Outputs during error indicator is lighting up or blinking.	Keep these outputs Open when NOT used.

Note (1) See '6 Category of EN 954-1, ISO13849-1' for conformity to safety category of entire system.

Multiple Connecting of Non-contact Door Switches and G9SX-NS□ Terminal arrangement and LED indicators

For connecting multiple non-contact door switch to G9SX-NS□, refer to the wiring examples on D40A/D40Z's manual.

TYPE G9SX-NSA222-T03-□ TYPE G9SX-NS202-□

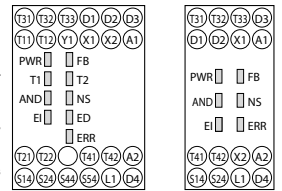

6 Category of EN 954-1, ISO 13849-1

In the condition shown in '5 Examples of Application', G9SX-NS□ can be used for the corresponding categories up to category 3 per EN954-1 and performance level (PL) up to PL d per ISO13849-1 with D40A, or up to category 4 and PL e with D40Z. This does NOT mean that G9SX-NS□ can always be used for required category under all the similar conditions and situations. Conformity to the categories must be assessed as a whole system.
When using G9SX-NS□ for safety categories, be sure to confirm the conformity as a whole system.
1) Connect D40A/D40Z inputs and outputs with terminals D1, D2, D3 and D4.
2) Input the signals to both of the Safety inputs (T11-T12 and T21-T22)
3) Input a signal to the Safety inputs (T11-T12 and T21-T22) through switches with Direct Opening mechanism.
When using limit switches, at least one of them must have Direct Opening Mechanism.
4) Input the signal through a NC contact of the contactor to Feedback/Reset input (T31-T32 for manual reset or T31-T32 for auto reset). (Refer to '5 Examples of Application')

7 Fault Detection

When G9SX-NS detects a fault, ERR indicator and/or other indicators light up or blink to show the information of the fault. Check and take needed measures referring to the following table, and then apply supply voltage to G9SX-NS□.

ERR indicator	Other indicators	Faults	Expected causes of the faults	Checking points and measures to take
Blink	—	Faults by electro-magnetic disturbance or of internal circuits.	1) By excessive electro-magnetic disturbance 2) Failures of the parts of internal circuits	1) Check the disturbance level around G9SX-NS□ and its related system. 2) Replace with a new product.
T11 Blink	—	Faults involved with Safety input 1	1) Failures involving the wiring of Safety input 1 2) Incorrect setting of Cross fault detection mode. 3) Failures of the parts of the circuits of Safety input 1.	1) Check the wiring to T11 and T12. (See Note 1, 2) 2) Check the wiring to Y1. (See Note 1) 3) Replace with a new product.
T2 Blink	—	Faults involved with Safety input 2	1) Failures involving the wiring of Safety input 2 2) Incorrect setting of Cross fault detection mode. 3) Failures of the parts of the circuits of Safety input 2.	1) Check the wiring to T21 and T22. (See Note 1, 2) 2) Check the wiring to Y1. (See Note 1) 3) Replace with a new product.
FB Blink	—	Faults involved with Feedback/Reset input	1) Failures involving the wiring of Feedback/Reset input 2) Failures of the parts of the circuits of Feedback/Reset input	1) Check the wiring to T31, T32, and T33 (See Note 1, 2) 2) Replace with a new product.
Light up	—	Faults of Expansion units	1) Improper feedback signals from Expansion units 2) Abnormal supply voltage to Expansion units 3) Failures of the parts of the circuits of Safety relay contact outputs	1) Check the connecting cable of Expansion units and the connection of the termination socket. 2) Check the supply voltage to Expansion units. Make sure that all Expansion units' PWR indicators are lighting. 3) Replace the Expansion unit with a new one.
EI Blink	—	Faults involved with Safety solid-state outputs or Logical connection outputs	1) Failures involving the wiring of Safety solid-state outputs 2) Failures of the parts of the circuits of Safety solid-state outputs 3) Failures involving the wiring of Logical connection output 4) Failures of the parts of the circuits of Logical connection output 5) Impermissible high ambient temperature	1) Check the wiring to T41 and T42. (See Note 1, 2) 2) Replace with a new product. 3) Check the wiring to L1. (See Note 1, 2) 4) Check the ambient temperature and spacing around G9SX-NS.
ED Blink	—	Faults involved with Off-delayed Safety solid-state outputs	1) Failures involving the wiring of Off-delayed Safety relay contact outputs 2) Incorrect set values of Off-delay time 3) Failures of the parts of the circuits of Off-delayed Safety relay contact outputs 4) Impermissible high ambient temperature	1) Check the wiring to S44 and S54 (See Note 1) 2) Confirm the set values of the two of Off-delay time preset switches. (See Note 3) 3) Replace with a new product. 4) Check the ambient temperature and spacing around G9SX-NSA222-T03-□.
AND Blink	—	Faults involved with Logic AND connection input	1) Failures involving the wiring of Logic AND connection input 2) Incorrect setting for Logic AND connection input 3) Failures of the parts of the circuits of Logical AND connection input	1) Check the wiring to T41 and T42. (See Note 1, 2, 4) (See Note 1, 2) 2) Confirm the set value of the Logical AND connection preset switch. 3) Replace with a new product.
NS Blink	—	Faults involved with Non-contact Door Switch input	1) Failures involving the wiring of Non-contact Door Switch input 2) Failures involving the wiring of multiple Non-contact Door Switches 3) Failures of the parts of the circuits of G9SX-NS□ 4) Failures of the parts of the circuits of D40A/D40Z	1) Check the wiring to D1, D2, D3 and D4 (See Note 1, 2) 2) Check the wiring between D40As 3) Replace with a new G9SX-NS□ 4) Replace with a new D40A/D40Z
(without PWR) indicators Blink	—	Supply voltage outside the rated value	1) Supply voltage outside the rated value	1) Check the supply voltage to Expansion units.

- Note: (1) Check miswiring, short, or open, etc. (See 'Wiring of inputs and outputs')
(2) Make sure that the wiring length is 100 meters or less. (See 'Precautions for Correct Use(8)')
(3) See 'Preset Switches'
(4) See '4 Ratings and Specifications' Note 9

When indicators other than ERR indicator while ERR indicator keeps lit off, check and take needed actions referring to the following table.

ERR indicator	The other indicators	Conditions	Expected causes of the faults	Expected causes of the faults
Light off	T1 Blink or / and T2 Blink	Mismatch between input 1 and input 2.	1) Input status between input 1 and input 2 is different, cause of contact failure or short circuit of safety input device(s) or any wiring fault.	1) Check the wiring from safety input devices to G9SX-NS□. Or check the inputs sequence of safety input devices. After removing the fault, turn both safety inputs to OFF state.